 



MobileOffice D430 Quick Start Guide




17-07-2BB1090-C

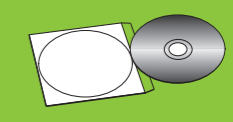

* Calibration sheet

* Keep the Calibration Sheet in case you need to calibrate the scanner in the future.


1 Connect and Install Driver

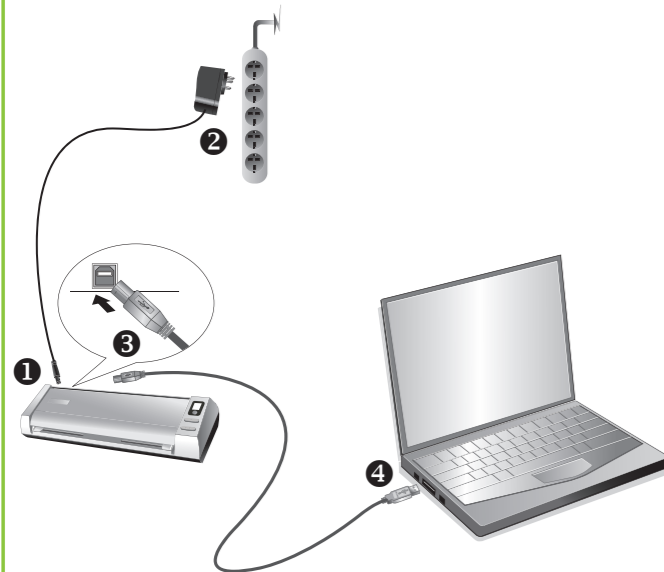



Insert the product CD or visit Plustek website to download and install scanner driver.

www.plustek.com/d430

Check the system tray to see if the installation is successful when the scanner is connected.


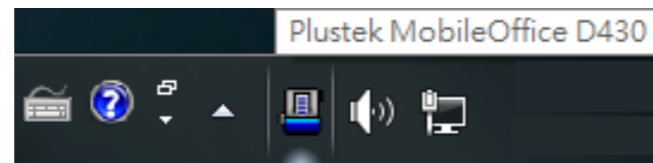


2 Scan Document & Plastic Cards

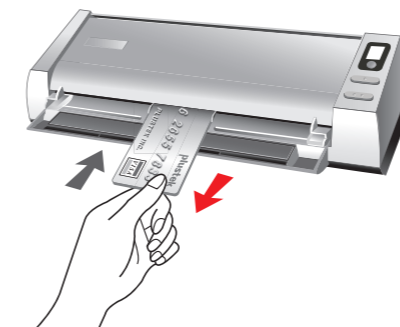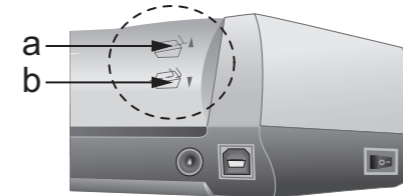


a. Up: horizontal eject


b. Down: vertical eject

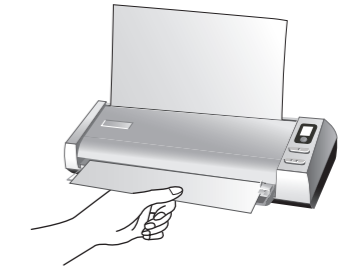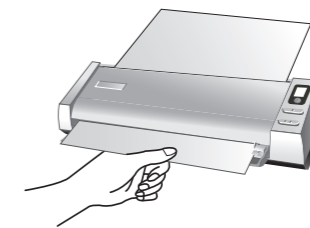


* Remember to select **Card** as **Page Size** to scan and eject the card from the front side of the scanner.

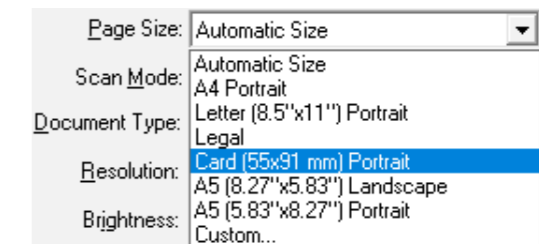


PDF Utility

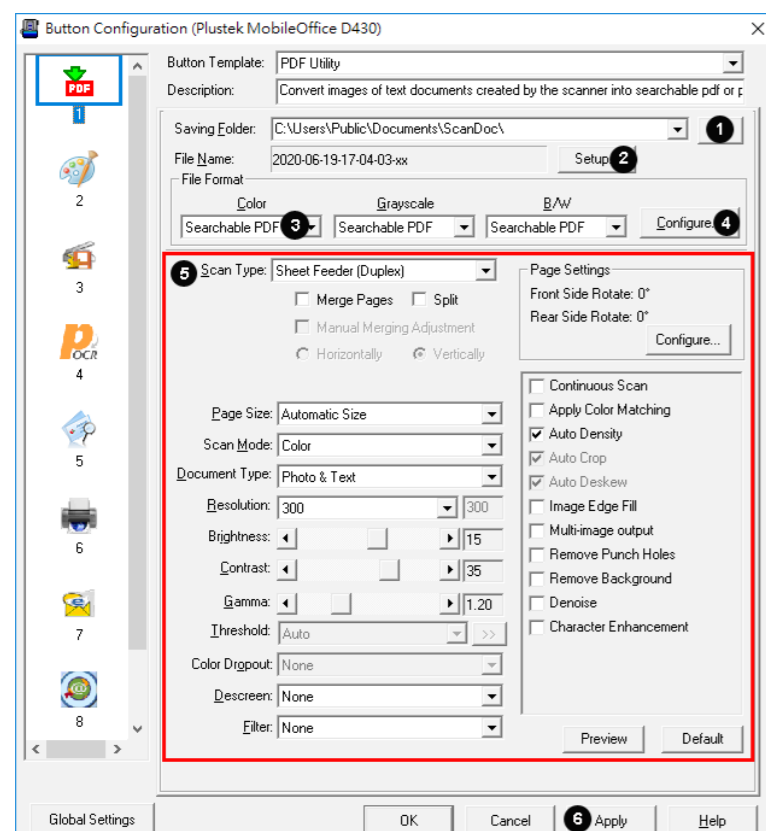

 1. Click button to select saving folder.
2. Click **Setup** button to select the filename format.
3. Select desired file format. This selection should match with the selection of **Scan Mode**.




4. Click **Configure** button to configure advanced settings, you may select to generate all pages in one file. Click **Setting** button to select the desired OCR language.

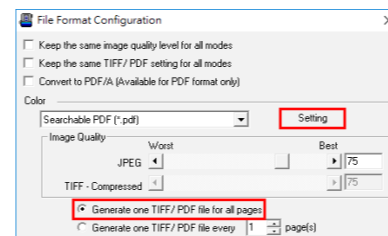


5. Check the scan settings and make any required changes.
6. After all settings are done, click **Apply** button.
7. Double-click on PDF icon to scan. Or press up/down function button to select corresponding number then press the **Scan** button on the scanner panel.

BCR Utility

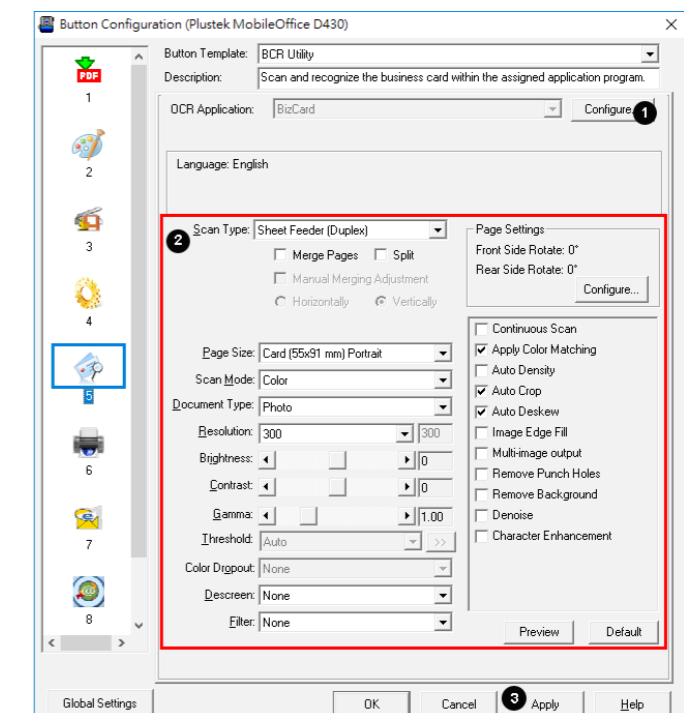

1. Select the desired BCR language.
2. Check the scan settings and make any required changes.
3. After all settings are done, click **Apply** button.

File Utility

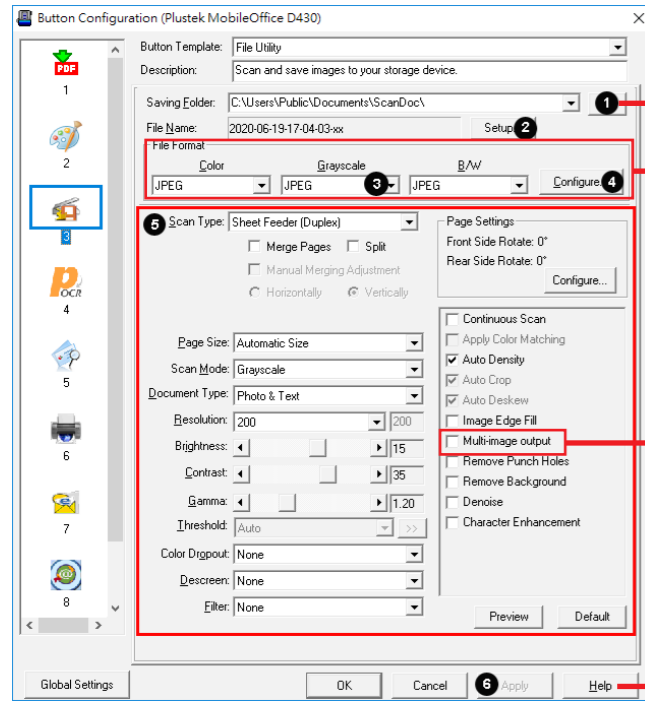


Select desired saving destination.

Select desired file format.

Select to output up to three multiple images by one scan.

Click to access online help for more detailed information.

OCR Utility

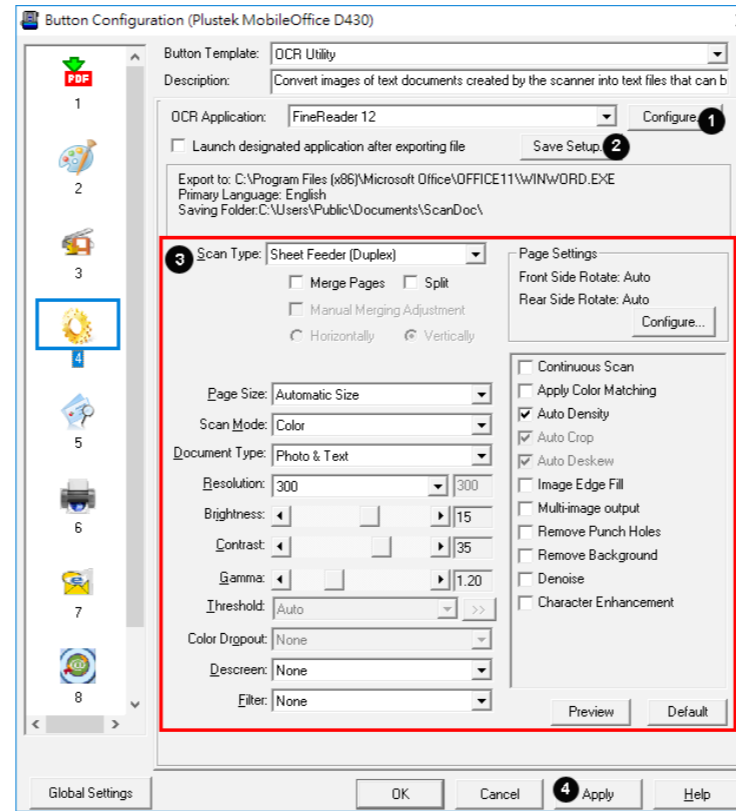


Select the desired file format.

Select the desired OCR language.

More Utilities

All buttons are customizable, you may select the desired utilities from the **Button Template** dropdown list. For more information, please refer to software tutorial videos.

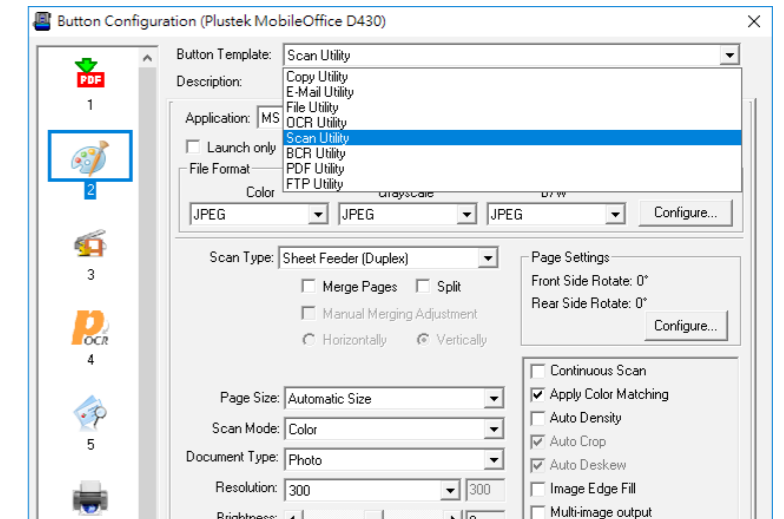


software tutorial videos

Troubleshooting


FAQ 1: The plastic card scan is not successful.

Solutions:

Please remember to select **Card** as **Page Size**.

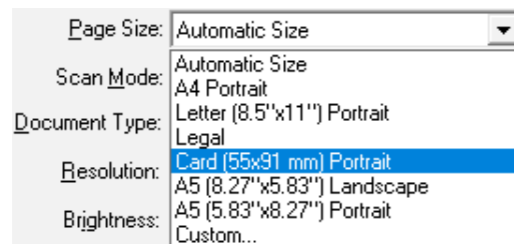


FAQ 2: The scanned images are strange.

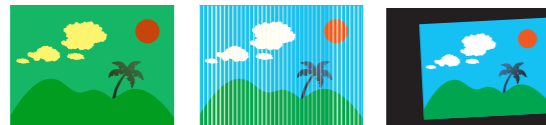


Solutions:


• Reset the scan settings to default.

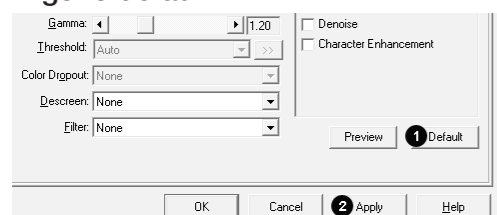

• Clean your scanner regularly to ensure the best scanning performance.

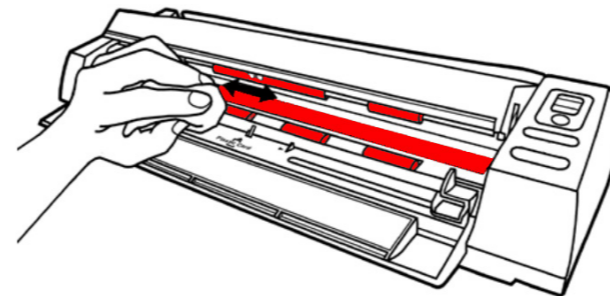

• Calibrate the scanner if colors of the scanned image vary a lot. Find **Calibration Wizard** as follows:

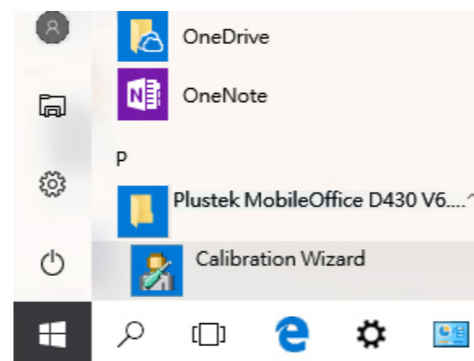

Technical Support

USA/CA

714-670-7713

9am to 5:30pm Pacific Time, Monday through Friday
infoUSA@PlustekUS.com

United Kingdom

0125-674-1513

9am-4pm, Monday through Friday
support@agxuk.com