



Maintenance and Service Guide

SUMMARY

This guide provides information about spare parts, removal and replacement of parts, security, backing up, and more.

Legal information

© Copyright 2022 HP Development Company, L.P.

AMD is a trademark of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC. Intel, Core, and vPro are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. USB Type-C and USB-C are registered trademarks of USB Implementers Forum. DisplayPort™, the DisplayPort™ logo, and VESA® are trademarks or registered trademarks owned by the Video Electronics Standards Association (VESA) in the United States and other countries. Wi-Fi is a registered trademark of Wi-Fi Alliance.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: June 2022

Document Part Number: M89544-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees may apply and additional requirements may apply over time for updates. See <http://www.windows.com>. **If your product ships with Windows in S Mode:** Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows may not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance may vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at Windows.com/SmodeFAQ.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Manuals**.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Not all features are available in all editions of Windows. This computer may require upgraded and/or separately purchased hardware, drivers and/or software to take full advantage of Windows functionality. Go to <http://www.microsoft.com> for details.

Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.


-
-  **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by applicable safety standards.
-

Table of contents

| | |
|---|-----------|
| 1 Computer features | 1 |
| HP Presence configuration features..... | 1 |
| Mini conferencing PC front panel components | 1 |
| Mini conferencing PC rear panel components..... | 2 |
| Serial number location | 3 |
| Control Plus Center components..... | 3 |
| Control Center components..... | 4 |
| Hub components..... | 5 |
| Satellite microphone component | 6 |
| Camera components..... | 7 |
| Video bar components..... | 8 |
| Cable management..... | 8 |
| LED status indications | 9 |
| 2 Setup | 10 |
| Removing the Control Center bottom panel | 10 |
| Removing the Control Plus Center bottom panel | 10 |
| Mounting the HP Presence mini conferencing PC | 11 |
| Mounting the HP Presence mini conferencing PC to a large format display | 11 |
| Mounting the mini conferencing PC to a conference room table..... | 14 |
| Cable routing configurations | 17 |
| Cable matrix for HP Presence mini conferencing PC, Control Center, and notebook PC | 17 |
| Cable matrix for HP Presence mini conferencing PC, Control Center, and camera | 17 |
| Cable matrix for HP Presence mini conferencing PC, Control Center, and video bar | 18 |
| Cable matrix for HP Presence mini conferencing PC, hub, and Control Center | 18 |
| Cable matrix for HP Presence mini conferencing PC and Control Plus Center..... | 18 |
| Cable matrix for HP Presence mini conferencing PC, Control Plus Center, and camera | 18 |
| Cable matrix for HP Presence mini conferencing PC, Control Plus Center, and video bar | 19 |
| Cable matrix for HP Presence mini conferencing PC, Control Plus Center, Control Center, satellite microphones, and video bar | 19 |
| HP Presence Smart Set Up app..... | 20 |
| Using an optional security lock | 22 |
| Security cable lock..... | 22 |
| Padlock | 22 |
| 3 Illustrated parts catalog | 23 |
| Mini Conferencing PC major components | 23 |
| HP Presence components..... | 25 |

| | |
|--|-----------|
| Miscellaneous parts | 26 |
| 4 Routine care, drive guidelines, and disassembly preparation | 27 |
| Electrostatic discharge information | 27 |
| Generating static electricity | 27 |
| Preventing electrostatic damage to equipment | 28 |
| Personal grounding methods and equipment | 28 |
| Grounding the work area | 29 |
| Recommended materials and equipment | 29 |
| Operating guidelines | 30 |
| Routine care | 30 |
| General cleaning safety precautions | 30 |
| Cleaning the computer case | 31 |
| Cleaning the keyboard | 31 |
| Cleaning the monitor | 32 |
| Cleaning the mouse | 32 |
| Service considerations | 32 |
| Tools and software requirements | 32 |
| Screws | 33 |
| Cables and connectors | 33 |
| Hard drives | 33 |
| Lithium coin cell battery | 34 |
| SATA hard drives | 34 |
| Cable management | 35 |
| 5 Removal and replacement procedures | 36 |
| Preparation for disassembly | 36 |
| Access panel | 36 |
| Front bezel | 37 |
| Memory modules (SODIMMs) | 38 |
| Fan | 40 |
| Solid-state drive | 41 |
| WLAN module | 42 |
| Battery | 44 |
| Speaker | 45 |
| Ambient (thermal) sensor | 46 |
| Flex I/O connector board | 47 |
| Heat sink | 47 |
| Processor | 48 |
| System board | 49 |
| System board callouts | 51 |
| Wireless antennas and cables | 51 |

| | |
|--|-----------|
| 6 Troubleshooting without diagnostics..... | 53 |
| Before you call for technical support | 53 |
| Helpful hints | 54 |
| Solving general problems..... | 55 |
| Cannot access the Computer Setup (F10) Utility when booting the computer | 55 |
| Computer appears locked up and will not turn off when the power button is pressed | 55 |
| Computer will not respond to keyboard or mouse | 55 |
| Computer date and time display is incorrect | 56 |
| There is no sound or sound volume is too low | 56 |
| Cannot remove computer cover or access panel | 56 |
| Poor performance..... | 56 |
| Computer turned off automatically and the power light blinks red four times and then white two times..... | 58 |
| System does not turn on and the lights on the front of the computer are not blinking..... | 58 |
| Solving power problems..... | 58 |
| Power supply shuts down intermittently..... | 58 |
| Computer turned off automatically, power light blinks red two times followed by a two-second pause, and the computer beeps two times (beeps stop after fifth iteration but lights continue blinking) | 59 |
| Power light blinks red four times followed by a two-second pause and the computer beeps four times (beeps stop after fifth iteration but lights continue blinking)..... | 59 |
| Solving hard drive problems..... | 59 |
| Hard drive error occurs | 59 |
| Disk drive transaction problem | 59 |
| Drive not found (identified) | 59 |
| Nonsystem disk/NTLDR missing message..... | 60 |
| Computer will not boot from hard drive..... | 60 |
| Computer seems to be locked up | 61 |
| Solving audio problems | 61 |
| Sound cuts in and out | 61 |
| Sound does not come out of the speaker or headphones | 61 |
| Computer appears to be locked up while recording audio..... | 62 |
| Line-in jack is not functioning properly | 62 |
| Solving printer problems | 62 |
| Printer will not print | 62 |
| Printer will not turn on | 63 |
| Printer prints garbled information..... | 63 |
| Printer will not print | 63 |
| Solving keyboard and mouse problems | 63 |
| Keyboard commands and typing are not recognized by the computer..... | 63 |
| Mouse does not respond to movement or is too slow | 64 |
| Solving hardware installation problems | 64 |
| A new device is not recognized as part of the system | 65 |
| Computer will not start..... | 66 |
| Power light blinks red three times and then white two times..... | 66 |
| Solving network problems | 66 |
| Network driver does not detect network controller | 66 |
| Network status link light never blinks | 67 |

| | |
|---|------------|
| Diagnostics reports a failure | 67 |
| Diagnostics passes, but the computer does not communicate with the network | 67 |
| Network controller stopped working when an expansion board was added to the computer | 68 |
| Network controller stops working without apparent cause | 68 |
| Cannot connect to network server when attempting remote system installation | 68 |
| System setup utility reports unprogrammed EEPROM | 68 |
| Solving memory problems | 68 |
| System will not boot or does not function properly after installing additional memory modules | 69 |
| Out of memory error | 69 |
| Memory count during POST is wrong | 69 |
| Insufficient memory error during operation | 69 |
| Power light blinks red five times followed by a two-second pause and the computer beeps five times (beeps stop after fifth iteration but lights continue blinking) | 70 |
| Solving USB flash drive problems | 70 |
| USB flash drive is not seen as a drive letter in Windows | 70 |
| USB flash drive not found (identified) | 70 |
| System will not boot from USB flash drive | 70 |
| The computer boots to DOS after making a bootable flash drive | 71 |
| Solving internet access problems | 71 |
| Unable to connect to the internet | 71 |
| Cannot automatically launch internet programs | 72 |
| Solving software problems | 72 |
| Computer will not start up and the HP logo does not appear | 72 |
| “Illegal Operation has Occurred” error message is displayed | 72 |
| 7 Computer Setup (F10) Utility | 73 |
| Using Computer Setup (F10) Utilities | 73 |
| Computer Setup Main | 74 |
| Computer Setup Security | 78 |
| Computer Setup Advanced | 82 |
| 8 POST error messages | 91 |
| POST numeric codes and text messages | 91 |
| Interpreting POST diagnostic front panel lights and audible codes | 97 |
| 9 Password security and resetting CMOS | 100 |
| Changing a setup or power-on password | 100 |
| Deleting a setup or power-on password | 100 |
| 10 Backing up, restoring, and recovering | 102 |
| Backing up information and creating recovery media | 102 |
| Using Windows tools for backing up | 102 |
| Using the HP Cloud Recovery Download Tool to create recovery media (select products only) | 102 |
| Restoring and recovering your system | 103 |
| Creating a system restore | 103 |
| Restoring and recovery methods | 103 |

| | |
|--|------------|
| Recovering using HP Recovery media | 103 |
| Changing the computer boot order | 104 |
| 11 Using HP PC Hardware Diagnostics | 105 |
| Using HP PC Hardware Diagnostics Windows (select products only) | 105 |
| Using an HP PC Hardware Diagnostics Windows hardware failure ID code | 105 |
| Accessing HP PC Hardware Diagnostics Windows..... | 105 |
| Accessing HP PC Hardware Diagnostics Windows from HP Help and Support (select products only) | 105 |
| Accessing HP PC Hardware Diagnostics Windows from Support Assistant..... | 106 |
| Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only) | 106 |
| Downloading HP PC Hardware Diagnostics Windows | 106 |
| Downloading the latest HP PC Hardware Diagnostics Windows version from HP | 106 |
| Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store..... | 107 |
| Downloading HP Hardware Diagnostics Windows by product name or number (select products only) | 107 |
| Installing HP PC Hardware Diagnostics Windows | 107 |
| Using HP PC Hardware Diagnostics UEFI | 107 |
| Using an HP PC Hardware Diagnostics UEFI hardware failure ID code | 107 |
| Starting HP PC Hardware Diagnostics UEFI..... | 108 |
| Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive | 108 |
| Downloading the latest HP PC Hardware Diagnostics UEFI version | 108 |
| Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only) | 109 |
| Using Remote HP PC Hardware Diagnostics UEFI settings (select products only) | 109 |
| Downloading Remote HP PC Hardware Diagnostics UEFI | 109 |
| Downloading the latest Remote HP PC Hardware Diagnostics UEFI version | 109 |
| Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number | 109 |
| Customizing Remote HP PC Hardware Diagnostics UEFI settings | 110 |
| 12 Statement of memory volatility | 111 |
| Current BIOS steps | 111 |
| Nonvolatile memory usage | 113 |
| Questions and answers | 115 |
| Using HP Sure Start (select products only) | 117 |
| 13 Power cord set requirements | 118 |
| General requirements..... | 118 |
| Japanese power cord requirements | 119 |
| Country-specific requirements..... | 119 |
| 14 Specifications..... | 120 |
| Specifications..... | 120 |
| Input power | 121 |
| Operating environment | 121 |
| Index | 123 |

1 Computer features

This chapter provides you with an overview of your computer's features.

HP Presence configuration features

To identify a typical computer configuration, read this section. Features vary depending on the model. For support assistance and to learn more about the hardware and software installed on your computer model, run the HP Support Assistant utility.



Mini conferencing PC front panel components

To identify the front panel components, use this illustration and table.

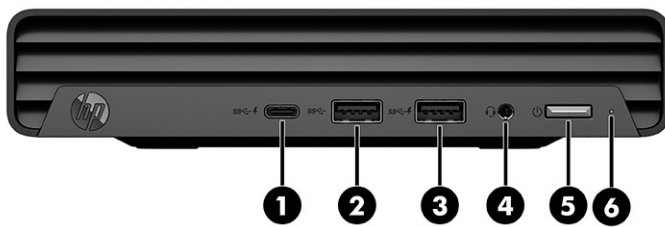


Table 1-1 Front panel components







| Component | Description | Component | Description |
|---|--|---|------------------------|
| 1  | USB Type-C® SuperSpeed 10 Gbps port with HP Sleep and Charge | 4  | 3.5 mm jack (not used) |
| 2  | USB SuperSpeed 10 Gbps port | 5  | Power button |
| 3  | USB SuperSpeed 5 Gbps port with HP Sleep and Charge | 6  | Drive light |

Table 1-1 Front panel components (continued)

| Component | Description | Component | Description |
|--|-------------|-----------|-------------|
| NOTE: The combo jack supports headphones, line output devices, microphones, line input devices, or CTIA-style headsets. | | | |

Mini conferencing PC rear panel components

To identify the rear panel components, use this illustration and table.

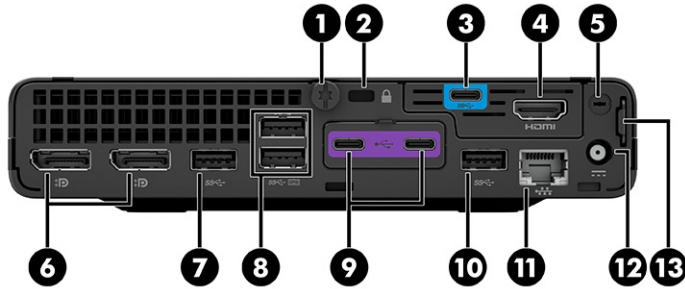


Table 1-2 Rear panel components










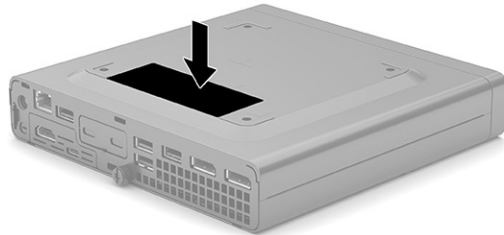
| Component | Description | Component | Description |
|-----------|--|-----------|---|
| 1 | Thumbscrew | 8 | USB SuperSpeed ports (2)*  |
| 2 | Security cable slot | 9 | Dual HP Presence control ports  |
| 3 | Primary camera or video bar connector or USB Type-C Super Speed 5 Gbps port  | 10 | USB SuperSpeed 10 Gbps port  |
| 4 | HDMI 2.0a connection for high-resolution sharing/guest mode through multiport adapter  | 11 | RJ-45 (network) jack  |
| 5 | External antenna | 12 | Power connector  |
| 6 | DisplayPort™ connectors (2)  | 13 | Padlock loop |
| 7 | USB SuperSpeed 5 Gbps port  | | |

Table 1-2 Rear panel components (continued)

| Component | Description | Component | Description |
|--|-------------|-----------|-------------|
| *Support wake from Hibernation state or when turned off with a keyboard or mouse connected | | | |

Serial number location

Each mini conferencing PC has a unique serial number and a product ID number that are located on the exterior of the computer. Keep these numbers available when contacting customer service for assistance.



Control Plus Center components

To identify the Control Plus Center components, use this illustration and table.

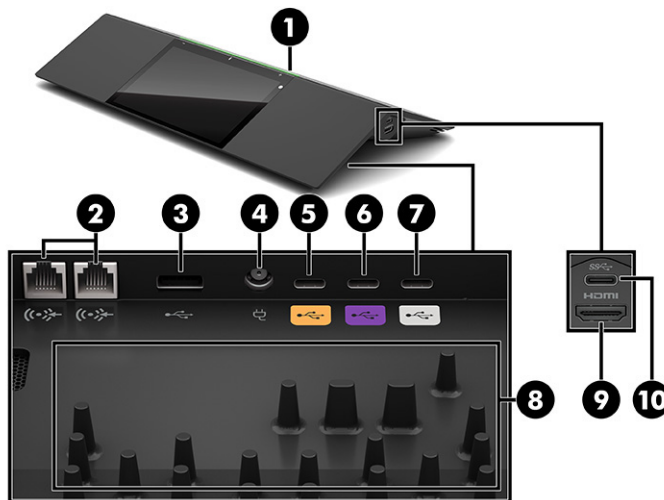


Table 1-3 Control Plus Center components









| Component | Description | Component | Description |
|-----------|---|-----------|---|
| 1 | LED room status light | 6 |  HP Presence Control Center daisy chain port |
| 2 |  RJ-11 jacks for connection to satellite microphones (2) | 7 |  HP Presence multiport adapter port for guest mode |
| 3 |  USB SuperSpeed 5 Gbps port | 8 | Cable management pins |

Table 1-3 Control Plus Center components (continued)

| Component | Description | Component | Description |
|-----------|--|-----------|--|
| 4 |  Power connector | 9 |  Side input HDMI port |
| 5 |  HP Presence control port | 10 |  Side input USB Type-C port |

 Control Center components

To identify the Control Center components, use this illustration and table.

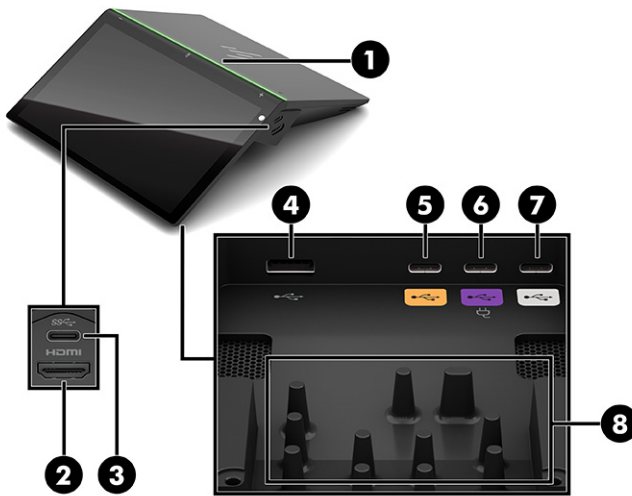


Table 1-4 Control Center components







| Component | Description | Component | Description |
|-----------|--|-----------|---|
| 1 | LED room status light | 5 |  HP Presence control port |
| 2 |  Side input HDMI port | 6 |  Device power port |
| 3 |  Side input USB Type-C port | 7 |  HP Presence multiport adapter port for guest mode |

Table 1-4 Control Center components (continued)

| Component | Description | Component | Description |
|-----------|---|-----------|-----------------------|
| 4 | USB SuperSpeed 5 Gbps port  | 8 | Cable management pins |

Hub components

To identify the hub components, use this illustration and table.

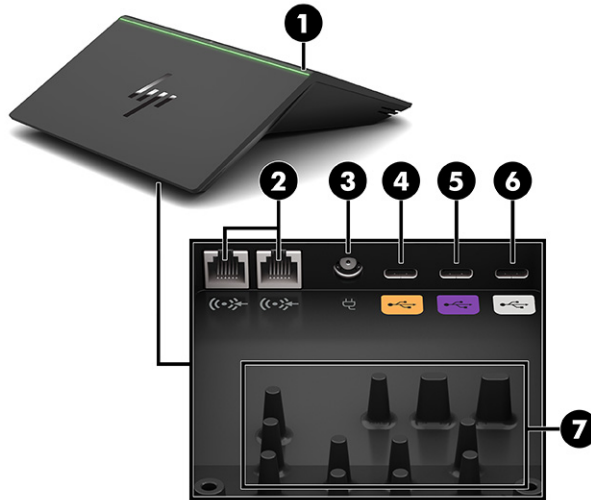


Table 1-5 Hub components






| Component | Description | Component | Description |
|-----------|--|-----------|--|
| 1 | LED room status light | 5 | HP Presence Control Center daisy chain port  |
| 2 | RJ-11 jacks for connection to satellite microphones (2)  | 6 | HP Presence multiport adapter port for guest mode  |
| 3 | Power connector  | 7 | Cable management pins |

Table 1-5 Hub components (continued)

| Component | Description | Component | Description |
|-----------|--|-----------|-------------|
| 4 |  HP Presence control port | | |

 Satellite microphone component

To identify the satellite microphone components, use this illustration and table. You can use the microphone with the premium control module and the hub.

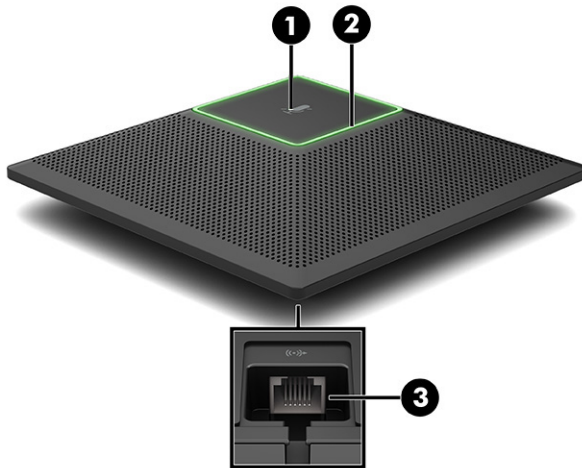


Table 1-6 Identifying the satellite microphone component

| Satellite microphone component | | | |
|--------------------------------|---------------------------|---|------------|
| 1 | Touch control mute switch | 3 | RJ-11 jack |
| 2 | LED status light* | | |

Table 1-6 Identifying the satellite microphone component (continued)

| |
|---------------------------------------|
| Satellite microphone component |
| *Blinks green when connected |

Camera components

To identify the camera components, use this illustration and table.



Table 1-7 Identifying the camera components


| Components | Description | Components | Description |
|-------------------|--------------------|-------------------|--|
| 1 | Camera | 3 |  USB Type-C connector |

Table 1-7 Identifying the camera components (continued)

| Components | Description | Components | Description |
|------------|--------------|------------|-------------|
| 2 | Status light | | |

 Video bar components

To identify the video bar components, use this illustration and table.

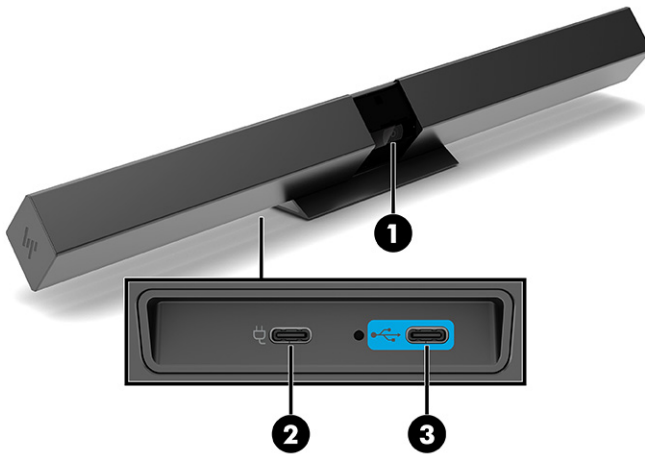





Table 1-8 Video bar components

| Components | Description | Components | Description |
|------------|---|------------|---|
| 1 | Camera | 3 |  USB Type-C port |
| 2 |  USB Type-C power connector port | | |

Cable management

The premium control module, control module, and hub include a cable management feature. When connecting cables to these components, be sure to route the cables with bends through the cable routing pins.

The following illustration provides an example of proper cable routing.

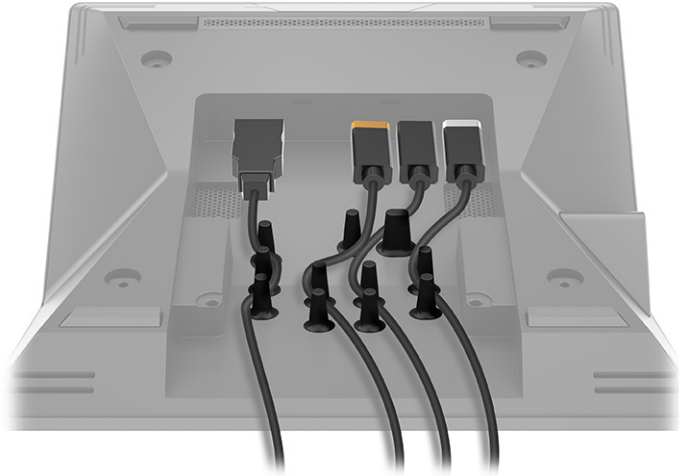

LED status indications

Use the following table to determine the status that LED lights identify on the control modules and hub.

Table 1-9 LED indications

| Device state | LED ring |
|--|--|
| Connected to host | Off |
| Disconnected from host or not connected to valid power source* | Blinks red |
| Ringing | Blinks green |
| Active call | Solid green |
| Call on mute | Solid red |
| Call on hold | Blinks green slowly |
| Call on hold and mute | Blinks red slowly |
| Clean screen** | Fading blue |
| Volume | White <ul style="list-style-type: none"> • Moves from center outward for volume up • Moves toward center for volume down |

*Check that the USB Type-C cable has a purple-to-orange connection. Check the AC adapter connection.

**The device is in clean mode and the touch screen and haptic controls are disabled.

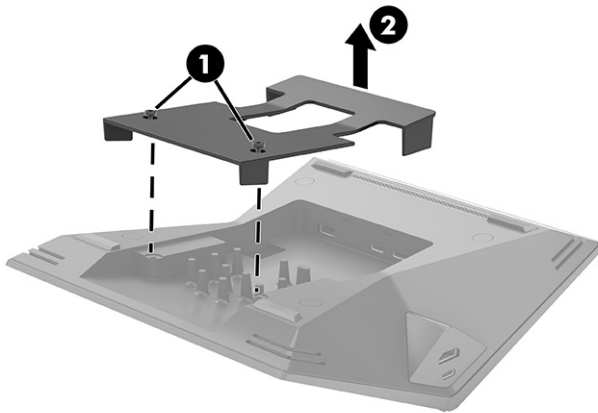
2 Setup

The information in this chapter helps you set up the computer.

Removing the Control Center bottom panel

A bottom panel covers the Control Center ports. Use this procedure to remove the panel.

1. Position the Control Center upside down.
2. Use the included Torx T10 wrench to loosen the two captive Torx screws (1) from the bottom panel.
3. Remove the panel (2).




4. To install the panel, position the panel on the bottom of the Control Center and tighten the screws.

Removing the Control Plus Center bottom panel

A bottom panel covers the Control Plus Center ports. Use this procedure to remove the panel.

1. Position the Control Plus Center upside down.
2. Use the included Torx T10 wrench to loosen the two captive Torx screws (1) from the bottom panel.

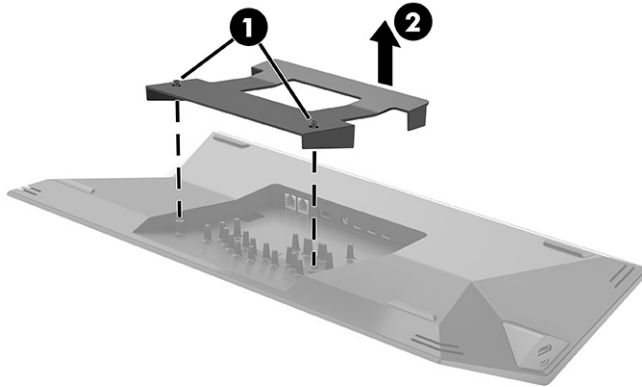3. Remove the panel (2).




4. To install the panel, position the panel on the bottom of the Control Plus Center and tighten the screws.

Mounting the HP Presence mini conferencing PC

Use these procedures to mount the HP Presence mini conferencing PC in different configurations.

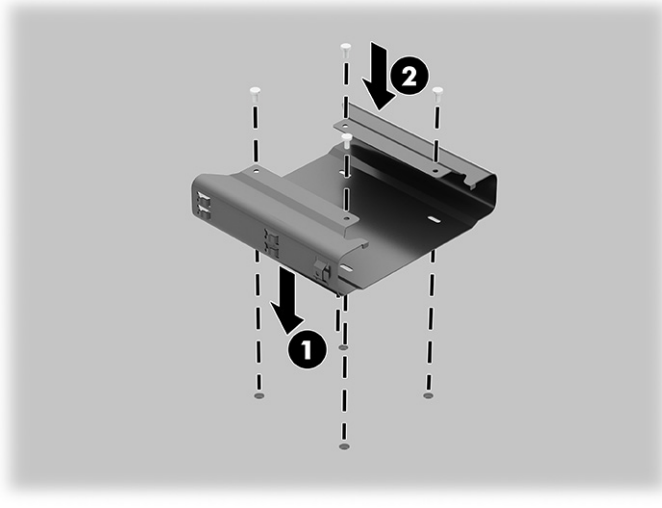
 **NOTE:** This apparatus is intended to be supported by a UL or CSA Listed wall-mount bracket.

 **CAUTION:** This computer supports the VESA® industry standard 100 mm mounting holes. To attach a third-party mounting solution to the computer, use the screws that are supplied with the solution. Be sure to verify that the manufacturer's mounting solution is compliant with the VESA standard and is rated to support the weight of the computer. For best performance, use the power cord and other cables provided with the computer.


Mounting the HP Presence mini conferencing PC to a large format display

You can mount the HP Presence mini conferencing PC and power supply to the back of a large-format display.


1. Place the computer mounting sleeve on the back of a large format display (1), and then secure with four screws (2).



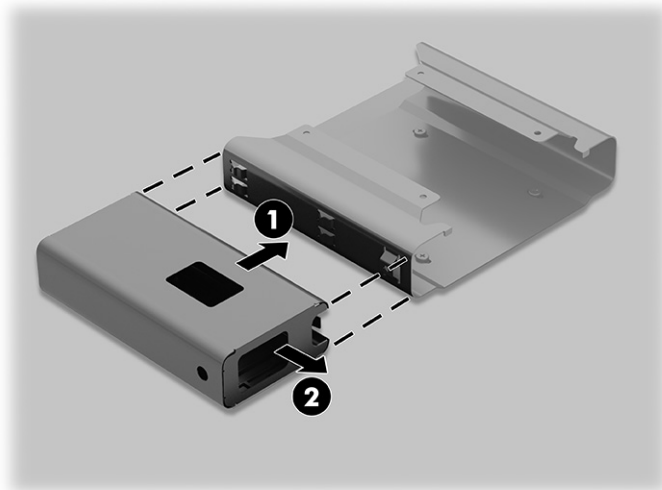
2. Insert the power supply bracket into the side of the display sleeve (1), and then slide the power supply bracket to lock it in place (2).



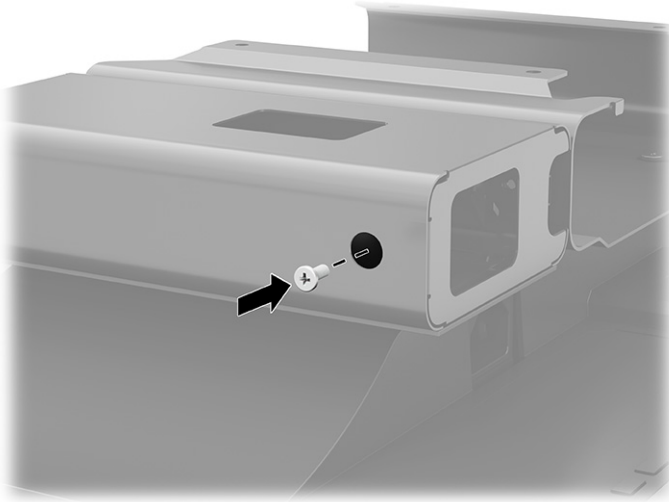
3. Install the screw into the power supply bracket.



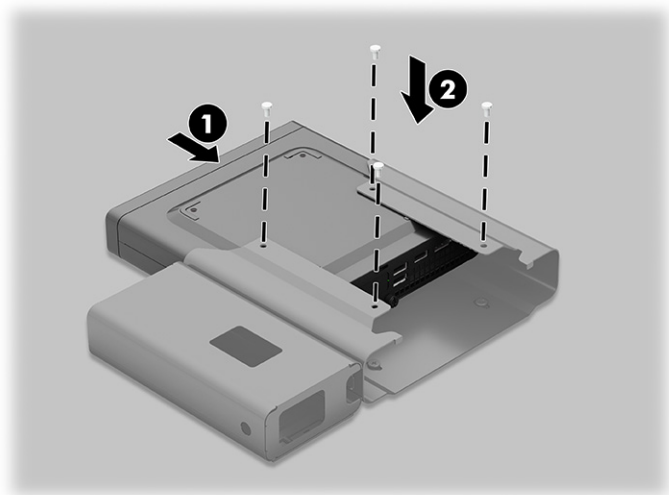
4. Insert the HP Presence mini conferencing PC into the display mounting sleeve (1), and then install the four screws (2).



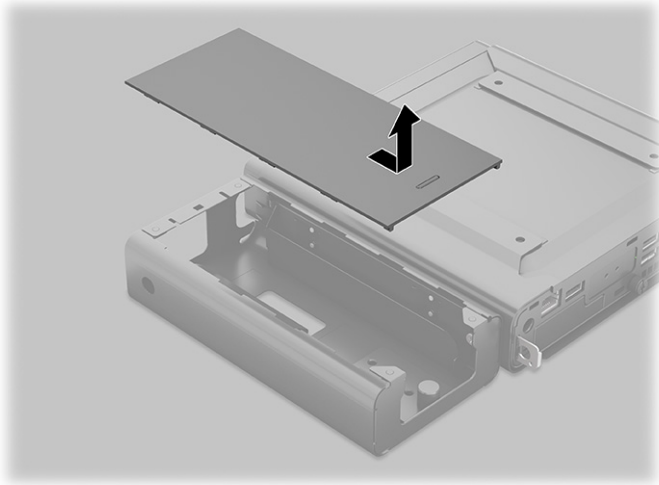5. Remove the cover from the power supply bracket.



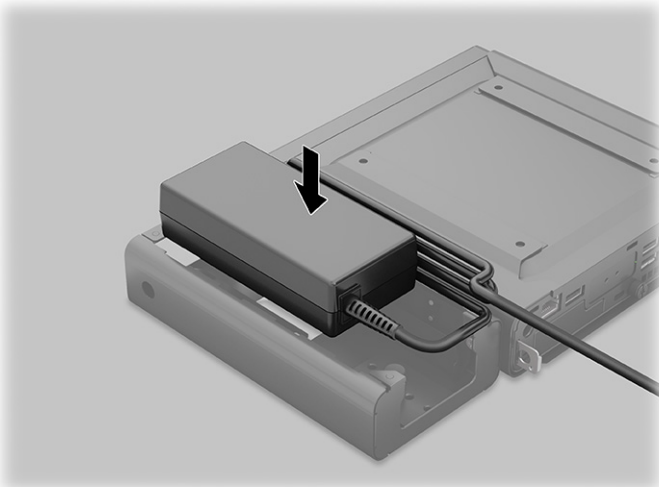6. Insert the power supply into the power supply bracket.




Mounting the mini conferencing PC to a conference room table

You can mount the mini conferencing PC under a conference room table.


1. Attach the sleeve to the underside of a conference room table.



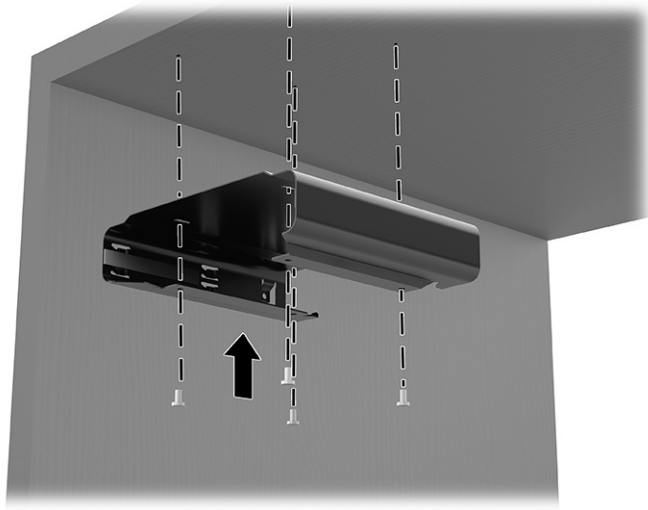
NOTE: You can also install the mounting sleeve on a wall with a quick release.



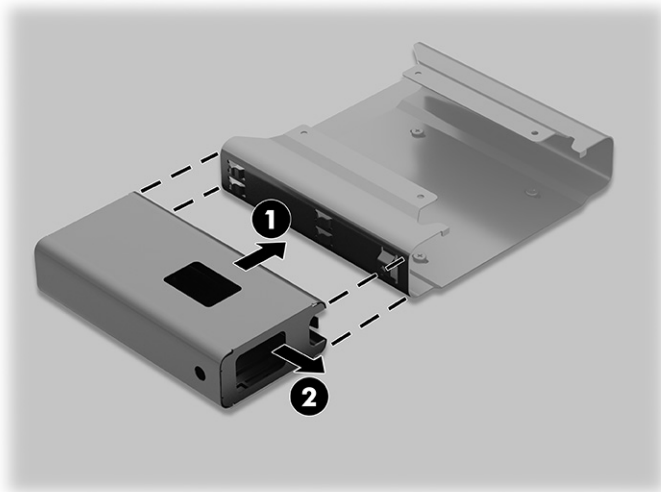
2. Insert the power supply bracket into the side of the display sleeve **(1)**, and then slide the power supply bracket to lock it in place **(2)**.



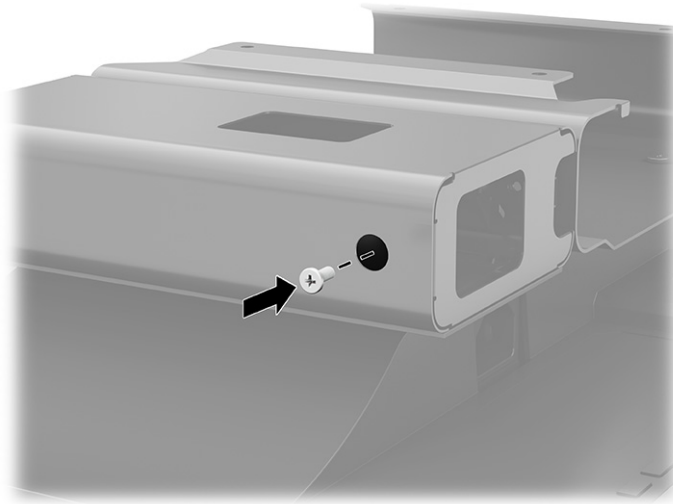
3. Install the screw into the power supply bracket.



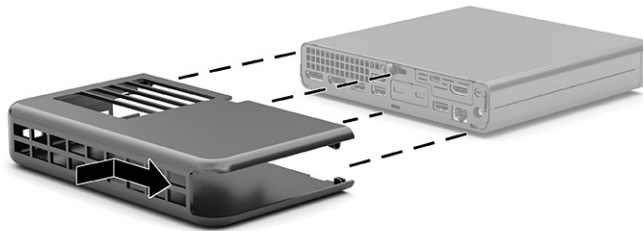4. Install the port cover onto the back of the Mini Conferencing PC by inserting the cover into the slots in the back of the PC, and then sliding the cover into place.



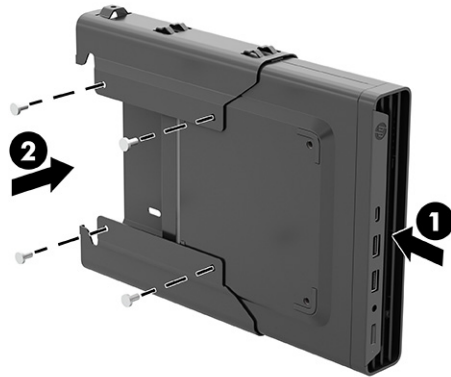- Slide the computer all the way into the sleeve (1), until it is stopped by the tabs on the rear of the sleeve. Use screws to attach the computer to the sleeve (2).




Cable routing configurations

Use these images to determine proper cable routing for your conferencing configuration.

Cable matrix for HP Presence mini conferencing PC, Control Center, and notebook PC

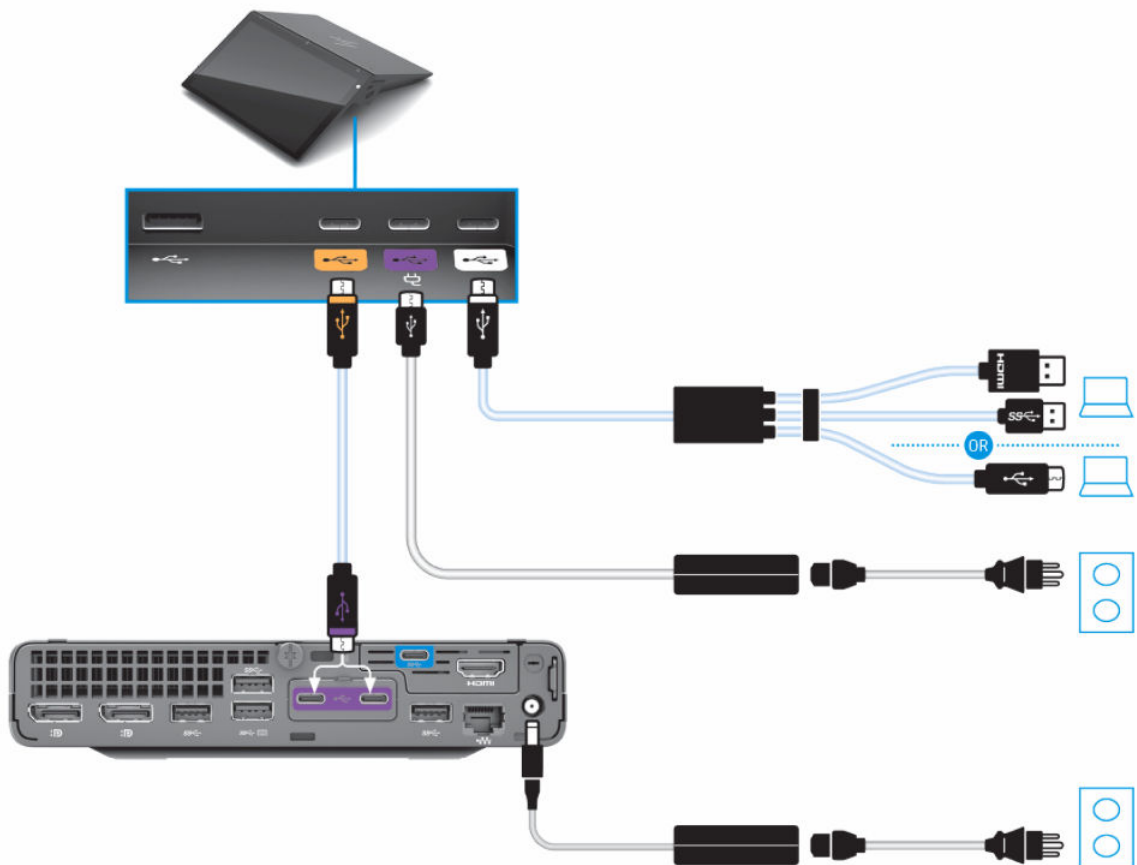
Use this illustration to determine proper cabling between the HP Presence mini conferencing PC, Control Center, and notebook PC.



Cable routing configurations


Cable matrix for HP Presence mini conferencing PC, Control Center, and camera

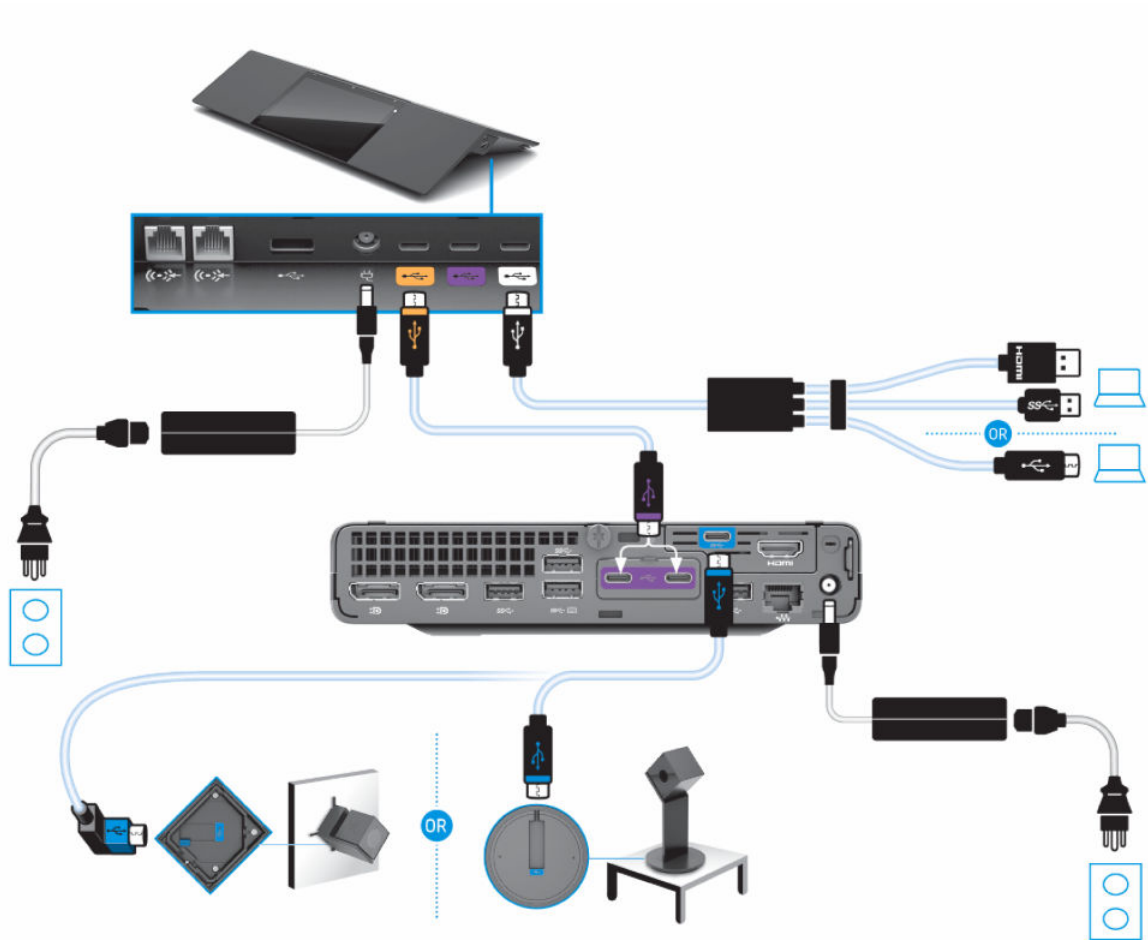camera.



Cable matrix for HP Presence mini conferencing PC, Control Plus Center, and video bar

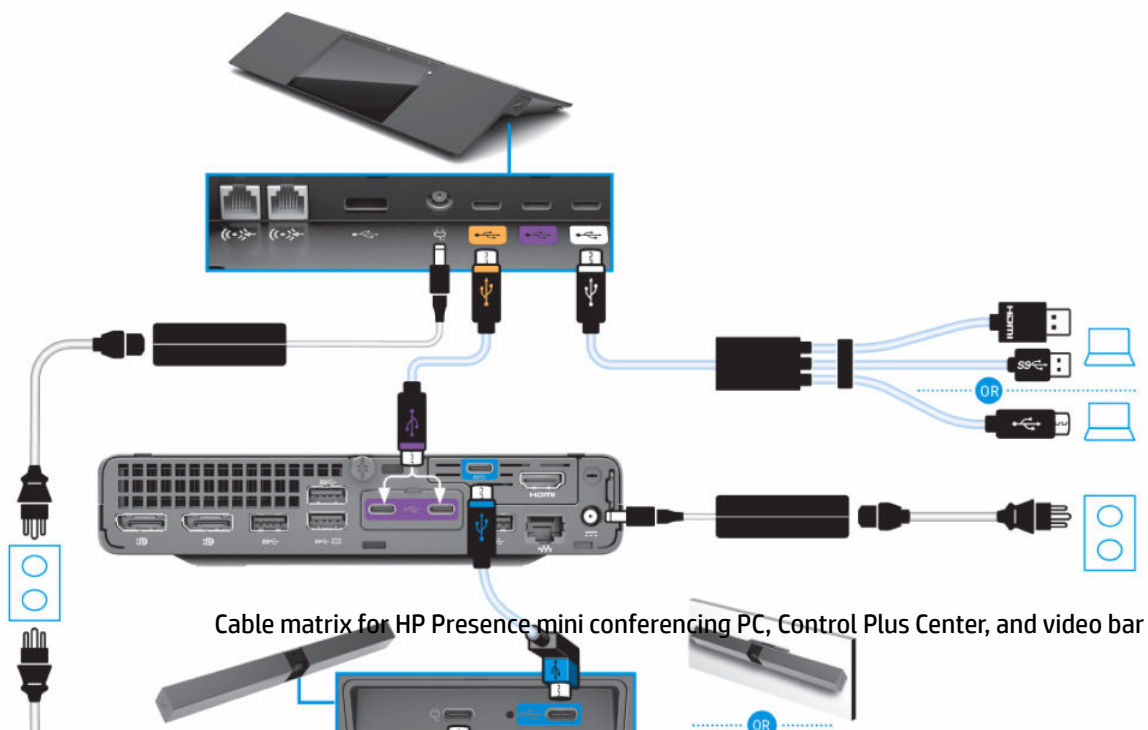Use this illustration to determine proper cabling between the HP Presence mini conferencing PC, Control Plus Center, and video bar.



Cable matrix for HP Presence mini conferencing PC, Control Plus Center, and video bar

The HP Presence Smart Set up app allows you to configure and use your system.

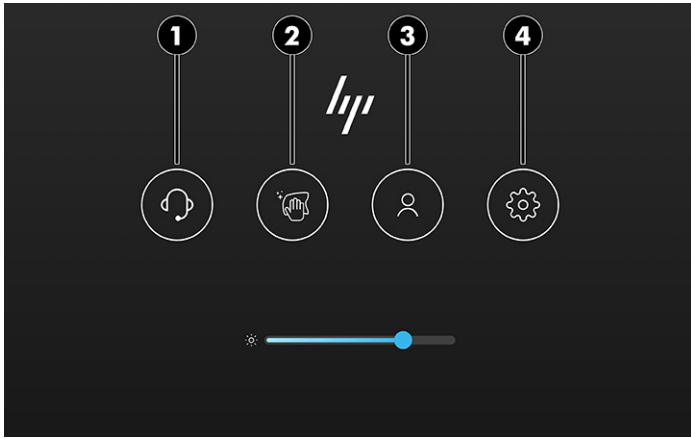


Table 2-1 Icons in the HP Presence Smart Set Up app

| Icon | Description | Icon | Description |
|------|--------------------|------|-------------------------------------|
| 1 | HP Room Assistant | 3 | Guest mode for PC |
| | Report room issues | | Host any meeting with your notebook |

Table 2-1 Icons in the HP Presence Smart Set Up app (continued)

| Icon | Description | Icon | Description | | |
|------|--------------|-------------------------------|-------------|----------------------|-----------------------------|
| 2 | Screen clean | Disable screen for 10 seconds | 4 | HP Presence settings | HP Presence device settings |

Using an optional security lock

You can use different types of locks (purchased separately) to secure the computer.

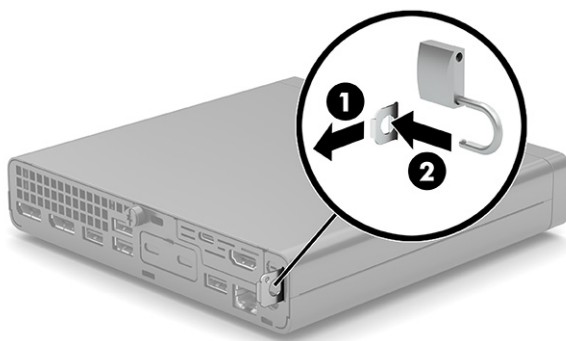
Security cable lock

You can secure the mini conferencing PC with a security cable lock.



Padlock

You can secure the mini conferencing PC with a padlock.



3 Illustrated parts catalog

Use this information to determine the spare parts that are available for the computer.

NOTE: HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Mini Conferencing PC major components

To identify the computer major components, use this illustration and table.

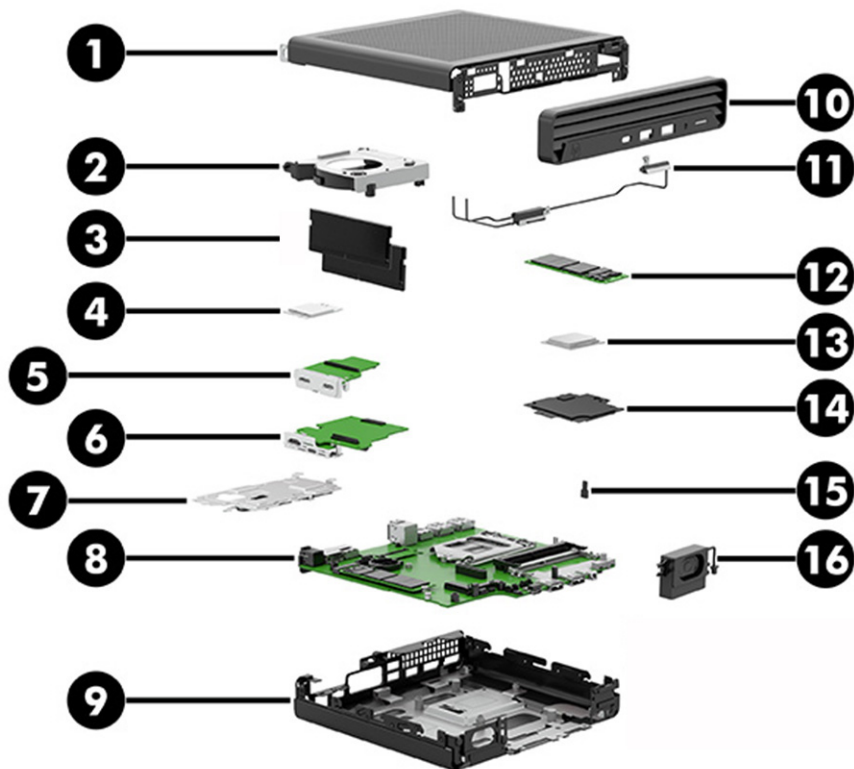


Table 3-1 Mini Conferencing PC major components and their descriptions

| Item | Description |
|------|--|
| (1) | Access panel |
| (2) | System fan |
| (3) | Memory modules (PC4-3200) |
| | 8 GB |
| | 4 GB |
| (4) | WLAN module (Intel® Wi-Fi® 6 AX201 [2 × 2] and Bluetooth® M.2 Combo Card, non-vPro™) |

Table 3-1 Mini Conferencing PC major components and their descriptions (continued)

| Item | Description |
|-------------|---|
| (5) | Flex I/O 1 card |
| (6) | Flex I/O 2 card |
| (7) | Heat sink |
| (8) | System board (includes replacement thermal material) |
| (9) | System chassis |
| (10) | Front bezel |
| (11) | Wireless antennas |
| (12) | Solid-state drive (M.2 2280, PCIe) 256 GB |
| (13) | Processor (includes replacement thermal material) Intel Core® i7-10700T (2.0 GHz, 16 MB Intel Smart Cache, 8 core, 35 W) Intel Core i5-10500T (2.3 GHz, 12 MB Intel Smart Cache, 6 core, 35 W) |
| (14) | Video ingest flex I/O connector board |
| (15) | Ambient (thermal) sensor |

Table 3-1 Mini Conferencing PC major components and their descriptions (continued)

| Item | Description |
|------|-------------|
| (16) | Speaker |

HP Presence components

To identify HP Presence components, use this illustration and table.

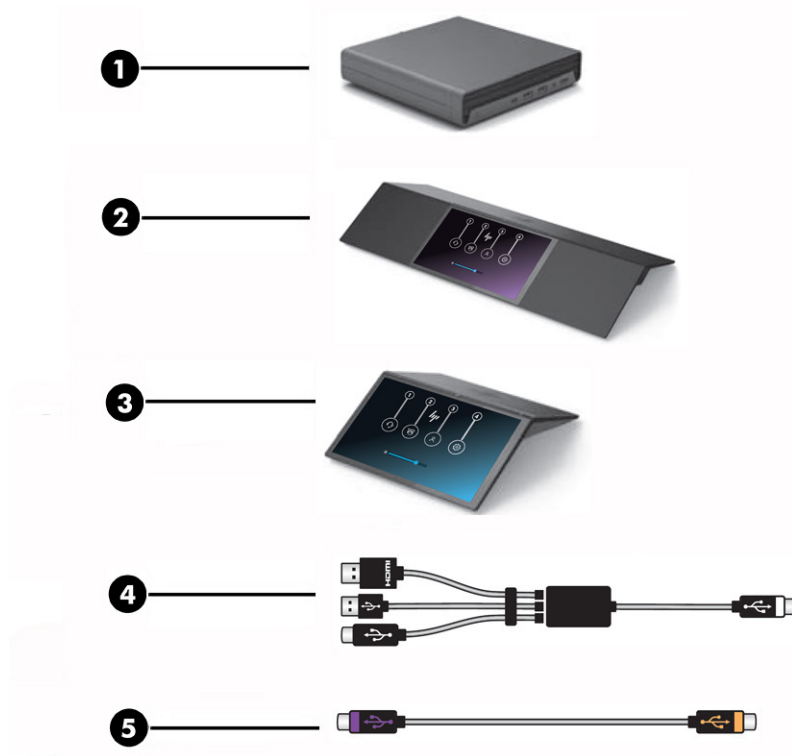


Table 3-2 HP Presence components and their descriptions

| Item | Description |
|------|-------------------------------|
| (1) | Presence Mini Conferencing PC |
| (2) | Presence Control Plus Center |
| (3) | Presence Control Center |
| (4) | Multiport adapter cable |

Table 3-2 HP Presence components and their descriptions (continued)

| Item | Description |
|------|------------------------------------|
| (5) | Presence 5 m (16.4 ft) USB-C cable |

Miscellaneous parts

To identify the various computer parts, use this table.

Table 3-3 Miscellaneous parts and their descriptions

| |
|---|
| Description |
| Port cover |
| Flex I/O HDMI bracket |
| System board repair kit |
| DisplayPort-to-HDMI 2.0 adapter |
| VESA® sleeve |
| Antenna bar |
| Power cord (C5, 1.8 m [6 ft]) |
| AC adapter (65 W, USB-C, nPFC, 1.8 m [6 ft]) |

4 Routine care, drive guidelines, and disassembly preparation

This information provides general service information for the computer. Adherence to the procedures and precautions is essential for proper service.


 **IMPORTANT:** When the computer is plugged into an AC power source, AC voltage is always applied to the system board. You must disconnect the power cord from the power source before opening the computer to prevent electric shock, system board, or component damage.

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs.

An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.

 **IMPORTANT:** To prevent damage to the device when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

Generating static electricity

This table shows how humidity affects the electrostatic voltage levels generated by different activities. A product can be degraded by 700 V of static electricity.

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

| Event | Relative humidity | | |
|-------|-------------------|-----|-----|
| | 55% | 40% | 10% |

Table 4-1 Static electricity occurrence based on activity and humidity (continued)

| | Relative humidity | | |
|---|-------------------|----------|----------|
| | | | |
| Walking across carpet | 7,500 V | 15,000 V | 35,000 V |
| Walking across vinyl floor | 3,000 V | 5,000 V | 12,000 V |
| Motions of bench worker | 400 V | 800 V | 6,000 V |
| Removing DIPs (dual in-line packages) from plastic tube | 400 V | 700 V | 2,000 V |
| Removing DIPs from vinyl tray | 2,000 V | 4,000 V | 11,500 V |
| Removing DIPs from polystyrene foam | 3,500 V | 5,000 V | 14,500 V |
| Removing bubble pack from PCB (printed circuit board) | 7,000 V | 20,000 V | 26,500 V |
| Packing PCBs in foam-lined box | 5,000 V | 11,000 V | 21,000 V |

Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity. The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components.

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.
- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Use this equipment to prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of 1 M Ω \pm 10% resistance in the ground cords. To provide proper ground, a strap must be worn snug against bare skin. The ground cord must be connected and fit snugly into the banana plug connector on the grounding mat or workstation.
- **Heel straps/Toe straps/Boot straps** can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of 1 M Ω \pm 10% resistance between the operator and ground.

Table 4-2 Static shielding protection levels

| Static shielding protection levels | |
|------------------------------------|---------|
| Method | Voltage |

Table 4-2 Static shielding protection levels (continued)

| Static shielding protection levels | |
|------------------------------------|----------|
| Antistatic plastic | 1,500 V |
| Carbon-loaded plastic | 7,500 V |
| Metallized laminate | 15,000 V |

Grounding the work area

To prevent static damage at the work area, use these precautions.

- Cover the work surface with approved static-dissipative material. Provide a wrist strap connected to the work surface and properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep work area free of nonconductive materials such as ordinary plastic assembly aids and polystyrene foam.
- Use field service tools, such as cutters, screwdrivers, and vacuums, that are conductive.

Recommended materials and equipment

HP recommends the these materials and equipment to prevent static electricity.

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of $1\text{ M}\Omega \pm 10\%$ resistance
- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing $1\text{ M}\Omega \pm 10\%$ resistance
- Material handling packages
- Conductive plastic bags
- Conductive plastic tubes
- Conductive tote boxes

- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

Operating guidelines

This information details how to prevent overheating and to help prolong the life of the computer.

- Keep the computer away from excessive moisture, direct sunlight, and extremes of heat and cold.
- Operate the computer on a sturdy, level surface. Leave a 10.2 cm (4 inch) clearance on all vented sides of the computer and above the monitor to permit the required airflow.
- Never restrict the airflow into the computer by blocking any vents or air intakes. Do not place the keyboard, with the keyboard feet down, directly against the front of the desktop unit as this also restricts airflow.
- Occasionally clean the air vents on all vented sides of the computer. Lint, dust, and other foreign matter can block the vents and limit the airflow. Be sure to unplug the computer before cleaning the air vents.
- Never operate the computer with the cover or side panel removed.
- Do not stack computers on top of each other or place computers so near each other that they are subject to each other's recirculated or preheated air.
- If the computer is to be operated within a separate enclosure, intake and exhaust ventilation must be provided on the enclosure, and the same operating guidelines listed previously still apply.
- Keep liquids away from the computer and keyboard.
- Never cover the ventilation slots on the monitor with any type of material.
- Install or enable power management functions of the operating system or other software, including Sleep states.

Routine care

Use this information to properly care for your computer.

General cleaning safety precautions

Use this information to safely clean your computer.

⚠ CAUTION: To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

- Never use solvents or flammable solutions to clean the computer.
- Never immerse any parts in water or cleaning solutions; apply any liquids to a clean cloth and then use the cloth on the component.
- Always unplug the computer when cleaning with liquids or damp cloths.
- Always unplug the computer before cleaning the keyboard, mouse, or air vents.

- Disconnect the keyboard before cleaning it.
- Wear safety glasses equipped with side shields when cleaning the keyboard.

Cleaning the computer case

Follow all safety precautions before cleaning the computer case.

To clean the computer case, follow these procedures:


- To remove light stains or dirt, use plain water with a clean, lint-free cloth or swab.
- For stronger stains, use a mild dishwashing liquid diluted with water. Rinse well by wiping it with a cloth or swab dampened with clear water.
- For stubborn stains, use isopropyl (rubbing) alcohol. No rinsing is needed because the alcohol evaporates quickly and does not leave a residue.
- After cleaning, always wipe the unit with a clean, lint-free cloth.
- Occasionally clean the air vents on the computer. Lint and other foreign matter can block the vents and limit the airflow.

Cleaning the keyboard


Use this information to properly clean the keyboard. Follow all safety precautions before cleaning the keyboard.

To clean the tops of the keys or the keyboard body, follow the procedures described in [Cleaning the computer case on page 31](#).

When cleaning debris from under the keys, review all rules in [General cleaning safety precautions on page 30](#) before following these procedures.

 **CAUTION:** Use safety glasses equipped with side shields before attempting to clean debris from under the keys.

- You can remove visible debris underneath or between the keys by vacuuming or shaking.
- You can use canned, pressurized air to clean debris from under the keys. Use caution because too much air pressure can dislodge lubricants applied under the wide keys.
- If you remove a key, use a specially designed key puller to prevent damage to the keys. This tool is available through many electronic supply outlets.

 **IMPORTANT:** Never remove a wide leveled key (like the space bar) from the keyboard. If these keys are improperly removed or installed, the keyboard might not function properly.

- You can clean under a key with a swab moistened with isopropyl alcohol and squeezed out. Be careful not to wipe away lubricants necessary for proper key functions. Use tweezers to remove any fibers or dirt in confined areas. Allow the parts to air dry before reassembly.

Cleaning the monitor

Follow all safety precautions before cleaning dirt and debris from your computer. Use this information to properly clean the monitor.

- Wipe the monitor screen with a clean cloth moistened with water or with a towelette designed for cleaning monitors. Do not use sprays or aerosols directly on the screen; the liquid can seep into the housing and damage a component. Never use solvents or flammable liquids on the monitor.
- To clean the monitor body, follow the procedures in [Cleaning the computer case on page 31](#).

Cleaning the mouse

Follow all safety precautions before cleaning dirt and debris from your computer. Use this information to properly clean the mouse.

- Clean the mouse ball by first removing the retaining plate and the ball from the housing. Pull out any debris from the ball socket and wipe the ball with a clean, dry cloth before reassembly.
- To clean the mouse body, follow the procedures in [Cleaning the computer case on page 31](#).

Service considerations

Keep these considerations in mind during the disassembly and assembly of the computer.

Tools and software requirements

Servicing the computer requires these tools.

- Torx T-15 screwdriver
- Flat-bladed screwdriver (can sometimes be used in place of the Torx screwdriver)
- Phillips P1 screwdriver
- Nonconductive, nonmarking pry tool

- Diagnostics software

Screws

The screws used in the computer are not interchangeable. They could have standard or metric threads and might be of different lengths.

If you use an incorrect screw during the reassembly process, it can damage the unit. HP strongly recommends that you keep all screws that you remove during disassembly with the removed part and then return them to their proper locations.



IMPORTANT: As you remove each subassembly from the computer, place it away from the work area to prevent damage.

Cables and connectors

Use this information properly handle cables.

Apply only the tension required to seat or unseat the cables during insertion or removal from the connector. Handle cables by the connector whenever possible. In all cases, avoid bending or twisting the cables, and route the cables so that they cannot be caught or snagged by parts being removed or replaced.



IMPORTANT: When servicing this computer, be sure to place cables in their proper location during the reassembly process. Improper cable placement can damage the computer.

Hard drives

Handle hard drives as delicate, precision components, and avoid all physical shock and vibration. This advice applies to failed drives as well as replacement spares.

- If a drive must be mailed, place the drive in a bubble-pack mailer or other suitable protective packaging and label the package “Fragile: Handle With Care.”
- Do not remove hard drives from the shipping package for storage. Keep hard drives in their protective packaging until they are actually mounted in the computer.
- Avoid dropping drives from any height onto any surface.
- If you are inserting or removing a hard drive, turn off the computer. Do not remove a hard drive while the computer is on or in standby mode.
- Before handling a drive, ensure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
- Do not use excessive force when inserting a drive.

- Avoid exposing a hard drive to liquids, temperature extremes, or products that have magnetic fields such as monitors or speakers.

Lithium coin cell battery

The battery that comes with the computer provides power to the real-time clock and has a minimum lifetime of approximately three years.

See the appropriate removal and replacement chapter for the chassis that you are working on for instructions on the replacement procedures.

⚠ WARNING! This computer contains a lithium battery. There is a risk of fire and chemical burn if the battery is handled improperly. Do not disassemble, crush, puncture, short external contacts, dispose of in water or fire, or expose it to temperatures higher than 140°F (60°C). Do not attempt to recharge the battery.

📝 NOTE: Do not dispose of batteries, battery packs, and accumulators with general household waste. To forward them to recycling centers or proper disposal, use the public collection system or return them to HP, their authorized partners, or their agents.

SATA hard drives

The Self Monitoring Analysis and Recording Technology (SMART) ATA drives for the HP Personal Computers have built-in drive failure prediction that warns the user or network administrator of an impending failure or crash of the hard drive.

The SMART drive tracks fault prediction and failure indication parameters such as reallocated sector count, spin retry count, and calibration retry count. If the drive determines that a failure is imminent, it generates a fault alert.

Table 4-3 SATA hard drive characteristics

| Serial ATA hard drive characteristics | |
|---|-------------------|
| Number of pins/conductors in data cable | 7/7 |
| Number of pins in power cable | 15 |
| Maximum data cable length | 100 cm (39.37 in) |
| Data interface voltage differential | 400 mV–700 mV |
| Drive voltages | 3.3 V, 5 V, 12 V |
| Jumpers for configuring drive | N/A |
| Data transfer rate | 6.0 Gbps |

Always use an HP-approved SATA 6.0 Gbps cable because it is fully backwards compatible with the SATA 1.5 Gbps drives. Current HP desktop products ship with SATA 6.0 Gbps hard drives.

SATA data cables are susceptible to damage if overflexed. Never crease a SATA data cable and never bend it tighter than a 30 mm (1.18 in) radius.

The SATA data cable is a thin, seven-pin cable designed to transmit data for only a single drive.


Cable management


Always follow good cable management practices when working inside the computer.

- Keep cables away from major heat sources like the heat sink.
- Keep cables clear of sliding or moveable parts to prevent them from being cut or crimped when the parts are moved.
- When folding a flat ribbon cable, never fold to a sharp crease. Sharp creases can damage the wires.
- Do not bend any cable sharply. A sharp bend can break the internal wires.
- Never bend a SATA data cable tighter than a 30 mm (1.18 in) radius.
- Never crease a SATA data cable.

5 Removal and replacement procedures

Adherence to these procedures and precautions is essential for proper service. After completing all necessary removal and replacement procedures, run the Diagnostics utility to verify that all components operate properly.

 **NOTE:** Not all features listed in this guide are available on all computers.


 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/partsurfer/>, select your country or region, and then follow the on-screen instructions.

Preparation for disassembly

Use this information to properly prepare to disassemble and reassemble the computer.

See [Routine care, drive guidelines, and disassembly preparation on page 27](#) for initial safety procedures.


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

 **IMPORTANT:** Turn off the computer before disconnecting any cables.

Regardless of the power state, voltage is always present on the system board as long as the system is plugged into an active AC outlet. In some systems, the cooling fan is on even when the computer is in the Standby or Suspend modes. Always disconnect the power cord before servicing a unit.

2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer
4. (Select products only) If the computer is on a stand, remove the computer from the stand.

 **CAUTION:** Beware of sharp edges inside the chassis.

 **NOTE:** During disassembly, label each cable as you remove it, and note its position and routing. Keep all screws with the removed components.

Access panel

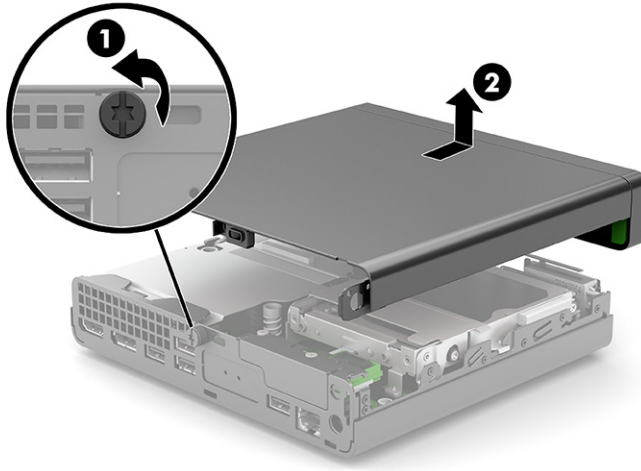
To remove the access panel, use these procedures.

Before removing the access panel, follow these steps:

- Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).

Remove the access panel:

- Loosen the thumbscrew on the rear of the computer (1), slide the panel forward, and lift it off the computer (2).



To install the access panel, reverse the removal procedure.

Front bezel

To remove the front bezel, use these procedures.

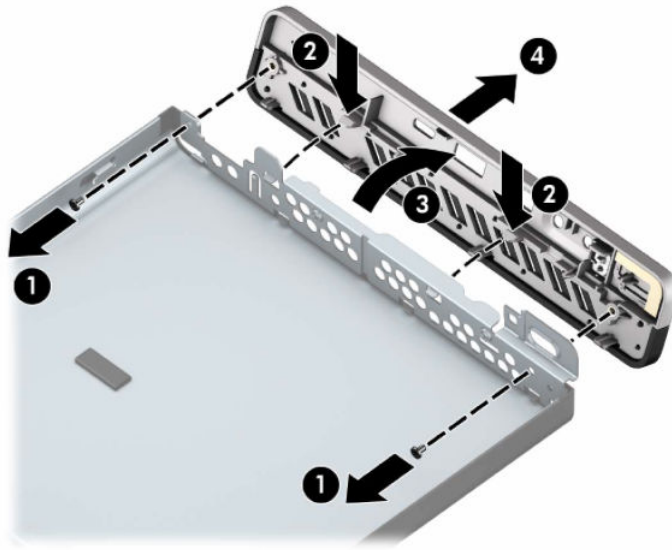
Before removing the front bezel, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the access panel (see [Access panel on page 36](#)).

Remove the front bezel:

1. Position the access panel upside-down so that you can access the inside of the bezel.
2. Remove the two Phillips screws (1) that secure the bezel to the access panel.
3. Simultaneously press the two top tabs (not the four bottom tabs) to disengage the bezel (2).

4. Rotate the top of the bezel downward (3), and then remove it from the access panel (4).



To install the front bezel, reverse the removal procedure.

Memory modules (SODIMMs)

To remove the memory modules, use this information and procedures.

For list of available memory modules, see [Mini Conferencing PC major components on page 23](#).

The memory sockets on the system board can be populated with up to two industry-standard SODIMMs. These memory sockets are populated with at least one preinstalled SODIMM. To achieve the maximum memory support, you can populate the system board with up to 16 GB of memory.

Table 5-1 Memory module specifications


| Component | Specification |
|----------------|--|
| Memory modules | 1.2 volt DDR4-SDRAM memory modules |
| Compliance | Unbuffered non-ECC DDR4-3200 MHz-compliant |
| Pins | Industry-standard 260-pin containing the mandatory Joint Electronic Device Engineering Council (JEDEC) specification |
| Slots | 2 |
| Maximum memory | 16 GB |
| Supported | 2 Gbit, 4 Gbit, 8 Gbit, and 16 Gbit non-ECC memory technologies single-sided and double-sided memory modules |


NOTE: The system does not operate properly if you install unsupported memory modules. Memory modules constructed with $\times 8$ and $\times 16$ DDR devices are supported; memory modules constructed with $\times 4$ SDRAM are not supported.

Use this information to correctly populate SODIMM sockets:

There are two SODIMM sockets on the system board, with one socket per channel. The sockets are labeled DIMM1 and DIMM3. The DIMM1 socket operates in memory channel B. The DIMM3 socket operates in memory channel A.

The computer comes with double data rate 4 synchronous dynamic random access memory (DDR4-SDRAM) small outline dual inline memory modules (SODIMMs).

 **IMPORTANT:** You must disconnect the power cord and wait approximately 30 seconds for the power to drain before adding or removing memory modules. Regardless of the power state, voltage is always supplied to the memory modules as long as the computer is plugged into an active AC outlet. Adding or removing memory modules while voltage is present can cause irreparable damage to the memory modules or system board.

 **IMPORTANT:** When handling a memory module, be careful not to touch any of the contacts. Doing so can damage the module.

The memory module sockets have gold-plated metal contacts. When upgrading the memory, use memory modules with gold-plated metal contacts to prevent corrosion, oxidation, or both, resulting from having incompatible metals in contact with each other.

Static electricity can damage the electronic components of the computer or optional cards. Before beginning these procedures, be sure that you are discharged of static electricity by briefly touching a grounded metal object.

Table 5-2 Memory module socket locations

| Item | Description | System Board Label | Socket Color |
|------|---------------------------|--------------------|--------------|
| 1 | SODIMM1 socket, channel B | DIMM1 | Black |
| 2 | SODIMM3 socket, channel A | DIMM3 | Black |

The system automatically operates in single-channel mode, dual-channel mode, or flex mode, depending on how the SODIMMs are installed.

- The system operates in single-channel mode if the SODIMM sockets are populated in one channel only.
- The system operates in a higher-performing dual-channel mode if the memory capacity of the SODIMM in channel A is equal to the memory capacity of the SODIMM in channel B.
- The system operates in flex mode if the memory capacity of the SODIMM in channel A is not equal to the memory capacity of the SODIMM in channel B. In flex mode, the channel populated with the least amount of memory describes the total amount of memory assigned to dual channel and the remainder is assigned to single channel. If one channel has more memory than the other, assign the larger amount to channel A.
- In any mode, the maximum operational speed is determined by the slowest SODIMM in the system.

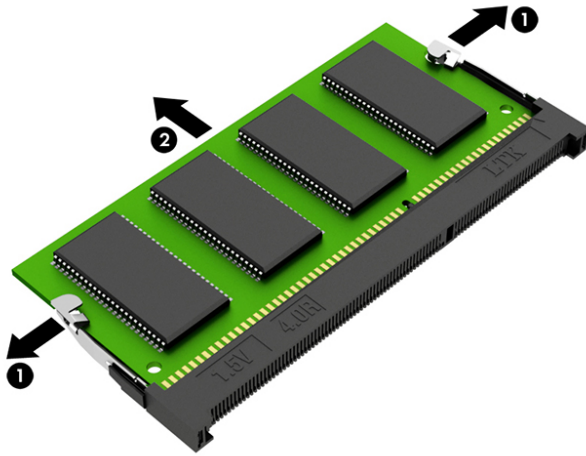
Before replacing the memory modules, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 36](#)).
2. Remove the access panel ([Access panel on page 36](#)).


Replace a memory module:


1. Tilt the fan up using the front tab and leave it in the up position.

2. To remove a SODIMM, press outward on the two latches on each side of the SODIMM (1), and then pull the SODIMM out of the socket (2).



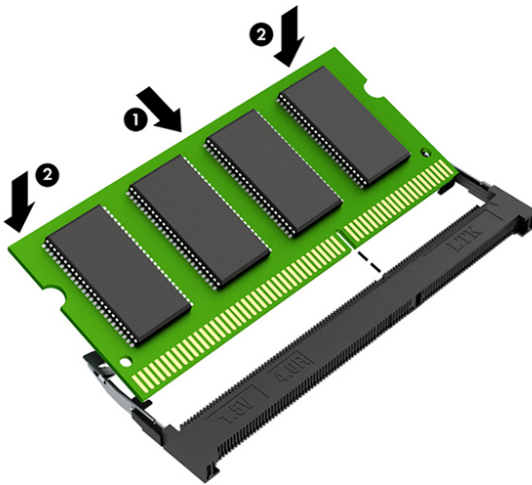3. Slide the new SODIMM into the socket at approximately a 30° angle (1), and then press the SODIMM down (2) so that the latches lock it in place.



 **NOTE:** A memory module can be installed in only one way. Match the notch on the module with the tab on the memory socket.

The computer automatically recognizes the additional memory when you turn on the computer.

Fan


To remove the fan, use these procedures.

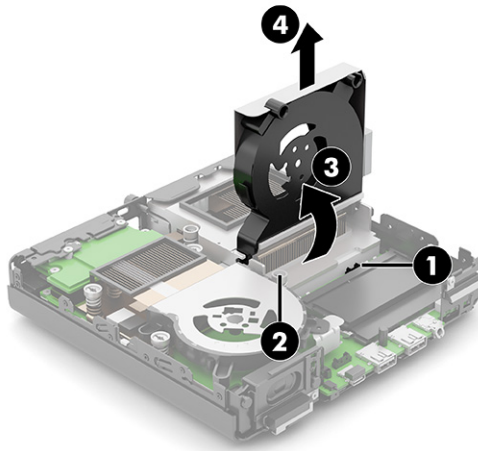
Before removing the fan, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the access panel (see [Access panel on page 36](#)).

Remove the fan:

1. Disconnect the fan cable from the system board connector **(1)**.
2. Remove the cable from its routing around the heat sink screw post **(2)**.
3. Lift fan up to about 45° **(3)**, and then pull it away from the heat sink **(4)**.

 **NOTE:** Component appearance can vary.



To install the fan, reverse the removal procedure.

Solid-state drive

To remove the solid-state drive module, use these procedures. The solid-state drive is located under the hard drive and drive cage.

For list of available solid-state drives, see [Mini Conferencing PC major components on page 23](#).

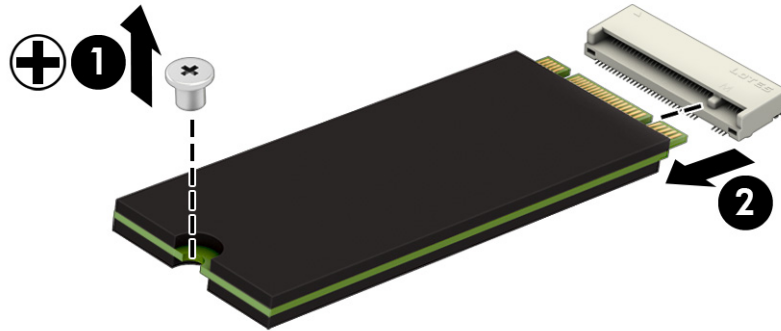
Before removing the solid-state drive module, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 36](#)).
2. Remove the access panel ([Access panel on page 36](#)).

Remove the solid-state drive module:

1. Remove the screw that secures the drive **(1)**.

2. Pull the drive out of the system board connector (2).



To install the solid-state drive module, reverse the removal procedure.

WLAN module

To remove the WLAN module, use these procedures.


The WLAN module is located under the hard drive and drive cage.

Before removing the WLAN module, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 36](#)).
2. Remove the access panel ([Access panel on page 36](#)).

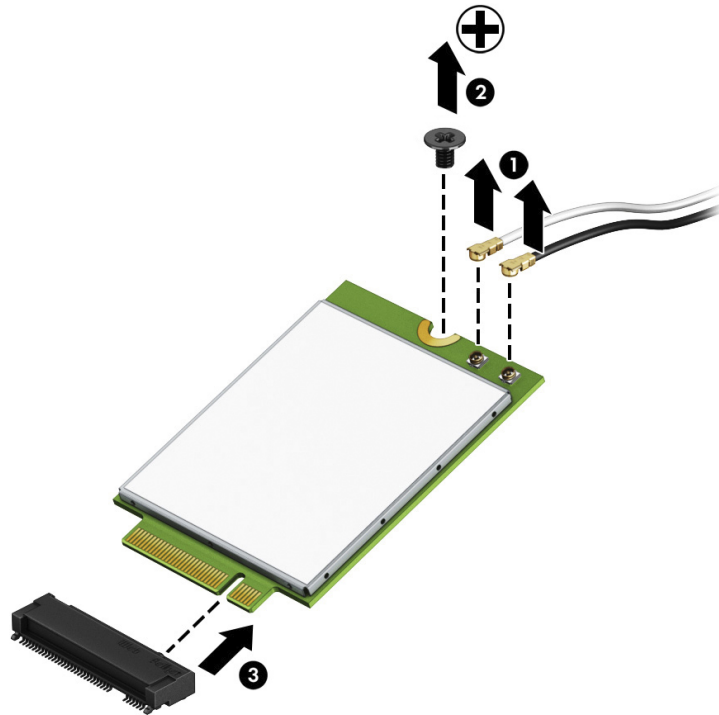
Remove the WLAN module:

1. Disconnect the antenna cables from the module (1).


 **NOTE:** The WLAN antenna cable labeled 1/MAIN connects to the WLAN module Main terminal. The WLAN antenna cable labeled 2/AUX connects to the WLAN module Aux terminal.

2. Remove the screw (2) that secures the module to the computer.

3. Pull the module to remove it from the socket (3).



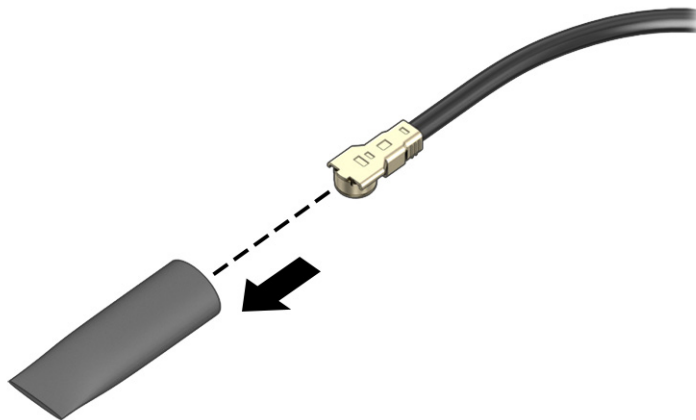4. If the WLAN antenna is not connected to the terminal on the WLAN module, a protective sleeve must be installed on the antenna connector, as shown in the following illustration.



To install the WLAN module, reverse the removal procedure.



NOTE: WLAN modules are designed with a notch to prevent incorrect insertion.

Battery

To remove the battery, use these procedures. The battery that comes with the computer provides power to the real-time clock. When replacing the battery, use a battery equivalent to the battery originally installed in the computer. The computer comes with a 3 V lithium coin cell battery.

⚠ WARNING! The computer contains an internal lithium manganese dioxide battery. There is a risk of fire and burns if the battery is not handled properly. To reduce the risk of personal injury:

Do not attempt to recharge the battery.

Do not expose to temperatures higher than 60°C (149°F).

Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.

Replace the battery only with the HP spare part that is designated for this product.



IMPORTANT: Before replacing the battery, back up the computer CMOS settings. When the battery is removed or replaced, the CMOS settings are cleared.

Static electricity can damage the electronic components of the computer or optional equipment. Before beginning these procedures, be sure that you are discharged of static electricity by briefly touching a grounded metal object.



NOTE: You can extend the lifetime of the lithium battery by plugging the computer into an AC outlet. The lithium battery is used only when the computer is not connected to AC power.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, go to <http://www.hp.com/recycle>.

Before removing the battery, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 36](#)).
2. Remove the access panel ([Access panel on page 36](#)).

Remove the battery:

1. To release the battery from its holder, squeeze the metal clamp that extends above one edge of the battery (1). When the battery pops up, lift it out (2).



2. Slide the replacement battery into position, positive side up. The battery holder automatically secures the battery in the proper position.

Speaker

To remove the speaker, use these procedures.

Before removing the speaker, follow these steps:

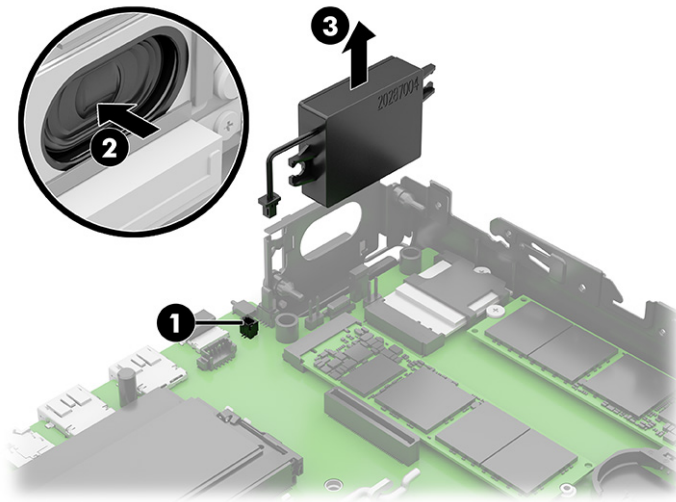
1. Prepare the computer for disassembly ([Preparation for disassembly on page 36](#)).
2. Remove the access panel ([Access panel on page 36](#)).

Remove the speaker:

1. Disconnect the speaker cable from the system board connector (1).
2. From the outside-front, press the rubber grommets and the speaker into the chassis (2).
3. Remove the speaker from the computer (3).



NOTE: Component appearance can vary.



To install the speaker, reverse the removal procedures.

Ambient (thermal) sensor


To remove the ambient sensor, use these procedures.

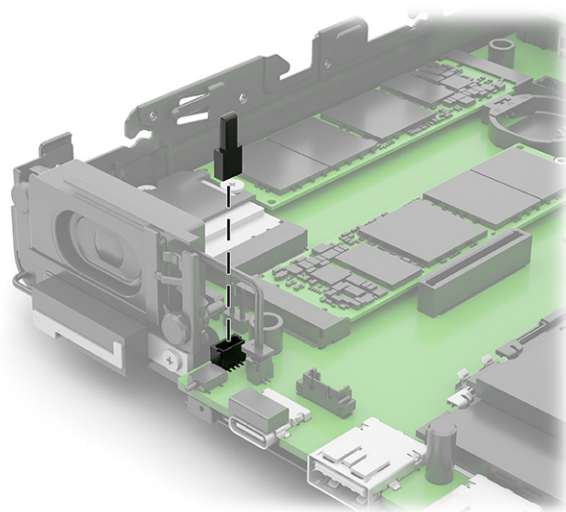
Before removing the ambient sensor, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 36](#)).
2. Remove the access panel ([Access panel on page 36](#)).

Remove the ambient sensor:

- Pull straight up to disconnect the ambient sensor from the system board.

 **NOTE:** Component appearance can vary.



To install the ambient sensor, reverse the removal procedure.

Flex I/O connector board


To remove flex I/O connector board, use these procedures.

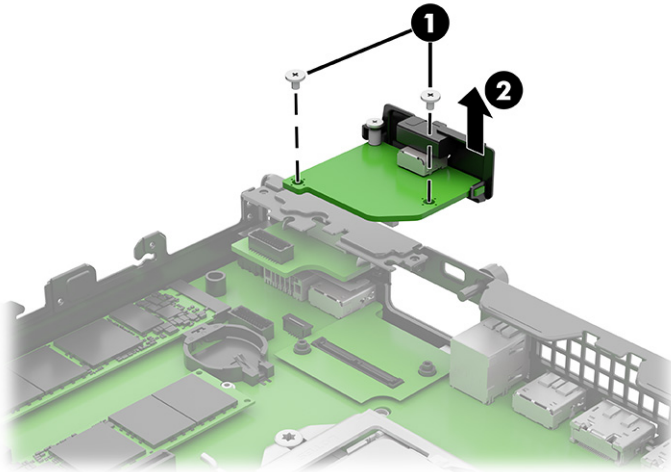
Before removing flex I/O connector board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 36](#)).
2. Remove the access panel ([Access panel on page 36](#)).

Remove flex I/O connector board:

- Remove the two Phillips screws that secure the board to the computer (1), and then lift the board to disconnect it from the connector on the system board (2).


 **NOTE:** Component appearance can vary.



To install flex I/O connector board, reverse the removal procedure.

Heat sink

To remove the heat sink, use these procedures.

 **IMPORTANT:** The bond between the heat sink and the processor can be very tight.

If the computer will turn on, before removing the heat sink, turn on the computer until it warms the heat sink. Warming the heat sink loosens the bond between the heat sink and the processor, thereby making it easier to separate them.

Do not pull the processor out of the socket when you lift the heat sink, especially if you cannot warm the heat sink before removal. Inadvertently removing the processor can damage the pins.


Before removing the heat sink, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).


2. Remove the access panel (see [Access panel on page 36](#)).
3. Remove the fan (see [Fan on page 40](#)).

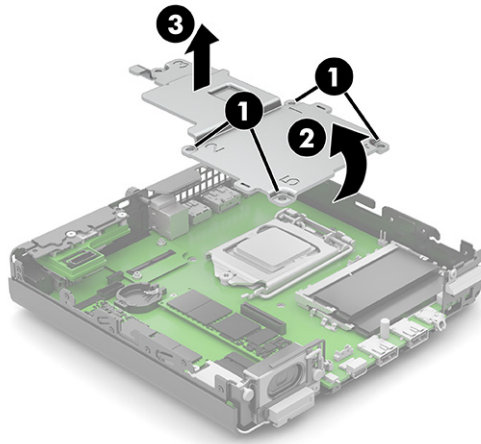
Remove the heat sink:

1. In the order indicated on the heat sink, loosen the three captive Torx screws (1).
2. Lift the back of the heat sink upward (2), and then remove the heat sink from the computer (3).


 **IMPORTANT:** Be sure to loosen the screws in the order indicated by the numbers stamped on the heat sink.

 **IMPORTANT:** For optimum thermal performance, be sure not to touch the thermal grease on the surface of the processor or the heat sink.

 **NOTE:** Component appearance can vary.



3. Thoroughly clean the thermal material from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits. The following illustration shows the replacement thermal material locations.

 **IMPORTANT:** Tighten heat sink retaining screws in diagonally opposite pairs (as in an X) to evenly seat the heat sink on the processor to avoid damage that could require replacing the system board.

To replace the heat sink, reverse the removal procedures.

Processor

To remove the processor, use these procedures.

For list of available processors, see [Mini Conferencing PC major components on page 23](#).


Before removing the processor, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 36](#)).
2. Remove the access panel ([Access panel on page 36](#)).

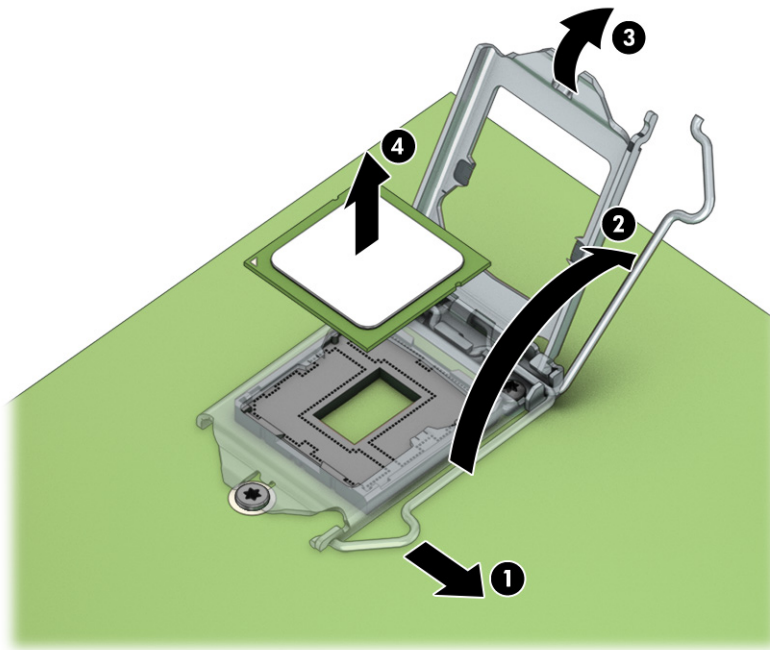
3. Remove the fan ([Fan on page 40](#)).
4. Remove the heat sink ([Heat sink on page 47](#)).

Remove the processor:


1. Pull the locking lever away from the processor (1), and then rotate the lever to its full open position (2).
2. Raise and rotate the microprocessor retainer to its fully open position (3).
3. Carefully lift the processor from the socket (4).

 **IMPORTANT:** Do not handle the pins in the processor socket. These pins are fragile, and handling them could cause irreparable damage. If pins are damaged, you might have to replace the system board.

The heat sink must be installed within 24 hours of installing the processor to prevent damage to the processor's solder connections.



To replace the processor, reverse the removal procedures.

 **NOTE:** After installing a new processor onto the system board, always update the system ROM to ensure that the latest version of the BIOS is being used on the computer. For more information, see: <https://support.hp.com/us-en/document/c06366640>.

System board

To remove the system board, use these procedures.

 **NOTE:** All system board spare part kits include replacement thermal material.

Before removing the system board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 36](#)).

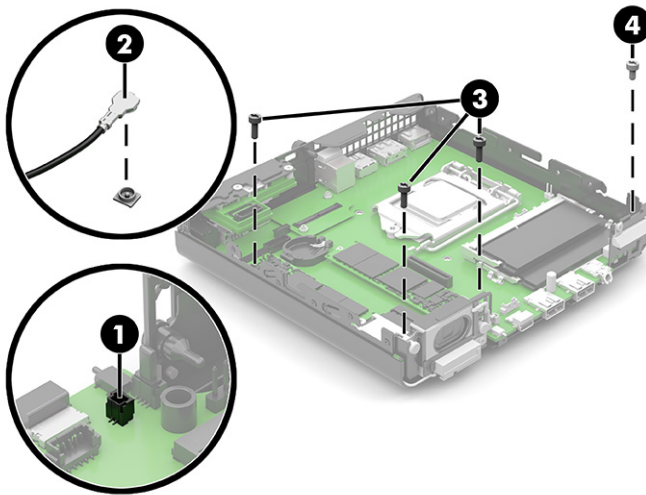
2. Remove the access panel ([Access panel on page 36](#)).
3. Remove the memory modules ([Memory modules \(SODIMMs\) on page 38](#)).
4. Remove the fan ([Fan on page 40](#)).
5. If applicable, remove flex I/O connector board ([Flex I/O connector board on page 47](#)).
6. Remove the heat sink ([Heat sink on page 47](#)).
7. Remove the processor ([Processor on page 48](#)).

Remove the system board:


1. Disconnect the speaker cable from the system board (1).
2. Disconnect the antenna cables from the WLAN module (2). If replacing the system board, be sure to remove the WLAN module from the old board and install the module on the new board.
3. Remove the three longer Torx screws (3) and the shorter Torx screw (4) that secures the system board to the computer.



NOTE: System board appearance might vary.



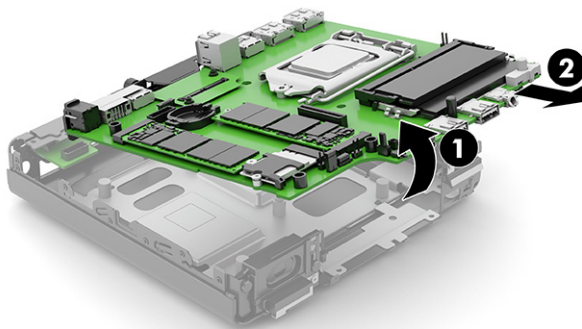4. Lift the side of the system board (1), and then remove it from the computer (2).



To install the system board, reverse the removal procedures.

NOTE: When replacing the system board, you must change the chassis serial number in the BIOS.

When replacing the system board, you must reprogram the SMBIOS information about the affected computer. Failure to reprogram the board will result in eventual failure, such as an activation failure (when you would have to reactivate the computer) or a system recovery failure.

Update the SMBIOS information in Computer Setup.

System board callouts

Use this illustration and table to determine system board callout locations.

NOTE: System board appearance might vary.

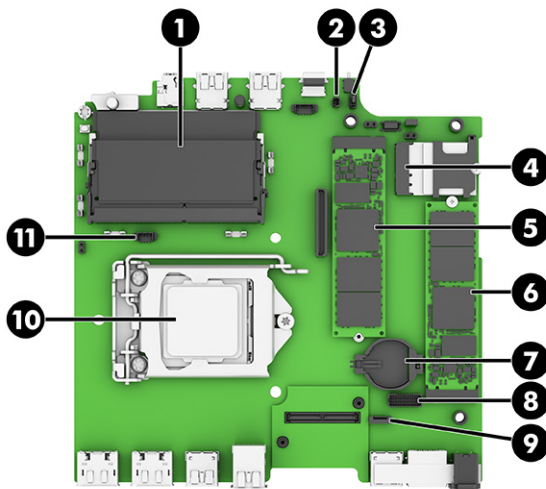


Table 5-3 System board callouts

| Item | Component | Item | Component |
|------|-------------------|------|-------------------|
| (1) | Memory modules | (7) | RTC battery |
| (2) | Ambient sensor | (8) | Flex I/O board #2 |
| (3) | Speaker | (9) | Flex I/O board #1 |
| (4) | WLAN module | (10) | Processor |
| (5) | Solid-state drive | (11) | System fan |
| (6) | Solid-state drive | | |

Wireless antennas and cables

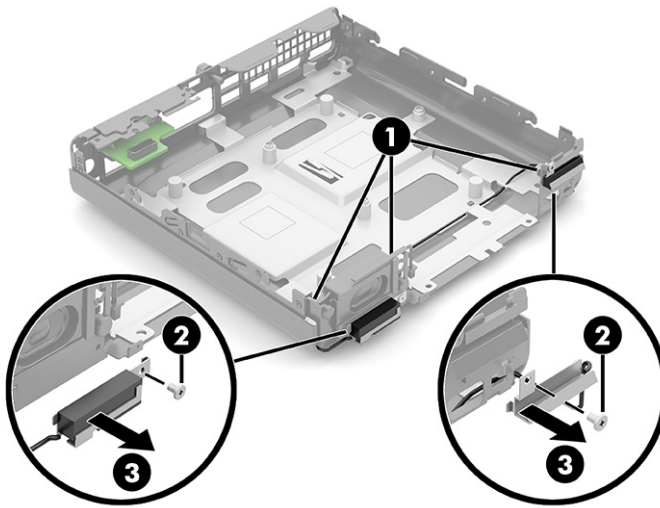
To remove the wireless antennas and cables, use these procedures. The cables route from the WLAN module to the antennas mounted on the front of the computer.

Before removing the wireless antennas and cables, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 36](#)).
2. Remove the access panel ([Access panel on page 36](#)).
3. Remove the fan ([Fan on page 40](#)).
4. Remove the WLAN module ([WLAN module on page 42](#)).
5. If applicable, remove flex I/O connector board ([Flex I/O connector board on page 47](#)).
6. Remove the system board ([System board on page 49](#)).

Remove the wireless antennas:

1. From the inside of the chassis, remove the antenna cables from the clips (1).
2. From the front of the chassis, remove the Phillips screw from each antenna (2).
3. Pull the antennas and cables out of the front of the chassis (3).



6 Troubleshooting without diagnostics

Use these sections to identify and correct minor problems.

⚠ CAUTION: Misuse of the computer or failure to establish a safe and comfortable work environment can result in discomfort or serious injury. See the *Safety & Comfort Guide* at <http://www.hp.com/ergo> for more information about choosing a workspace and creating a safe and comfortable work environment. For more information, see the *Safety & Regulatory Information* guide.

Before you call for technical support

If you are having problems with the computer, try these solutions to isolate the exact problem before calling for technical support.


- Run the HP diagnostic tool.
- Run the hard drive self-test in Computer Setup.
- Check the power light on the front of the computer to see if it is blinking red. The blinking lights are error codes that will help you diagnose the problem.
- If you are working on a network, plug another computer with a different cable into the network connection. There might be a problem with the network plug or cable.
- If you recently added new hardware, remove the hardware and see if the computer functions properly.
- If you recently installed new software, uninstall the software and see if the computer functions properly.
- Boot the computer to the Safe Mode to see if it will boot without all of the drivers loaded. When booting the operating system, use “Last Known Configuration.”
- See the comprehensive online technical support at <http://www.hp.com/support>.


Access HP Business Solutions at <https://www.hp.com/us-en/solutions/business-solutions.html> for the latest online support information, software and drivers, proactive notification, and worldwide community of peers and HP experts.

If it becomes necessary to call for technical assistance, be prepared to do the following tasks to ensure that your service call is handled properly:

- Be in front of your computer when you call.
- Before you call, write down the computer serial number and product ID number.
- Spend time troubleshooting the problem with the service technician.
- Remove any hardware that was recently added to your system.
- Remove any software that was recently installed.

- Restore the system from the Recovery Disc Set that you created or restore the system to its original factory condition in System Software Requirement Disks (SSRD).

 **IMPORTANT:** Restoring the system will erase all data on the hard drive. Be sure to back up all data files before running the restore process.

 **NOTE:** For sales information and warranty upgrades (Care Packs), call your local authorized service provider or dealer.

Helpful hints

If you encounter problems with the computer or software, see this list of general suggestions before taking further action.

- Check that the computer is plugged into a working electrical outlet.
- Check that the computer is turned on and the white power light is on.
- Check the power light on the front of the computer to see if it is blinking red. The blinking lights are error codes that help you diagnose the problem.
- Press and hold any key if the system beeps. Then the keyboard should be operating correctly.
- Check all cable connections for loose connections or incorrect connections.
- Wake the computer by pressing any key on the keyboard or pressing the power button. If the system remains in suspend mode, shut down the computer by pressing and holding the power button for at least four seconds, and then press the power button again to restart the computer. If the system will not shut down, unplug the power cord, wait a few seconds, and then plug it in again. The computer will restart if it is set to turn on automatically as soon as power is restored in Computer Setup. If it does not restart, press the power button to start the computer.
- Be sure that all the needed device drivers have been installed. For example, if you are using a printer, you need a driver for that model printer.
- Remove all bootable media (such as a USB device) from the system before turning it on.

- If you have installed an operating system other than the factory-installed operating system, check to be sure that it is supported on the system.

NOTICE: When the computer is plugged into an AC power source, voltage is always applied to the system board. You must disconnect the power cord from the power source before opening the computer to prevent system board or component damage.

Solving general problems

You might be able to easily resolve the general problems described in this section. If a problem persists and you cannot resolve it yourself or if you feel uncomfortable about performing the operation, contact an authorized dealer or reseller.

⚠ CAUTION: When the computer is plugged into an AC power source, voltage is always applied to the system board. To reduce the risk of personal injury from electrical shock, hot surfaces, or both, be sure to disconnect the power cord from the AC outlet and allow the internal system components to cool before touching.

Cannot access the Computer Setup (F10) Utility when booting the computer

Use this information to troubleshoot the computer.

| Cause | Solution |
|---|---|
| The Computer Setup (F10) Utility is set to Fast Boot, causing the F10 access screen to display too briefly when booting the computer. | Before turning on the computer, press and hold f10 . Turn on the computer and continue to hold F10 until the Computer Setup (F10) Utility is displayed. – or – Follow the Windows® instructions for rebooting the computer into the Computer Setup (F10) Utility. |

Computer appears locked up and will not turn off when the power button is pressed

Use this information to troubleshoot the computer.

| Cause | Solution |
|---|---|
| Software control of the power switch is not functional. | <ol style="list-style-type: none"> 1. Press and hold the power button for at least 4 s until the computer turns off. 2. Disconnect the power cord from the electrical outlet. |

Computer will not respond to keyboard or mouse

Use this information to troubleshoot the computer.

| Cause | Solution |
|-----------------------------|---|
| Computer is in Sleep state. | To resume from Sleep state, press the power button. IMPORTANT: When attempting to resume from Sleep state, do not hold down the power button for more than 4 s. Otherwise, the computer shuts down and you lose any unsaved data. |
| System has locked up. | Restart computer. |

USB cables may not be seated properly.

Disconnect, and then reconnect USB cables to keyboard and mouse.

Computer date and time display is incorrect

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| RTC (real-time clock) battery may need to be replaced. | Reset the date and time under Control Panel . (Computer Setup can also be used to update the RTC date and time.) If the problem persists, replace the RTC battery. See the Removal and Replacement section for instructions about installing a new battery, or contact an authorized dealer or reseller for RTC battery replacement. To access Control Panel in Windows, type <code>control panel</code> in the taskbar search box, and then select Control Panel. |

There is no sound or sound volume is too low

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| System volume might be set low or muted. | <ol style="list-style-type: none">1. Check the front panel to see if an amber light indicates the system has been muted. Tap the touch-sensitive button to toggle the mute on and off.2. Check the Computer Setup settings to be sure that the internal system speaker is not muted. This setting does not affect the external speakers.3. Be sure that the external speakers are properly connected and powered on and that the speakers' volume control is set correctly.4. Use the system volume control available in the operating system to be sure that the speakers are not muted or to increase the volume. |

Cannot remove computer cover or access panel

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|---|
| Smart Cover Lock, featured on some computers, is locked. | Unlock the Smart Cover Lock using Computer Setup. In case of forgotten password, power loss, or computer malfunction, you must manually disable the Smart Cover lock. A key to unlock the Smart Cover Lock is not available from HP. Keys are typically available from a hardware store. |

Poor performance

Use this information to troubleshoot the computer.

| Cause | Solution |
|-----------------------|---|
| Processor is too hot. | <ol style="list-style-type: none">1. Be sure that airflow to the computer is not blocked. Leave a 10.2 cm (4 inch) clearance on all vented sides of the computer to permit the required airflow.2. Be sure that fans are connected and working properly (some fans only operate when needed).3. Be sure that the processor heat sink is installed properly. |

| | |
|--|---|
| Hard drive is full. | Transfer data from the hard drive to create more space on the hard drive. |
| Low on memory. | Add more memory. |
| Hard drive fragmented. | Defragment hard drive. |
| Program previously accessed did not release reserved memory back to the system. | Restart the computer. |
| Virus resident on the hard drive. | Run virus protection program. |
| Too many applications running. | <ol style="list-style-type: none"> 1. Close unnecessary applications to free memory. 2. Add more memory. 3. Some applications run in the background and can be closed by right-clicking their corresponding icons in the task tray. |
| Some software applications, especially games, are stressful on the graphics subsystem. | <ol style="list-style-type: none"> 1. Lower the display resolution for the current application or consult the documentation that came with the application for suggestions on how to improve performance by adjusting parameters in the application. 2. Add more memory. 3. Upgrade the graphics solution. |

Cause unknown.

Restart the computer.

Computer turned off automatically and the power light blinks red four times and then white two times

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| Processor thermal protection activated. A fan might be blocked or not turning, or the heat sink is not properly attached to the processor. | <ol style="list-style-type: none">1. Be sure that the computer air vents are not blocked and the processor cooling fan is running.2. Open the access panel, press the power button, and see if the processor fan (or other system fan) spins. If the fan does not spin, be sure that the fan cable is plugged onto the system board header.3. If a fan is plugged in and not spinning, replace it. |

System does not turn on and the lights on the front of the computer are not blinking

Use this information to troubleshoot the computer.

| Cause | Solution |
|----------------------------|---|
| System unable to power on. | <p>Press and hold the power button for fewer than 4 s. If the hard drive light turns white:</p> <ol style="list-style-type: none">1. If the computer has a voltage selector, check that the voltage selector (located on the rear of the power supply) is set to the appropriate voltage. The proper voltage setting depends on your region.2. Remove the expansion cards one at a time until the 5V_aux light on the system board turns on.3. Replace the system board. <p>OR</p> <p>Press and hold the power button for less than 4 s. If the hard drive light does not turn white:</p> <ol style="list-style-type: none">1. Check whether the unit is plugged into a working AC outlet.2. Open the access panel and check that the power button cable is properly connected to the system board.3. Check that the power supply cables are properly connected to the system board.4. Check to see if the 5V_aux light on the system board is turned on. If it is turned on, replace the power button assembly.5. If the 5V_aux light on the system board is off, replace the power supply.6. Replace the system board. |

Solving power problems

These tables provide common causes and solutions for power problems.

Power supply shuts down intermittently

Use this information to troubleshoot the computer.

| Cause | Solution |
|---|---|
| If the computer has a voltage selector, the | Select the proper AC voltage using the selector switch. |

Power supply will not turn on because of internal power supply fault.

Replace the power supply.

Computer turned off automatically, power light blinks red two times followed by a two-second pause, and the computer beeps two times (beeps stop after fifth iteration but lights continue blinking)

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| Processor thermal protection activated. A fan might be blocked or not turning, or the heat sink is not properly attached to the processor. | <ol style="list-style-type: none">1. Be sure that the computer air vents are not blocked and the processor cooling fan is running.2. Open the access panel, press the power button, and see if the processor fan (or other system fan) spins. If the fan does not spin, be sure that the fan cable is plugged onto the system board header.3. If the fan is plugged in and not spinning, replace it. |

Power light blinks red four times followed by a two-second pause and the computer beeps four times (beeps stop after fifth iteration but lights continue blinking)

Use this information to troubleshoot the computer.

| Cause | Solution |
|---|---|
| Power failure (power supply is overloaded). | <ol style="list-style-type: none">1. If the computer has a voltage selector, check that the voltage selector, located on the rear of the power supply (select products only), is set to the appropriate voltage. Proper voltage setting depends on your region.2. Open the access panel, and be sure that the power supply cable is seated into the connector on the system board.3. Check whether a device is causing the problem by removing all attached devices (such as hard drives or optical drives and expansion cards). Turn on the system. If the system enters POST, then power off and replace one device at a time and repeat this procedure until failure occurs. Replace the device that is causing the failure. Continue adding devices one at a time to ensure all devices are functioning properly.4. Replace the power supply.5. Replace the system board. |

Solving hard drive problems

These tables provide common causes and solutions for hard drive problems.

Hard drive error occurs

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| Hard disk has bad sectors or has failed. | <ol style="list-style-type: none">1. In Windows, type <code>file</code> in the taskbar search box, and then select File Explorer from the list of applications. In the left column, expand This PC, right-click a drive, select Properties, and then select the Tools tab. Under Error checking, select Check. |

Computer turned off automatically, power light blinks red two times followed by a two-second pause, and the computer beeps two times (beeps stop after fifth iteration but lights continue blinking)

The system might not have automatically recognized a newly installed device.

See reconfiguration directions in the [Solving hardware installation problems on page 64](#) section. If the system still does not recognize the new device, check to see if the device is listed in Computer Setup. If it is listed, the probable cause is a driver problem. If it is not listed, the probable cause is a hardware problem.

If this is a newly installed drive, run the Computer Setup utility, and add a POST delay under **Advanced > Boot Options**.

The device is attached to a SATA port that has been hidden in Computer Setup.

Run the Computer Setup utility and be sure that **Device Available** is selected for the device's SATA port in **Advanced > Port Options**.

Drive responds slowly immediately after startup.

Run Computer Setup and increase the POST Delay in **Advanced > Boot Options**.

Nonsystem disk/NTLDR missing message

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|---|
| The system is trying to start from the hard drive, but the hard drive might have been damaged. | Perform Drive Protection System (DPS) testing in system ROM. |
| System files missing or not properly installed. | <ol style="list-style-type: none">1. Insert bootable media and restart the computer.2. Boot to the windows installation media, and select the recovery option. If only a restore kit is available, then select the File Backup Program option, and then restore the system.3. Install system files for the appropriate operating system. |
| Hard drive boot has been disabled in Computer Setup. | Run the Computer Setup utility, and enable the hard drive entry in the Advanced > Boot Options list. |
| Bootable hard drive is not attached as first in a multiple hard drive configuration. | If attempting to boot from a hard drive, be sure that it is attached to the system board dark blue SATA connector. |
| Bootable hard drive is not listed first in the Boot Order. | Run the Computer Setup utility, and select Advanced > Boot Options , and be sure that the bootable hard drive is listed immediately under the Hard Drive entry. |

Computer will not boot from hard drive

Use this information to troubleshoot the computer.

| Cause | Solution |
|---|---|
| The device is attached to a SATA port that has been hidden in Computer Setup. | <ol style="list-style-type: none">1. Check SATA cable connections.2. Run the Computer Setup utility, and be sure that Device Available is selected for the device's SATA port in Advanced > Port Options. |
| Boot order is not correct. | Run the Computer Setup utility, and change boot sequence in Advanced > Boot Options . |

Hard drive is damaged.

Observe whether the front panel power light is blinking red and whether any beeps are heard.
See the Worldwide Limited Warranty for terms and conditions.

Computer seems to be locked up

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|---|
| Program in use has stopped responding to commands. | <ol style="list-style-type: none">1. Use the task manager to close programs that do not respond.2. Attempt the normal Windows shutdown procedure. If this fails, press the power button for four or more seconds to turn off the power. To restart the computer, press the power button again. |

Solving audio problems

If the computer has audio features and you encounter audio problems, see the common causes and solutions listed in these tables.

Sound cuts in and out

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| Processor resources are being used by other open applications. | Shut down all open processor-intensive applications. |

Sound does not come out of the speaker or headphones

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| Software volume control is turned down or muted. | Double-click the Speaker icon on the taskbar, be sure that Mute is not selected, and use the volume slider to adjust the volume. You can perform this action with the touch-sensitive buttons on the front of the computer. |
| Audio is hidden in Computer Setup. | Enable the audio in Computer Setup: Advanced > Built-in Device Options . |
| The external speakers are not turned on. | Turn on the external speakers. |
| Headphones or devices connected to the line-out connector mute the internal speaker. | Turn on and use headphones or external speakers, if connected, or disconnect headphones or external speakers. |
| Computer is in the Sleep state. | Press the power button to resume from the Sleep state. IMPORTANT: When attempting to resume from the Sleep state, do not hold down the power button for more than 4 seconds. Otherwise, the computer will shut down, and you will lose any unsaved data. |
| Internal speaker is disabled in Computer Setup. | Enable the internal speaker in Computer Setup. Select Advanced > Built-in Device Options . |
| Some applications can select which audio output device is used. | Be sure that the application has selected the correct audio device. |

The operating system controls might be set to use a different audio device as the default output device than what is expected.

Set the operating system to use the correct audio device.

Computer appears to be locked up while recording audio

Use this information to troubleshoot the computer.

| Cause | Solution |
|------------------------------|---|
| The hard disk might be full. | Before recording, be sure that there is enough free space on the hard disk. You can also try recording the audio file in a compressed format. |

Line-in jack is not functioning properly

Use this information to troubleshoot the computer.

| Cause | Solution |
|---|---|
| Jack has been reconfigured in the audio driver or application software. | In the audio driver or application software, reconfigure the jack or set the jack to its default value. |

Solving printer problems

If you encounter printer problems, see the documentation that came with the printer and the common causes and solutions listed in these tables.

Printer will not print

Use this information to troubleshoot the computer.

| Cause | Solution |
|---|--|
| Printer is not turned on and online. | Turn the printer on and be sure that it is online. |
| The correct printer drivers for the application are not installed. | <ol style="list-style-type: none">1. Install the correct printer driver for the application.2. Try printing using the MS-DOS command: <pre>DIR C:\ > [printer port]</pre>where [printer port] is the address of the printer being used. If the printer works, reload the printer driver. To run MS-DOS commands, press the Windows key + r, type <code>cmd</code> in the Open box, and then select OK. |
| If you are on a network, you might not have made the connection to the printer. | Make the proper network connections to the printer. |

Printer might have failed.

Run printer self-test.

Printer will not turn on

Use this information to troubleshoot the computer.

| Cause | Solution |
|---|---|
| The cables might not be connected properly. | Reconnect all cables, and check the power cord and electrical outlet. |

Printer prints garbled information

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| The correct printer driver for the application is not installed. | Install the correct printer driver for the application. |
| The cables might not be connected properly. | Reconnect all cables. |
| Printer memory might be overloaded. | Reset the printer by turning it off for 1 min, and then turn it back on. |

Printer will not print

Use this information to troubleshoot the computer.

| Cause | Solution |
|------------------------------------|---|
| The printer might be out of paper. | Check the paper tray, and refill it if it is empty. |

Solving keyboard and mouse problems

If you encounter keyboard or mouse problems, see the documentation that came with the equipment and the common causes and solutions listed in these tables.

Keyboard commands and typing are not recognized by the computer

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| Keyboard connector is not properly connected. | Shut down the computer, reconnect the keyboard, and then restart the computer. |
| Program in use has stopped responding to commands. | Shut down your computer using the mouse, and then restart the computer. |
| Keyboard needs repairs. | See the Worldwide Limited Warranty for terms and conditions. |

Computer is in the Sleep state.

Press the power button to resume from the Sleep state.

IMPORTANT: When attempting to resume from the Sleep state, do not hold down the power button for more than 4 seconds. Otherwise, the computer will shut down, and you will lose any unsaved data.

Mouse does not respond to movement or is too slow

Use this information to troubleshoot the computer.

| Cause | Solution |
|---|---|
| Mouse connector is not properly plugged into the back of the computer. | Shut down the computer using the keyboard. <ol style="list-style-type: none">1. Press the ctrl and esc keys at the same time (or press the Windows logo key) to display the Start menu.2. Use the arrow keys to scroll to and select the power icon at the top right on the menu, and then press enter.3. Use the arrow keys to select Shut Down, and then press enter.4. After the shutdown is complete, plug the mouse connector into the back of the computer (or the keyboard) and restart. |
| Program in use has stopped responding to commands. | Shut down the computer using the keyboard, and then restart the computer. |
| Mouse might need repair. | See the Worldwide Limited Warranty for terms and conditions. |
| Computer is in the Sleep state. | Press the power button to resume from the Sleep state. <p>IMPORTANT: When attempting to resume from the Sleep state, do not hold down the power button for more than 4 seconds. Otherwise, the computer will shut down, and you will lose any unsaved data.</p> |
| If using a wireless mouse, you might need to resynchronize the mouse with the computer. | Follow the instructions that came with the mouse. |

Solving hardware installation problems

You might need to reconfigure the computer when you add or remove hardware, such as an additional drive or expansion card.

If you install a plug and play device, Windows automatically recognizes the device and configures the computer. If you install a device that is not plug and play, you must reconfigure the computer after completing installation of the new hardware. In Windows, use the **Add Hardware Wizard**, and follow the instructions that appear on the screen.

To open the Add Hardware Wizard, open a command prompt and type .

⚠ WARNING! When the computer is plugged into an AC power source, voltage is always applied to the system board. To reduce the risk of personal injury from electrical shock, hot surfaces, or both, be sure to disconnect the power cord from the AC outlet and allow the internal system components to cool before touching.

A new device is not recognized as part of the system

Use this information to troubleshoot the computer.

| Cause | Solution |
|---|--|
| Cables of new external device are loose or power cables are unplugged. | Be sure that all cables are properly and securely connected and that pins in the cable or connector are not bent down. |
| Power switch of new external device is not turned on. | Turn off the computer, turn on the external device, and then turn on the computer to integrate the device with the computer system. |
| When the system advised you of changes to the configuration, you did not accept them. | Reboot the computer and follow the instructions for accepting the changes. |
| A plug and play board might not automatically configure when added if the default configuration conflicts with other devices. | Use Windows Device Manager to clear the automatic settings for the board, and choose a basic configuration that does not cause a resource conflict. You can also use Computer Setup to reconfigure or disable devices to resolve the resource conflict. To access Device Manager in Windows, type <code>device manager</code> in the taskbar search box, and then select Device Manager from the list of applications. |

USB ports on the computer are disabled in Computer Setup.

Run the Computer Setup utility and ensure that **Device available** is selected for appropriate USB ports under **Advanced > Port Options**.

Computer will not start

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| Wrong memory modules were used in the upgrade, or memory modules were installed in the wrong location. | <ol style="list-style-type: none">1. Review the documentation that came with the system to determine if you are using the correct memory modules and to verify the proper installation. NOTE: DIMM1 or XMM1 must always be installed. DIMM1 must be installed before DIMM3.2. Observe the beeps and lights on the front of the computer. Beeps and blinking lights are codes for specific problems.3. If you still cannot resolve the issue, contact Customer Support. |

Power light blinks red three times and then white two times

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| Memory is installed incorrectly or is bad. | <p>IMPORTANT: To avoid damage to the DIMMs or the system board, you must unplug the computer power cord before attempting to reseat, install, or remove a DIMM module.</p> <ol style="list-style-type: none">1. Reseat DIMMs. Turn on the system.2. Replace DIMMs one at a time to isolate the faulty module. NOTE: DIMM1 or XMM1 must always be installed. DIMM1 must be installed before DIMM3.3. Replace third-party memory with HP memory.4. Replace the system board. |

Solving network problems

Some common causes and solutions for network problems are listed in these tables. The guidelines do not discuss the process of debugging the network cabling.

Network driver does not detect network controller

Use this information to troubleshoot the computer.

| Cause | Solution |
|---------------------------------|--|
| Network controller is disabled. | <ol style="list-style-type: none">1. Run Computer Setup and enable network controller.2. Enable the network controller in the operating system using Device Manager. To access Device Manager in Windows, type <code>device manager</code> in the taskbar search box, and then select Device Manager from the list of applications. |

Incorrect network driver.

Check the network controller documentation for the correct driver or obtain the latest driver from the manufacturer's website.

Network status link light never blinks

Use this information to troubleshoot the computer.



NOTE: The network status light is supposed to blink when there is network activity.

| Cause | Solution |
|--|--|
| No active network is detected. | Check cabling and network equipment for proper connection. |
| Network controller is not set up properly. | Check for the device status within Windows, such as Device Manager for driver load and the Network Connections applet within Windows for link status. To access Device Manager in Windows, type <code>device manager</code> in the taskbar search box, and then select Device Manager from the list of applications. |
| Network controller is disabled. | <ol style="list-style-type: none">1. Run Computer Setup and enable network controller.2. Enable the network controller in the operating system using Device Manager. To access Device Manager in Windows, type <code>device manager</code> in the taskbar search box, and then select Device Manager from the list of applications. |
| Network driver is not properly loaded. | Reinstall network drivers. |
| System cannot autosense the network. | Disable autosensing capabilities, and force the system into the correct operating mode. |

Diagnostics reports a failure

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| The cable is not securely connected. | Be sure that the cable is securely attached to the network connector and that the other end of the cable is securely attached to the correct device. |
| The cable is attached to the incorrect connector. | Be sure that the cable is attached to the correct connector. |
| There is a problem with the cable or a device at the other end of the cable. | Be sure that the cable and device at the other end are operating correctly. |
| The network controller is defective. | Contact an authorized service provider. |

Diagnostics passes, but the computer does not communicate with the network

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|---|
| Network drivers are not loaded, or driver parameters do not match current configuration. | Be sure that the network drivers are loaded and that the driver parameters match the configuration of the network controller. Be sure that the correct network client and protocol is installed. |

The network controller is not configured for this computer.

Select the **Network and Sharing Center** icon in the **Control Panel**, and configure the network controller.

To access Control Panel in Windows, type `control panel` in the taskbar search box, and then select **Control Panel** from the list of applications.

Network controller stopped working when an expansion board was added to the computer

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| The network controller requires drivers. | Verify that the drivers were not accidentally deleted when the drivers for a new expansion board were installed. |

Network controller stops working without apparent cause

Use this information to troubleshoot the computer.

| Cause | Solution |
|--------------------------------------|---|
| The cable is not securely connected. | Be sure that the cable is securely attached to the network connector, and that the other end of the cable is securely attached to the correct device. |
| The network controller is defective. | Contact an authorized service provider. |

Cannot connect to network server when attempting remote system installation

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| The network controller is not configured properly. | Verify network connectivity, that a DHCP Server is present, and that the Remote System Installation Server contains the network interface card (NIC) drivers for your NIC. |

System setup utility reports unprogrammed EEPROM

Use this information to troubleshoot the computer.

| Cause | Solution |
|----------------------|---|
| Unprogrammed EEPROM. | Contact an authorized service provider. |

Solving memory problems

If you encounter memory problems, some common causes and solutions are listed in these tables.



IMPORTANT: Power can still be supplied to the DIMMs when the computer is turned off (depending on the Management Engine (ME) settings). To avoid damage to the DIMMs or the system board, you must unplug the computer power cord before attempting to reseat, install, or remove a memory module.

For those systems that support ECC memory, HP does not support mixing ECC and non-ECC memory. Otherwise, the computer will not boot the operating system.



NOTE: The memory count will be affected by configurations with the Management Engine (ME) enabled. The ME uses 8 MB of system memory in single-channel mode or 16 MB of memory in dual-channel mode to download, decompress, and execute the ME firmware for Out-of-Band (OOB), third-party data storage, and other management functions.

System will not boot or does not function properly after installing additional memory modules

Use this information to troubleshoot the computer.

| Cause | Solution |
|---|---|
| A memory module is not installed in the DIMM1 or XMM1 socket. | Verify that a memory module is installed in the DIMM1 or XMM1 socket on the system board. This socket must be populated with a memory module. |
| Memory module is not the correct type or speed grade for the system, or the new memory module is not seated properly. | Replace module with the correct industry-standard device for the computer. On some models, ECC and non-ECC memory modules cannot be mixed. |

Out of memory error

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|---|
| You have run out of memory to run the application. | Check the application documentation to determine the memory requirements. |

Memory count during POST is wrong

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|---|
| The memory modules might not be installed correctly. | Check that the memory modules have been installed correctly and that proper modules are used. |
| Integrated graphics might use system memory. | No action required. |

Insufficient memory error during operation.

Use this information to troubleshoot the computer.

| Cause | Solution |
|---|---------------------------------------|
| Too many Terminate and Stay Resident programs (TSRs) are installed. | Delete any TSRs that you do not need. |

You have run out of memory for the application.

Check the memory requirements for the application or add more memory to the computer.

Power light blinks red five times followed by a two-second pause and the computer beeps five times (beeps stop after fifth iteration but lights continue blinking)

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| Memory is installed incorrectly or is bad. | <ol style="list-style-type: none">1. Reseat DIMMs. Turn on the system.2. Replace DIMMs one at a time to isolate the faulty module.3. Replace third-party memory with HP memory.4. Replace the system board. |

Solving USB flash drive problems

If you encounter USB flash drive problems, common causes and solutions are listed in these tables.

USB flash drive is not seen as a drive letter in Windows

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|---|
| The drive letter after the last physical drive is not available. | Change the default drive letter for the flash drive in Windows. |

USB flash drive not found (identified)

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|---|
| The device is attached to a USB port that has been hidden in Computer Setup. | Run the Computer Setup utility and enable USB ports in Advanced > Port Options . |
| The device was not properly seated before startup. | Be sure that the device is fully inserted into the USB port before applying power to the system |

System will not boot from USB flash drive

Use this information to troubleshoot the computer.

| Cause | Solution |
|----------------------------|---|
| Boot order is not correct. | Run the Computer Setup utility, and change boot sequence in Advanced > Boot Options . |

Removable Media Boot is disabled in the Computer Setup utility.

Run the Computer Setup utility, and enable booting to removable media in **Advanced > Boot Options**. Be sure that USB is enabled in **Storage > Boot Order**.

The computer boots to DOS after making a bootable flash drive

Use this information to troubleshoot the computer.

| Cause | Solution |
|---------------------------|--|
| Flash drive is bootable. | Install the flash drive only after the operating system boots. |
| Flash drive is defective. | Try a different flash drive. |

Solving internet access problems

If you encounter internet access problems, consult your internet service provider (ISP), or see the common causes and solutions listed in these tables.

Unable to connect to the internet

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| Internet Service Provider (ISP) account is not set up properly. | Verify Internet settings, or contact your ISP for assistance. |
| Web browser is not set up properly. | Verify that the web browser is installed, and set up to work with your ISP. |
| Cable/DSL modem is not plugged in. | Plug in cable/DSL modem. You should see a power light on the front of the cable/DSL modem. |
| Cable/DSL service is not available or has been interrupted due to bad weather. | Try connecting to the internet at a later time or contact your ISP. (If the cable/DSL service is connected, the cable light on the front of the cable/DSL modem will be on.) |
| The CAT5 UTP cable is disconnected. | Connect the CAT5 UTP cable between the cable modem and the computer's RJ-45 connector. (If the connection is good, the PC light on the front of the cable/DSL modem will be on.) |
| IP address is not configured properly. | Contact your ISP for the correct IP address. |

Cookies are corrupted. (A “cookie” is a small piece of information that a web server can store temporarily with the web browser. This is useful for having the browser remember some specific information that the Web server can later retrieve.)

1. Type `control panel` in the taskbar search box, and then select **Control Panel** from the list of applications.
2. Select **Internet Options**.
3. In the **Browsing history** section, select the **Delete** button.
4. Select the **Cookies and website data** check box, and select the **Delete** button.

Cannot automatically launch internet programs

Use this information to troubleshoot the computer.

| Cause | Solution |
|--|--|
| You must log on to your ISP before some programs will start. | Log on to your ISP and launch the program. |

Solving software problems

Most software problems occur as a result of these situations.

- The application was not installed or configured correctly.
- There is insufficient memory available to run the application.
- There is a conflict between applications.
- All the necessary device drivers might not have been installed.
- If you have installed an operating system other than the factory-installed operating system, it might not be supported on the system.

If you encounter software problems, see the applicable solutions listed in the following table.

Computer will not start up and the HP logo does not appear

Use this information to troubleshoot the computer.

| Cause | Solution |
|--------------------------------------|--|
| ROM issue - POST error has occurred. | Observe the beeps and lights on the front of the computer. See the Worldwide Limited Warranty for terms and conditions. |

“Illegal Operation has Occurred” error message is displayed

Use this information to troubleshoot the computer.

| Cause | Solution |
|---|---|
| Software being used is not Microsoft-certified for your version of Windows. | Verify that the software is certified by Microsoft® for your version of Windows (see program packaging for this information). |
| Configuration files are corrupt. | If possible, save all data, close all programs, and restart the computer. |

7 Computer Setup (F10) Utility

This information provides details of the Computer Setup Utility.

- Change settings from the defaults or restore the settings to default values.
- View the system configuration, including settings for processor, graphics, memory, audio, storage, communications, and input devices.
- Modify the boot order of bootable devices such as hard drives or USB flash media devices.
- Enter the Asset Tag or property identification number assigned by the company to this computer.
- Enable the power-on password prompt during system restarts (warm boots) as well as during startup.
- Establish an administrator password that controls access to the Computer Setup (F10) Utility and the settings described in this section.
- Establish minimum requirements for valid passwords, including length and required types of characters.
- Secure integrated I/O functionality, including the serial, USB, or audio, or embedded NIC, so that they cannot be used until they are unsecured.
- Enable or disable different types of boot sources.
- Configure features such as Secure Boot, power management, virtualization support, and language and keyboard type used in Setup and POST.
- Replicate the system setup by saving system configuration information about a USB device and restoring it on one or more computers.
- Enable or disable DriveLock security or securely erase a hard drive (when supported by drive).

Using Computer Setup (F10) Utilities

You can access Computer Setup only by turning the computer on or restarting the system.

To access the Computer Setup Utilities menu, complete these steps:

1. Turn on or restart the computer.
2. Repeatedly press **f10** when the power button light turns white to access the utility.

You can also press **esc** to see a menu that allows you to access different options available at startup, including the Computer Setup utility.

A choice of four headings appears in the Computer Setup Utilities menu: Main, Security, Advanced, and UEFI Drivers.


 **NOTE:** If you do not press **f10** at the appropriate time, you must restart the computer and again repeatedly press **f10** when the power button light turns white to access the utility.

 **NOTE:** Selecting UEFI Drivers restarts the computer into the third-party option ROM management application. You can access this application directly by pressing **f3** during startup.

3. Use the arrow (left and right) keys to select the appropriate heading. Use the arrow (up and down) keys to select the option you want, and then press **enter**. To return to the Computer Setup Utilities menu, press **esc**.
4. To apply and save changes, select **Main > Save Changes and Exit**.
 - If you have made changes that you do not want applied, select **Ignore Changes and Exit**.
 - To restore settings from the Advanced and Main menus to original values, select **Apply Factory Defaults and Exit**.
 - To restore settings from the Advanced and Main menus to those previously saved by **Save Custom Defaults**, select **Apply Custom Defaults and Exit**. If no custom defaults have been saved, factory defaults are used.

 **NOTE:** You cannot modify settings in the Security menu by selecting **Apply Defaults**. You reset those values by selecting **Restore Security Settings to Factory Defaults** at the bottom of the **Security** menu.

 **NOTE:** Not all settings shown in the following sections are available for all models.

 **IMPORTANT:** Do not turn computer power off while the BIOS is saving the Computer Setup (F10) changes because the settings could become corrupted. It is safe to turn off the computer only after exiting the F10 Setup screen.

Computer Setup Main

This table provides information about the Computer Setup Main menu.


 **NOTE:** Support for specific Computer Setup options can vary, depending on the hardware configuration.

Table 7-1 Computer Setup Main

| Option | Description |
|---------------------------|---|
| System Information | Lists all information in following list if Advanced System Information is selected. Lists smaller subset if Basic System Information is selected. <ul data-bbox="531 331 935 1686" style="list-style-type: none"><li data-bbox="531 331 703 359">• Product name<li data-bbox="531 384 772 411">• Installed memory size<li data-bbox="531 436 708 464">• Processor type<li data-bbox="531 489 858 516">• Processor cache size (L1/L2/L3)<li data-bbox="531 541 724 569">• Processor speed<li data-bbox="531 594 743 621">• MicroCode revision<li data-bbox="531 646 746 674">• Processor stepping<li data-bbox="531 699 708 726">• Memory speed<li data-bbox="531 751 906 779">• DIMM size (for each installed module)<li data-bbox="531 804 759 831">• System BIOS version<li data-bbox="531 856 858 884">• ME Firmware version (Intel only)<li data-bbox="531 909 743 936">• Video BIOS version<li data-bbox="531 961 788 989">• Reference code revision<li data-bbox="531 1014 815 1041">• Super I/O firmware version<li data-bbox="531 1066 935 1094">• USB Type-C® controller firmware version<li data-bbox="531 1119 692 1146">• Born on date<li data-bbox="531 1171 703 1199">• Serial number<li data-bbox="531 1224 687 1251">• SKU number<li data-bbox="531 1276 887 1304">• UUID (Universally Unique Identifier)<li data-bbox="531 1329 778 1356">• Asset tracking number<li data-bbox="531 1381 692 1409">• Feature byte<li data-bbox="531 1434 644 1461">• Build ID<li data-bbox="531 1486 708 1514">• Product family<li data-bbox="531 1539 724 1566">• System board ID<li data-bbox="531 1591 799 1619">• System board CT number<li data-bbox="531 1644 676 1671">• Panel type<li data-bbox="531 1696 756 1724">• Panel serial number<li data-bbox="531 1749 788 1776">• Integrated MAC Address |

Table 7-1 Computer Setup Main (continued)

| Option | Description |
|---------------------------|--|
| System Diagnostics | <p>If the hard drive has the HP Advanced Diagnostics installed, the application launches. If HP Advanced Diagnostics is not installed, a basic version that is built into the BIOS provides the capability to perform the following functions:</p> <ul style="list-style-type: none">• Memory Test• Hard Drive Check• Language |
| BIOS Event Log | <p>View BIOS Event Log</p> <p>Displays a list of events, alerts, or warnings that have been logged since the log was last cleared.</p> <p>Export to USB Key</p> <p>Saves a file named BiosEventLog.txt containing the log entries to an inserted USB storage device.</p> <p>Clear BIOS Event Log on Next Boot</p> <p>When selected, the BIOS clears the event log when the user saves and exits. Default is disabled.</p> |

Table 7-1 Computer Setup Main (continued)

| Option | Description |
|---------------------------|--|
| Update System BIOS | <p>Lets you update the system BIOS from www.hp.com or another network server, from a removable USB drive, or from a file located on the hard drive.</p> |
| | <p>Check [current selection] for BIOS Updates</p> |
| | <p>The string that appears here depends on the setting in BIOS Update Preferences.</p> |
| | <p>Lock BIOS Version</p> |
| | <p>If this option is selected, the system is locked to the current BIOS version, and updates are not allowed.</p> |
| | <p>Native OS Firmware Update Service</p> |
| | <p>Allows the operating system to drive firmware updates (for example, Windows Update).</p> |
| | <p>BIOS Rollback Policy</p> |
| | <ul style="list-style-type: none">■ Unrestricted Rollback to older BIOS: Lets you roll back to any previous version of BIOS.■ Restricted Rollback to older BIOS: If selected, Minimum BIOS Version becomes active, which lets you manually enter the minimum BIOS version that you can roll back to. |
| | <p>Minimum BIOS Version</p> |
| | <p>Defaults to current version. Read-only unless restricted rollback is selected.</p> |
| | <p>Allow BIOS Updates Using a Network</p> |
| | <p>Lets you configure scheduled, automatic BIOS updates through the network.</p> |
| | <p>BIOS Update Preferences</p> |
| | <ul style="list-style-type: none">■ Check for Update on Next Reboot: Default is disabled.■ BIOS Source: Lets you select either HP.com or a custom URL. If Custom URL is selected, Edit Custom URL becomes active. HP recommends using a custom URL only for a managed IT environment. |
| | <p>Automatic BIOS Update Setting</p> |
| | <p>Allows configuration of a periodic check for updates:</p> |
| | <p>NOTE: If Windows BitLocker Drive Encryption (BDE) is enabled, it must be temporarily suspended before the BIOS is flashed.</p> |
| | <ul style="list-style-type: none">■ Do not update■ Checking for updates and prompt the user to accept or reject the update at that time■ Checking for updates and install all new versions■ Checking for updates and install only new versions marked important |
| | <p>BIOS Update Frequency</p> |
| | <ul style="list-style-type: none">■ Daily■ Weekly■ Monthly (default) |
| | <p>Network Configuration Settings</p> |
| | <p>Lets you configure the network connection to the server that is the host for system firmware updates.</p> |
| | <p>Update BIOS Using Local Media</p> |
| | <p>Lets you access files on either USB storage or the hard drive. The HP BIOS Update and Recovery application included in BIOS Softpaqs at www.hp.com copies the BIOS file to the correct location on the hard drive or USB device.</p> |

Table 7-1 Computer Setup Main (continued)

| Option | Description |
|--|--|
| Change date and time | Lets you update system date and time. |
| System IDs | Lets you set the following values: <ul style="list-style-type: none"> • Asset Tracking Number • Ownership Tag |
| Replicated Setup | <p>Back up current settings to USB device</p> <p>Saves system configuration to a formatted USB flash media device.</p> <p>Restore current settings from USB device</p> <p>Restores system configuration from a USB flash media device.</p> |
| Save Custom Defaults | Saves the current system configuration settings as the custom default set. |
| Apply Custom Defaults and Exit | Applies the custom default settings to the computer after rebooting. Does not apply to options in the Security menu. |
| Apply Factory Defaults and Exit | Restores the factory system configuration settings to the computer after rebooting. Does not apply to options in the Security menu. |
| Ignore Changes and Exit | Exits Computer Setup without applying or saving any changes. |
| Save Changes and Exit | Saves changes to current system configuration, exits Computer Setup, and reboots. |

Computer Setup Security

This table provides information about the Computer Setup Security menu.



NOTE: Support for specific Computer Setup options can vary, depending on the hardware configuration.

Table 7-2 Computer Setup Security

| Option | Description |
|---|---|
| Create BIOS Administrator Password | <p>Lets you set and enable a BIOS administrator password, which controls access to the following features:</p> <ul style="list-style-type: none"> • Setup Menu (F10) • Third Party Option ROM Management (F3) • Update system ROM • WMI commands that change system settings • BIOS Configuration Utility (BCU) • Alternative power-on password <p>NOTE: Creating a BIOS user disables the Fast Boot option.</p> |
| Change BIOS Administrator Password (This selection is active only if a BIOS administrator password is set.) | <p>Lets you change the BIOS administrator password.</p> <p>You must know the current password to be able to change it.</p> |

Table 7-2 Computer Setup Security (continued)

| Option | Description |
|---|---|
| Create POST Power-On Password | Lets you change or delete power-on password. The power-on password prompt appears after a power cycle or reboot. If the user does not enter the correct power-on password, the unit will not boot. |
| Change POST Power-On Password (This selection is active only if a BIOS administrator password is set.) | Lets you change the POST power-on password. You must know the current password to be able to change it. |
| Password Policies | Let you set the guidelines for a valid password. Options include: <ul style="list-style-type: none">• Password minimum length• Requires at least one symbol• Requires at least one number• Requires at least one uppercase character• Requires at least one lowercase character• Allow spaces |
| Administrator Authentication Policies | Lets you set limitations on some boot features restricting them to admin only, including: <ul style="list-style-type: none">• Prompt for administrator authorization to access:<ul style="list-style-type: none">– Boot menu in POST– System Recovery– Network boot– BIOS update• Allow the use of administrator credentials to modify the power-on password. |

Table 7-2 Computer Setup Security (continued)

| Option | Description |
|-------------------------------|--|
| Security Configuration | <p data-bbox="507 262 719 287">TPM Embedded Security</p> <ul style="list-style-type: none"> <li data-bbox="507 312 1444 384"> <p data-bbox="507 312 780 338">● TPM Specification Version</p> <p data-bbox="552 363 1083 384">Displays the current Trusted Platform Module (TPM) version.</p> <li data-bbox="507 409 1444 480"> <p data-bbox="507 409 655 434">● TPM Device</p> <p data-bbox="552 464 1114 485">Lets you set the TPM as available or hidden. Default is available.</p> <li data-bbox="507 510 1444 581"> <p data-bbox="507 510 644 535">● TPM State</p> <p data-bbox="552 560 948 581">Select to enable the TPM. Default is disabled.</p> <li data-bbox="507 606 1444 779"> <p data-bbox="507 606 643 632">● Clear TPM</p> <p data-bbox="552 657 1366 707">Select to reset the TPM to an unowned state. After the TPM is cleared, it is also turned off. To temporarily suspend TPM operations, turn the TPM off instead of clearing it. Default is no.</p> <p data-bbox="552 732 1426 783">IMPORTANT: Clearing the TPM resets it to factory defaults and turns it off. You will lose all created keys and data protected by those keys.</p> <li data-bbox="507 804 1444 976"> <p data-bbox="507 804 743 829">● TPM Activation Policy</p> <ul style="list-style-type: none"> <li data-bbox="552 854 692 875">○ F1 to boot <li data-bbox="552 900 850 921">○ Allow user to reject (default) <li data-bbox="552 947 707 968">○ No prompts <p data-bbox="507 1001 639 1026">BIOS Sure Start</p> <ul style="list-style-type: none"> <li data-bbox="507 1052 1278 1073">● Verify Boot Block on every boot: Select to enable HP Sure Start. Default is disabled. <li data-bbox="507 1098 1444 1228">● BIOS Data Recovery Policy: Select Automatic or Manual to determine data recovery process. Manual recovery is intended only for situations when you want forensic analysis before HP Sure Start recovery. When this policy is set to manual, HP Sure Start will not correct any issues that are found until the local user enters the manual recovery key sequence. This can result in a computer that cannot boot until the manual recovery key sequence is entered. <li data-bbox="507 1253 1444 1404">● Network Controller Configuration Restore: Select to restore the network controller parameters to the factory state saved in the HP Sure Start Private nonvolatile (flash) memory. This setting is available only on computers with built-in NIC. <ul style="list-style-type: none"> <li data-bbox="552 1354 1398 1404">NOTE: This process can take up to 30 seconds. You need to restore this only when the Network Controller Configuration mismatch warning is set. <li data-bbox="507 1430 1444 1480">● Dynamic Runtime Scanning of Boot Block: Verifies the integrity of the BIOS boot block region several times each hour while the computer is running. Default is enabled. <li data-bbox="507 1505 1444 1606">● Sure Start BIOS Settings Protection: When enabled, HP Sure Start locks all critical BIOS settings and provides enhanced protection for these settings using nonvolatile (flash) memory. Default is off. <ul style="list-style-type: none"> <li data-bbox="552 1577 1182 1606">NOTE: An administrator password must be set to activate this setting. <li data-bbox="507 1631 1444 1682">● Sure Start Secure Boot Keys Protection: Saves a backup copy of Secure Boot Keys so that they can be recovered if someone attempts to alter them in an unauthorized manner. <li data-bbox="507 1707 1444 1808">● Enhanced HP Firmware Runtime Intrusion Prevention and Detection: Enables monitoring of HP system firmware executing out of main memory while the operating system is running. Any anomalies detected in HP system firmware that is active while the operating system is running will result in a Sure Start security event being generated. <li data-bbox="507 1833 1444 1955">● Sure Start Security Event Policy. Controls HP Sure Start behavior upon identifying a critical security event (any modification to HP firmware) while the operating system is running. <ul style="list-style-type: none"> <li data-bbox="552 1900 1422 1950">– Log Event Only: HP Sure Start will log all critical security events in the HP Sure Start audio log within the HP Sure Start nonvolatile (flash) memory. <li data-bbox="552 1976 1444 2026">– Log Event and notify user: In addition to logging all critical security events, HP Sure Start will notify the user within the operating system that a critical event has occurred. <li data-bbox="552 2051 1444 2100">– Log Event and power off system: In addition to logging all critical security events, HP Sure Start turns off the computer upon detecting a HP Sure Start Security Event. Because of the potential |

Table 7-2 Computer Setup Security (continued)

| Option | Description |
|--|---|
| Utilities | <p data-bbox="528 258 695 285">Hard Drive Utilities</p> <ul style="list-style-type: none"> <li data-bbox="528 310 1461 411"> <p data-bbox="528 310 927 338">● Save/Restore GPT of System Hard Drive</p> <p data-bbox="576 359 1461 411">Enabling this feature saves the GUID Partition Table (GPT) of the system hard drive. If the GPT is subsequently changed, the user is prompted to choose whether to restore GPT. Default is disabled.</p> <li data-bbox="528 432 1461 506"> <p data-bbox="528 432 879 459">● Boot Sector (GPT) Recovery Policy</p> <p data-bbox="576 485 1134 506">Allows selection of the default action when a GPT event occurs.</p> <li data-bbox="528 527 1461 1052"> <p data-bbox="528 527 855 554">● DriveLock/Automatic DriveLock</p> <p data-bbox="576 579 1461 680">Allows you to assign or modify a master or user password for hard drives. When this feature is enabled, the user is prompted to provide one of the DriveLock passwords during POST. If neither is successfully entered, the hard drive remains inaccessible until one of the passwords is successfully provided during a subsequent cold-boot sequence.</p> <p data-bbox="576 705 1461 758">NOTE: This selection appears only when at least one drive that supports the DriveLock feature is attached to the system.</p> <p data-bbox="576 783 1414 810">IMPORTANT: Be aware that these settings take place immediately. It is not necessary to save.</p> <p data-bbox="576 835 1406 888">IMPORTANT: Be sure to document the DriveLock password. Losing a DriveLock password will render a drive permanently locked.</p> <p data-bbox="576 913 1461 961">NOTE: Disable DriveLock on NVMe drives before using applications for hardware-based encryption. After you select a drive, the following options are available:</p> <ul style="list-style-type: none"> <li data-bbox="576 982 1445 1010">- Set DriveLock Master Password. Sets the drive's master password but does not enable DriveLock. <li data-bbox="576 1035 1222 1056">- Enable DriveLock. Sets the drive's user password and enables DriveLock. <li data-bbox="528 1077 1461 1251"> <p data-bbox="528 1077 695 1104">● Secure Erase</p> <p data-bbox="576 1129 999 1150">Lets you select a hard drive to completely erase.</p> <p data-bbox="576 1176 1461 1251">After you erase a hard drive with a program that uses Secure Erase firmware commands, no file recovery program, partition recovery program, or other data recovery method can extract data from the drive.</p> <li data-bbox="528 1272 1461 1451"> <p data-bbox="528 1272 943 1299">● Allow OPAL Hard Drive SID Authentication</p> <p data-bbox="576 1325 1461 1451">BIOS supports drive encryption using the DriveLock feature by creating the storage device's ownership key. If BIOS creates the key, any 3rd party applications (including other encryption software) are not allowed to perform certain drive operations such as establishing their own key using SID. Encryption software applications may or may not be limited by SID authentication lockout depending on how they are designed. Default is disabled.</p> |
| Absolute Persistence Module Current State | <p data-bbox="528 1476 1062 1503">Shows the current state of the Absolute Persistence module.</p> <p data-bbox="528 1528 647 1549">Yes: Disabled</p> <p data-bbox="528 1575 647 1598">No: Available</p> |
| System Management Command | <p data-bbox="528 1623 1382 1650">Allows authorized personnel to reset security settings during a service event. Default is enabled.</p> |

Table 7-2 Computer Setup Security (continued)

| Option | Description |
|---|--|
| Restore Security Settings to Factory Default | This action resets security devices, clears BIOS passwords (not including DriveLock), and restores settings in the Security menu to factory defaults. |

Computer Setup Advanced

This table provides information about the Computer Setup Advanced menu.



NOTE: Support for specific Computer Setup options can vary, depending on the hardware configuration.

Table 7-3 Computer Setup Advanced (for advanced users)

| Option | Heading |
|---------------------------|---|
| Display Language | Lets you select the language of the menus in F10 Setup and the keyboard layout. |
| Scheduled Power-On | This feature wakes the system when it is off at a specified date and time. |

Table 7-3 Computer Setup Advanced (for advanced users) (continued)

| Option | Heading |
|---------------------|--|
| Boot Options | <p>Select the devices that the computer can boot from, as well as other options, including:</p> <ul style="list-style-type: none">• Startup Delay (sec): Enabling this feature adds a user-specified delay to the POST process. One purpose for the delay is to provide additional time to activate hotkeys such as esc for the Startup Menu or f10 for Computer Setup.• Fast Boot: Default is enabled.• CD-ROM Boot (select products only): Default is enabled.• USB Storage Boot: Default is enabled.• Network (PXE) Boot: Default is enabled.• After Power Loss: Default is Power Off.<ul style="list-style-type: none">■ Power off: Causes the computer to remain off when power is restored.■ Power on: Causes the computer to turn on automatically as soon as power is restored.■ Previous state: Causes the computer to turn on automatically as soon as power is restored, if it was on when power was lost. <p>NOTE: If the system is configured to Power On from Keyboard Ports (see Power Management Options), this setting is forced to Power On.</p> <ul style="list-style-type: none">• Prompt on Memory Size Change: Default is enabled.• Prompt on Fixed Storage Change: Default is disabled.• Audio Alerts During Boot: Default is enabled. When disabled, most audible beeps from errors, warnings, and password prompts during boot up are suppressed.• Numlock on at boot: Default is disabled.• UEFI Boot Order: Specify the order in which UEFI boot sources are checked for a bootable operating system image. The default boot order is:<ol style="list-style-type: none">1. USB2. SATA DVD3. SATA hard drives4. M.2 devices5. Network boot <p>NOTE: Use the UP and DOWN arrows to highlight an item. Press enter to select. Use the UP and DOWN arrows to move a selected item. Press f5 to enable or disable. Press esc to exit.</p> <p>NOTE: MS-DOS drive lettering assignments might not apply after a non-MS-DOS operating system has started.</p> <p>Shortcut to Temporarily Override Boot Order</p> <p>To boot one time from a device other than the default device specified in Boot Order, restart the computer and press esc (to access the Startup menu) and then f9 (Boot Menu), or only f9 (skipping the Startup menu) when the power button light turns white. After POST is completed, a list of bootable devices is displayed. Use the arrow keys to select the preferred bootable device and press enter. The computer then boots from the selected non-default device for this one time.</p> |

Table 7-3 Computer Setup Advanced (for advanced users) (continued)

| Option | Heading |
|-----------------|---|
| HP Sure Recover | <p data-bbox="504 260 1428 386">HP Sure Recover</p> <p data-bbox="504 310 1428 386">If enabled and HP Sure Recover is launched, the system firmware honors local and remote requests to reinstall the operating system. If it is disabled, all requests to reinstall the operating system are ignored. Default is enabled.</p> <p data-bbox="504 411 1428 436">Recover from Network</p> <p data-bbox="504 462 1428 512">Allows system firmware to retrieve the recovery agent from the network. If disabled, system firmware retrieves the recovery agent from a local drive. Default is enabled.</p> <p data-bbox="504 537 1428 562">Recover after Boot Failure</p> <p data-bbox="504 588 1428 638">If enabled and no bootable UEFI operating system is found, system firmware launches HP Sure Recover. Default is disabled.</p> <p data-bbox="504 663 1428 688">Recover before Boot Failure Recovery</p> <p data-bbox="504 714 1428 789">If enabled and HP Sure Recover is launched because of a boot failure, the user is notified of the boot failure and asked to choose whether to start or cancel HP Sure Recover. This setting is displayed only if Recover after Boot Failure is selected.</p> <p data-bbox="504 814 1428 840">Recovery Agent</p> <p data-bbox="504 865 1428 915">Displays recovery agent information. This information is displayed only if Recover from Network is selected.</p> <p data-bbox="504 940 1428 966">Recovery Image</p> <p data-bbox="504 991 1428 1041">Displays recovery image information. This information is displayed only if Recover from Network is selected.</p> <p data-bbox="504 1066 1428 1092">OS Recovery Image Version.</p> <p data-bbox="504 1117 1428 1167">Display the version of the recovery image stored in the embedded secure storage device. This information is displayed only if an embedded secure storage device is installed.</p> <p data-bbox="504 1192 1428 1218">OS Recovery Driver Version</p> <p data-bbox="504 1243 1428 1293">Display the version of the recovery driver stored in the embedded secure storage device. This information is displayed only if an embedded secure storage device is installed.</p> |

Table 7-3 Computer Setup Advanced (for advanced users) (continued)

| Option | Heading |
|---|---|
| System Options | Configure storage controller for Intel Optane (Intel products only) |
| | Enables the Intel Optane™ memory module. |
| | Configure storage controller for RAID |
| | Enables RAID. Default is enabled. |
| | Limit PCIe Speed (workstation models only) |
| | Lets you restrict the maximum speed of the PCI Express devices to previous generations. The following settings are possible: |
| | - Auto |
| | - Gen 1 (2.5 Gbps) |
| | - Gen 2 (5 Gbps) |
| | - Gen 3 (8 Gbps) |
| | Turbo-boost (Intel products only) |
| | Allows Intel Turbo Boost Technology to improve performance when operation conditions allow. Default is enabled. |
| | Hyperthreading (Intel products only) |
| | Lets you control processor capability. Default is enabled. |
| | Virtualization Technology (VTx) (Intel only) |
| | Controls the virtualization features of the processor. Changing this setting requires turning the computer off and then back on. Default is disabled. |
| | Virtualization Technology for Directed I/O (VTd) (Intel only) |
| Controls virtualization DMA remapping features of the chipset. Changing this setting requires turning the computer off and then back on. Default is disabled. | |
| SVM CPU Virtualization (AMD® products only) | |
| Enables AMD-V and AMD-Vi virtualization features on AMD-based systems | |
| Enhanced Hello Sign-in (systems with supporting hardware for biometric identification only) | |
| Allows for secure logon using the Windows Hello feature. | |
| DMA Protection | |
| Enables DMA redirection using IOMMU for enhanced security. Default is enabled. | |
| NOTE: Requires that VTd is enabled. | |
| Pre-boot DMA protection | |
| Secures memory access through DMA to allowed regions prior to operating system startup. | |
| Full encryption of main memory (DRAM) (select products only) | |
| Stores all data to DRAM in an encrypted format. Default is enabled. | |
| PCI slots (vary by product) | |
| Lets you enable or display PCI slots. Default is enabled. | |
| M.2 slots (vary by product) | |
| Lets you enable or display M.2 slots. Default is enabled. | |
| Power Button Override (disable/4 sec/15 sec/30 sec) | |
| Lets you enable and select the number of seconds you have to hold down the power button for it to force the system to turn off. Default is 4 sec. | |

Table 7-3 Computer Setup Advanced (for advanced users) (continued)

| Option | Heading |
|---|--|
| Built-In Device Options | Embedded LAN Controller (select products only) |
| | Select to show the device in the operating system. Default is enabled. |
| | Wake On LAN |
| | Lets you either disable the Wake On LAN feature or configure where the computer boots, including the network or hard drive. Default is boot to network. |
| | LAN Controller Option (1)(2) (select products only) |
| | Enables the integrated network controller in the designated rear option slot. |
| | Dust Filter (select products only) |
| | Default is disabled. |
| | Dust Filter Reminder (Days) (select products only) |
| | Default is 60. |
| | Allow No Panel configuration (All-in-One 1000 series models only) |
| | Allows operation of the base unit without a boot warning when the panel is not installed. |
| | Integrated Video (models with discrete graphics) |
| | Disables the integrated video device. When not using integrated video, disabling the integrated video will free some system memory. |
| | VGA Boot Device (models with discrete graphics) |
| | Selects the graphics controller to use as the primary VGA device during boot-up when there are multiple graphics devices. The firmware can use only one graphics device when booting up. |
| | Video Memory Size |
| | Lets you manage graphics memory allocation. The value you choose is allocated permanently to graphics and is unavailable to the operating system. |
| | Integrated Camera |
| | Lets you disable the integrated camera. Default is enabled. |
| | Audio Device |
| Select to show audio devices in the operating system, including integrated microphone, internal speakers, and headphone out. When selected, operating system visibility of each audio device is controlled independently. When this setting is cleared, all audio devices are hidden from the operating system. Individual audio device settings are also disabled. Default is enabled. | |
| Microphone | |
| Clear to disable the integrated microphone. This does not affect devices plugged into audio jacks. The disable and lock setting prevents other audio ports from being remapped to the microphone function in the operating system. Default is enabled. | |
| Internal Speakers (does not affect external speakers) | |
| Clear to disable the chassis speaker or speakers. This function is applicable to normal audio playback in the operating system and does not affect the error or warning beeps during POST. Default is enabled. | |
| Headphone Output | |
| Clear to disable the headphone jack. Default is enabled. | |
| Collaboration Buttons (select products only) | |
| Clear to disable the collaboration buttons. Default is enabled. | |
| Button Sensitivity (select products only) | |
| Controls touch sensitivity of collaboration buttons. Select from low, medium, or high. | |

Table 7-3 Computer Setup Advanced (for advanced users) (continued)

| Option | Heading |
|---------------------|---|
| Port Options | USB ports (varies by model) |
| | Lets you enable specific USB ports. Default is enabled. |
| | USB Legacy Port Charging |
| | Lets you enable USB charging port capability when the computer is in hibernate or shutdown mode. Default is enabled. |
| | USB Type-C Downstream Charging |
| | Lets you enable USB charging port capability when the computer is in hibernate on or off. Default is enabled. |
| | Media Card Reader/SD_RDR USB |
| | Enables the media card reader connector (labeled SD_RDR) on a desktop. Default is enabled. |
| | SATA (varies by model) |
| | Lets you hide SATA ports from the operating system. Default is enabled (not hidden). |
| | Serial Port (varies by model) |
| | Lets you enable specific serial ports. Default is enabled. |
| | Serial Port Voltage (Retail Point-of-Sale models only; ports vary by model) |
| | Lets you configure powered serial port voltage selection on RPOS units that include this feature. Default is 0 Volts. |

- 0 Volts
- 5 Volts
- 12 Volts

| | |
|---------------------|---|
| Port Options | Cash Drawer Port (Retail Point-of-Sale models only) |
| | Controls whether the cash drawer port can be activated. Default is enabled. |
| | Restrict USB Devices |

Specify the following categories of USB devices to enable:

- Allow all USB devices (default)
- Allow only keyboard and mouse
- Allow all but storage devices and hubs.

When some devices are restricted, the system will disable USB ports that do not meet the allowed criteria. This feature is usually combined with similar policies within the operating system because USB devices can be moved to different ports. The ports disabled by the BIOS remain disabled until the system is restarted.

Table 7-3 Computer Setup Advanced (for advanced users) (continued)

| Option | Heading |
|---------------------------------|---|
| Power Management Options | <p data-bbox="496 258 767 289">Runtime Power Management</p> <p data-bbox="496 310 1417 363">Allows certain operating systems to reduce processor voltage and frequency when the current software load does not require the full capabilities of the processor. Default is enabled.</p> <p data-bbox="496 384 746 415">Extended Idle Power States</p> <p data-bbox="496 436 1417 489">Allows certain operating systems to decrease the processors power consumption when the processor is idle. Default is enabled.</p> <p data-bbox="496 510 754 541">S5 Maximum Power Savings</p> <p data-bbox="496 562 1385 636">Enabling this feature reduces the power of the system as much as possible in the S5 state. Power is removed from the wake up circuitry, the expansion slots, and any management features while in S5. Default is disabled.</p> <p data-bbox="496 657 730 688">SATA Power Management</p> <p data-bbox="496 709 1257 741">Enables or disables SATA bus, device power management, or both. Default is enabled.</p> <p data-bbox="496 762 794 793">PCI Express Power Management</p> <p data-bbox="496 814 1433 867">Enabling this option permits the PCI Express links to use Active Power State Management (ASPM) to enter lower power states while not in use. Default is enabled.</p> <p data-bbox="496 888 778 919">Power On from Keyboard Ports</p> <p data-bbox="496 940 1441 993">When enabled, this feature allows a key press to turn on the system when it is off (S5 state). If using a USB keyboard, you must plug it into one of the rear ports labeled with the keyboard icon. Default is disabled.</p> <p data-bbox="496 1014 778 1045">Unique Sleep State Blink Rates</p> <p data-bbox="496 1066 1393 1119">This feature is designed to provide a visual indication of what Sleep state the system is in. Each Sleep state has a unique blink pattern. Default is disabled.</p> <p data-bbox="496 1140 1137 1161">NOTE: A normal shutdown goes to the S4 state for Windows 8 or later.</p> <p data-bbox="496 1182 738 1213">S0 (On) = solid white light.</p> <p data-bbox="496 1234 1425 1287">S3 (Stand By) = 3 blinks at 1 Hz (50% duty cycle) followed by a pause of 2 seconds (white light), repeated cycles of 3 blinks and a pause.</p> <p data-bbox="496 1308 1361 1360">S4 (Hibernation) = 4 blinks at 1 Hz (50% duty cycle) followed by a pause of 2 seconds (white light), repeated cycles of 4 blinks and a pause.</p> <p data-bbox="496 1381 730 1413">S5 (Soft Off) = Light is off.</p> |

Table 7-3 Computer Setup Advanced (for advanced users) (continued)

| Option | Heading |
|---|--|
| Remote Management Options (Intel only) | Active Management Technology (AMT) |
| | Allows you to discover, repair, and protect networked computing devices. Default is enabled. |
| | USB Key Provisioning Support |
| | Enables AMT provisioning using a USB storage device. Default is disabled. |
| | USB Redirection Support |
| | USB redirection allows USB devices plugged into a client computer to be transparently redirected to the guest operating system. Default is enabled. |
| | Unconfigure AMT on next boot. Resets AMT configuration options on next boot. Default is Do Not Apply. |
| | SOL Terminal Emulation Mode |
| | SOL (serial-over-LAN) terminal emulation mode is only activated during remote AMT (Active Management Technology) redirection operations. The emulation options allow administrators to select which mode works best with their console. Default is ANSI. |
| | Show Unconfigure ME Confirmation Prompt |
| | Requires user confirmation when unconfiguring the Intel Management Engine. Default is enabled. |
| | Verbose Boot Messages |
| | Verbose boot shows additional logging information during startup, which is mainly for debugging if something goes wrong during bootup. Default is enabled. |
| Watchdog Timer | |
| Allows you to set amount of time for a operating system and BIOS watchdog alert to be sent if the timers are not deactivated. BIOS watchdog is deactivated by BIOS and would indicate that a halt occurred during execution if the alert is sent to the management console. An operating system alert is deactivated by the operating system image and would indicate that a hang occurred during its initialization. Default is enabled. | |
| <ul style="list-style-type: none">• OS Watchdog Timer (min.). Default is 5 min.• BIOS Watchdog Timer (min.). Default is 5 min. | |
| CIRA Timeout (min.) | |
| CIRA is Customer Initiated Remote Assistance, an Intel service to help users employing Active Management Technology (AMT). Default is 1. | |

Table 7-3 Computer Setup Advanced (for advanced users) (continued)

| Option | Heading |
|--|---|
| Thunderbolt Options (select products only) | <p data-bbox="501 260 670 289">Thunderbolt Mode</p> <p data-bbox="501 310 1422 365">Enables Thunderbolt™ connections on the Type-C port. When cleared, disables Thunderbolt connections on the Type-C port and disables PCIe tunneling on USB4 connections.</p> <p data-bbox="501 386 986 415">Require BIOS PW to change Thunderbolt Security Level</p> <p data-bbox="501 436 1426 491">When selected, Thunderbolt Security Level cannot be changed unless a BIOS administrator password has been created. This setting cannot be disabled if DMA Protection (System Options) is enabled.</p> <p data-bbox="501 512 743 541">Thunderbolt Security Level</p> <ul data-bbox="501 562 1426 987" style="list-style-type: none"><li data-bbox="501 562 1426 617">• PCIe and DisplayPort – No Security: Any Thunderbolt device detected that requests a PCI-express connection is connected to the system PCI-express bus without approval by the local user.<li data-bbox="501 638 1426 735">• PCIe and DisplayPort – User Authorization (default): Each Thunderbolt peripheral includes a unique identifier used to determine if the device has been previously connected. If the user previously-selected Always Connect for a device, it is automatically connected to the PCI-Express bus when attached.<li data-bbox="501 756 1426 861">• PCIe and DisplayPort – Secure Connect: Offers enhanced protection for authenticating a previously-connected Thunderbolt device beyond relying on its identifier. The device is provisioned with a key when initially connected, and on subsequent connections a challenge-response is implemented to verify the device before it is connected to the PCI-express bus.<li data-bbox="501 882 1426 987">• DisplayPort only: Permits only USB and DisplayPort™ functionality to be available via the Type-C Thunderbolt port. PCI-Express will not be connected from the Thunderbolt device to the internal PCI-express interface, thus any Thunderbolt device that requires PCI-Express will not function correctly. <p data-bbox="501 1008 686 1037">Native PCIe Hot Plug</p> <p data-bbox="501 1058 1002 1087">Enables hot plug support to the system PCI-Express bus.</p> |
| Remote HP PC Hardware Diagnostics | <p data-bbox="501 1104 580 1134">Settings</p> <p data-bbox="501 1155 1437 1209">Sets the configuration for Remote HP PC Hardware Diagnostics, including the URLs used for download and upload and scheduled execution frequency.</p> <p data-bbox="501 1230 903 1260">Execute Remote HP PC Hardware Diagnostics</p> <p data-bbox="501 1281 1366 1335">Select to immediately execute Remote HP PC Hardware Diagnostics based on the how settings are configured. Any unsaved BIOS settings will be lost.</p> |

8 POST error messages

This section lists the error codes, error messages, and the various indicator light and audible sequences that you may encounter during Power-On Self-Test (POST) or computer restart, the probable source of the problem, and steps you can take to resolve the error condition.

POST Message Disabled suppresses most system messages during POST, such as memory count and non-error text messages. If a POST error occurs, the screen will display the error message. To manually switch to the POST Messages Enabled mode during POST, press any key except **f10**, **f11**, or **f12**. The default mode is POST Message Disabled.

The POST mode selection determines the speed at which the computer loads the operating system and the extent to which it is tested.

Quick Boot is a fast startup process that does not run all of the system level tests, such as the memory test. Full Boot runs all of the ROM-based system tests and takes longer to complete.

You can enable Full Boot to run every 1 to 30 days on a regularly scheduled basis. To establish the schedule, reconfigure the computer to the Full Boot Every x Days mode, using Computer Setup.

 **NOTE:** For more information about Computer Setup, see [Computer Setup \(F10\) Utility on page 73](#).

POST numeric codes and text messages

This section identifies those POST errors that have numeric codes associated with them. The section also includes some text messages that you might encounter during POST.


 **NOTE:** The computer beeps once after a POST text message is displayed on the screen.

Table 8-1 POST numeric codes and text messages

| Control panel message | Description | Recommended action |
|-------------------------------|--|--|
| 002-Option ROM Checksum Error | System ROM or expansion board option ROM checksum. | <ol style="list-style-type: none">1. Verify the correct ROM.2. Flash the ROM if needed.3. If an expansion board was recently added, remove it to see if the problem remains.4. Clear CMOS.5. If the message disappears, there might be a problem with the expansion card.6. Replace the system board. |
| 003-System Board Failure | DMA or timers. | <ol style="list-style-type: none">1. Clear CMOS.2. Replace the system board. |

Table 8-1 POST numeric codes and text messages (continued)

| Control panel message | Description | Recommended action |
|--|--|--|
| 005-Real-Time Clock Power Loss | Invalid time or date in configuration memory. RTC (real-time clock) battery might need to be replaced. | Reset the date and time under Control Panel (Computer Setup can also be used). If the problem persists, replace the RTC battery. See the Removal and Replacement section for instructions on installing a new battery. |
| 008-Microcode Patch Error | Processor is not supported by the BIOS. | <ol style="list-style-type: none"> 1. Upgrade BIOS to proper version. 2. Change the processor. |
| 009-PMM Allocation Error during MEBx Download | Memory error during POST execution of the Management Engine (ME) BIOS Extensions option ROM. | <ol style="list-style-type: none"> 1. Reboot the computer. 2. Unplug the power cord, reseal the memory modules, and reboot the computer. 3. If the memory configuration was recently changed, unplug the power cord, restore the original memory configuration, and reboot the computer. 4. If the error persists, replace the system board. |
| 00A-Product Information Not Valid | The product information programmed into the system board is missing or invalid. | Use Computer Setup to update this information. |
| 00B-MEBx Module did not checksum correctly | Memory error during POST execution of the Management Engine (ME) BIOS Extensions option ROM. | <ol style="list-style-type: none"> 1. Reboot the computer. 2. Unplug the power cord, reseal the memory modules, and reboot the computer. 3. If the memory configuration was recently changed, unplug the power cord, restore the original memory configuration, and reboot the computer. 4. If the error persists, replace the system board. |
| 00C-PMM Deallocation Error during MEBx Cleanup | Memory error during POST execution of the Management Engine (ME) BIOS Extensions option ROM. | <ol style="list-style-type: none"> 1. Reboot the computer. 2. Unplug the power cord, reseal the memory modules, and reboot the computer. 3. If the memory configuration was recently changed, unplug the power cord, restore the original memory configuration, and reboot the computer. 4. If the error persists, replace the system board. |

Table 8-1 POST numeric codes and text messages (continued)

| Control panel message | Description | Recommended action |
|--|--|---|
| 00D-Setup Error during MEBx Execution | MEBx selection or exit resulted in a setup failure. | <ol style="list-style-type: none">1. Reboot the computer.2. Unplug the power cord, reseat the memory modules, and reboot the computer.3. If the memory configuration was recently changed, unplug the power cord, restore the original memory configuration, and reboot the computer.4. If the error persists, replace the system board. |
| 00E-Inventory Error during MEBx Execution | BIOS information passed to the MEBx resulted in a failure. | <ol style="list-style-type: none">1. Reboot the computer.2. If the error persists, update to the latest BIOS version.3. If the error still persists, replace the system board. |
| 00F-Interface Error during MEBx Execution | MEBx operation experienced a hardware error during communication with the ME. | <ol style="list-style-type: none">1. Reboot the computer.2. If the error persists, update to the latest BIOS version.3. If the error still persists, replace the system board. |
| 100-Front Audio Not Connected | Front audio cable has been detached or unseated from system board. | Reconnect or replace front audio cable. |
| 2E1-MemorySize Error | Memory amount has changed since the last boot (memory added or removed). | The system memory size is different from the last startup. The most common reason is the removal of memory from the system board. Press the f1 key to save the memory changes. |
| 2E2-Memory Error | Memory module configuration failed during boot-up. | <ol style="list-style-type: none">1. Be sure that memory modules are correctly installed.2. Verify proper memory module type.3. Remove and replace the identified faulty memory modules.4. If the error persists after replacing memory modules, replace the system board. |
| 2E3-Incompatible Memory Module in Memory Socket(s) X, X, ... | A memory module in memory socket identified in the error message is missing critical SPD information, or is incompatible with the chipset. | <ol style="list-style-type: none">1. Verify proper memory module type.2. Try another memory socket.3. Replace with a supported module. |
| 2E4-DIMM Configuration Warning | Populated DIMM Configuration is not optimized. | Rearrange the DIMMs so that each channel has the same amount of memory. |

Table 8-1 POST numeric codes and text messages (continued)

| Control panel message | Description | Recommended action |
|---|---|---|
| 2E5–ECC Memory Module Detected on Unsupported Platform | Recently added memory modules support ECC memory error correction. | <ol style="list-style-type: none"> 1. If additional memory was recently added, remove it to see if the problem remains. 2. Check product documentation for memory support information. |
| 2E6–Memory Not Configured Correctly for Proper MEBx Execution | DIMM1 is not installed. | Be sure that a memory module in the DIMM1 socket and that it is properly seated. |
| 300–Configuration Change Warning | A change in storage configuration has been detected (see the Boot Options menu in BIOS Setup to enable this feature). Either the installed hardware has changed, storage or firmware mode might have been changed, or a storage device might have failed to respond. | If no changes were made before this warning, check that the drives are connected properly to power cables and system board. User Diagnostics (F2 during boot-up) might help identify any problem with specific devices. |
| 301–Hard Disk 1: SMART Hard Drive Detects Imminent Failure | Hard drive will soon fail. (Some hard drives have a hard drive firmware patch that will fix an erroneous error message.) | <ol style="list-style-type: none"> 1. Determine whether hard drive is giving correct error message. Run the Drive Protection System test under using F2 Diagnostics when booting the computer. 2. Apply hard drive firmware patch if applicable. (Available at http://www.hp.com/support.) 3. Back up contents and replace hard drive. |
| 302–Hard Disk 2: SMART Hard Drive Detects Imminent Failure | Hard drive will soon fail. (Some hard drives have a hard drive firmware patch that will fix an erroneous error message.) | <ol style="list-style-type: none"> 1. Determine whether hard drive is giving correct error message. Run the Drive Protection System test under using F2 Diagnostics when booting the computer. 2. Apply hard drive firmware patch if applicable. (Available at http://www.hp.com/support.) 3. Back up contents and replace hard drive. |
| 309 – 30C: Hard Disk 3–6: SMART Hard Drive Detects Imminent Failure | Hard drive will soon fail. (Some hard drives have a hard drive firmware patch that will fix an erroneous error message.) | <ol style="list-style-type: none"> 1. Determine whether hard drive is giving correct error message. Run the Drive Protection System test under using F2 Diagnostics when booting the computer. 2. Apply hard drive firmware patch if applicable. (Available at http://www.hp.com/support.) 3. Back up contents and replace hard drive. |
| 3F0–Boot Device Not Found | Boot device not found. | Insert boot device or load operating system. |

Table 8-1 POST numeric codes and text messages (continued)

| Control panel message | Description | Recommended action |
|---|--|---|
| 3F1–Hard Disk 1 Error | Hard disk 1 error. | <ol style="list-style-type: none"> 1. Check and/or replace cables. 2. Clear CMOS. 3. Replace the hard disk drive. |
| 3F2–Hard Disk 2 Error | Hard disk 2 error. | <ol style="list-style-type: none"> 1. Check and/or replace cables. 2. Clear CMOS. 3. Replace the hard disk drive. |
| 400–Serial Port A Address Conflict Detected | Both external and internal serial ports are assigned to the same resources. | <ol style="list-style-type: none"> 1. Remove any serial port expansion cards. 2. Clear CMOS. 3. Reconfigure card resources and/or run Computer Setup or Windows utilities. |
| 401–Serial Port B Address Conflict Detected | Both external and internal serial ports are assigned to the same resources. | <ol style="list-style-type: none"> 1. Remove any serial port expansion cards. 2. Clear CMOS. 3. Reconfigure card resources and/or run Computer Setup or Windows utilities. |
| 402–Serial Port C Address Conflict Detected | Both external and internal serial ports are assigned to the same resources. | <ol style="list-style-type: none"> 1. Remove any serial port expansion cards. 2. Clear CMOS. 3. Reconfigure card resources and/or run Computer Setup or Windows utilities. |
| 403–Serial Port D Address Conflict Detected | Both external and internal serial ports are assigned to the same resources. | <ol style="list-style-type: none"> 1. Remove any serial port expansion cards. 2. Clear CMOS. 3. Reconfigure card resources and/or run Computer Setup or Windows utilities. |
| 419–Out of Memory Space for Option ROMs | Recently added PCI expansion card contains an option ROM too large to download during POST. | If a PCI expansion card was recently added, remove it to see if the problem remains. |
| 41A–Front USB1/USB2 Not Connected | Front USB cable has been detached or unseated from system board. | Reconnect or replace front USB cable. |
| 41B–Device in PCI Express Slot Failed To Initialize | There is an incompatibility or problem with a PCIe device and the system or PCIe link could not be configured to a valid bus width or speed. | Try rebooting the system. If the error reoccurs, the device might not work with this system |
| 43A–USB Type-C I2C Not Connected | Cable is required between I2C on card and USB-C® on the system board. | Install cable between I2C on card and USB-C on the system board. |
| 43B–More Than One USB type-C Cards Are Installed | More than one USB Type-C card is installed. | Remove USB type-C card so only one is installed. |

Table 8-1 POST numeric codes and text messages (continued)

| Control panel message | Description | Recommended action |
|---|---|--|
| 500–BIOS Recovery | A system BIOS recovery has occurred. | Not applicable. |
| 70x–Wireless Mode Not Supported | The system has detected a wireless module installed in the system that is not supported and has been disabled. | Replace with a supported module. |
| 800–Keyboard Error | Keyboard failure. | <ol style="list-style-type: none"> 1. Reconnect keyboard with computer turned off. 2. Check connector for bent or missing pins. 3. Be sure that none of the keys are pressed. 4. Replace keyboard. |
| 801–Keyboard or System Unit Error | Keyboard failure. | <ol style="list-style-type: none"> 1. Reconnect the keyboard with computer turned off. 2. Be sure that none of the keys are pressed. 3. Replace the keyboard. 4. Replace the system board. |
| 900–CPU Fan Not Detected | CPU fan is not connected or might have malfunctioned. | <ol style="list-style-type: none"> 1. Reseat fan. 2. Reseat fan cable. 3. Replace fan. |
| 901–Chassis, Rear Chassis, Front Chassis, or PCIe blower Fan not Detected | Fan is not connected or might have malfunctioned. | <ol style="list-style-type: none"> 1. Reseat fan. 2. Reseat fan cable. 3. Replace fan. |
| 904–SATA Cabling Error | One or more SATA devices are improperly attached. For optimal performance, the SATA0, SATA1, and SATA2 ports should be used for hard drives before other ports. | Be sure that SATA connectors are used in ascending order. For one device, use SATA0. For two devices, use SATA0 and SATA1. For three devices, use SATA0, SATA1, and SATA2. |
| 90B–Fan Failure | The system has detected that a cooling fan is not operating correctly. | <ol style="list-style-type: none"> 1. Reseat fan. 2. Reseat fan cable. 3. Replace fan. |
| 90D–System Temperature | Thermal shutdown occurred. The system BIOS has detected that your machine was previously shut down to avoid overheating. Overheating might occur if the cooling vents are blocked or the operating temperature exceeds the system specifications. The machine should return to normal operation once the situation is resolved. | Be sure system has proper airflow. |
| 90E–Power Supply Fan Not detected | Power supply fan is not connected or might have malfunctioned. | <ol style="list-style-type: none"> 1. Reseat power supply fan. 2. Reseat fan cable. 3. Replace power supply fan. |

Table 8-1 POST numeric codes and text messages (continued)

| Control panel message | Description | Recommended action |
|---|--|---|
| 910–Filter Warning | Airflow filter is dirty. | Replace the airflow filter. |
| 911–Graphics Module Fan Not Detected | Graphics card fan is not connected or might have malfunctioned. | <ol style="list-style-type: none"> 1. Reseat graphics card fan. 2. Reseat fan cable. 3. Replace graphics card fan. |
| 912–Incorrect CPU cooler installed for this configuration | The processor cooler/heat sink does not match processor power requirement. | Replace the cooler/heat sink to match the processor power requirement. |

Interpreting POST diagnostic front panel lights and audible codes

This section identifies the front panel light codes as well as the audible codes that can occur before or during POST that might not have an error code or text message associated with them.

⚠ CAUTION: When the computer is plugged into an AC power source, voltage is always applied to the system board. To reduce the risk of personal injury from electrical shock and/or hot surfaces, be sure to disconnect the power cord from the AC outlet and allow the internal system components to cool before touching.

During the system validation phase that occurs at system startup, the BIOS validates the functionality of the following subsystems and conditions:

- AC adapter
- System board power
- Processor failure
- BIOS corruption
- Memory failure
- Graphics failure
- System board failure
- BIOS authentication failure

If an error is detected, specific patterns of long and short blinks, accompanied by long and short beeps (where applicable) are used to identify the error. These patterns make up a two-part code:

- Major: The category of the error
- Minor: The specific error within the category

📝 NOTE: Single beep and blink codes are not used.

Table 8-2 Beep pattern error identification

| Number of long beeps/blinks | Error category |
|-----------------------------|----------------|
| 1 | Not used |
| 2 | BIOS |

Table 8-2 Beep pattern error identification (continued)

| Number of long beeps/blinks | Error category |
|-----------------------------|----------------|
| 3 | Hardware |
| 4 | Thermal |
| 5 | System board |

Patterns of blink/beep codes are determined by using the following parameters:

- 1 second pause occurs after the last major blink.
- 2 second pause occurs after the last minor blink.
- Beep error code sequences occur for the first five iterations of the pattern and then stop.
- Blink error code sequences continue until the computer is unplugged or the power button is pressed.



NOTE: Not all diagnostic lights and audible codes are available on all models.

The red LED blinks to represent the major error category (long blinks). The white LED blinks to represent the minor error category (short blinks). For example, '3.5' indicates 3 long red blinks and 5 short white blinks to communicate the processor is not detected.

Table 8-3 Interpreting POST diagnostic front panel lights and audible codes

| Category | Major/minor code | Description |
|----------|------------------|--|
| BIOS | 2.2 | The main area (DXE) of BIOS has become corrupted, and there is no recovery binary image available. |
| | 2.3 | The embedded controller policy requires the user to enter a key sequence. |
| | 2.4 | The embedded controller is checking or recovering the boot block. |
| Hardware | 3.2 | The embedded controller has timed out waiting for BIOS to return from memory initialization. |
| | 3.3 | The embedded controller has timed out waiting for BIOS to return from graphics initialization. |
| | 3.4 | The system board displays a power failure (crowbar).* |
| | 3.5 | The processor is not detected.* |
| | 3.6 | The processor does not support an enabled feature. |
| | 3.7 | The access panel/top cover has been opened since last boot. |
| | Thermal | 4.2 |
| | 4.3 | An ambient temperature over temperature condition has been detected. |
| | 4.4 | An MXM over temperature condition has been detected. |

Table 8-3 Interpreting POST diagnostic front panel lights and audible codes (continued)

| Category | Major/minor code | Description |
|--------------|------------------|--|
| System board | 5.2 | The embedded controller cannot find valid firmware. |
| | 5.3 | The embedded controller has timed out waiting for the BIOS. |
| | 5.4 | The embedded controller has timed out waiting for BIOS to return from system board initialization. |
| | 5.5 | The embedded controller rebooted the system after a possible lockup condition had been detected through the use of a System Health Timer, Automated System Recovery Timer, or other mechanism. |

* Indicates hardware-triggered event; BIOS controls all other events.

9 Password security and resetting CMOS

This computer supports two security password features that you can establish through the Computer Setup Utilities menu: administrator password and power-on password.

When you establish only an administrator password, any user can access all the information on the computer except Computer Setup. When you establish only a power-on password, the power-on password is required to access Computer Setup and any other information on the computer. When you establish both passwords, only the administrator password will give you access to Computer Setup.

When both passwords are set, you can use the administrator password in place of the power-on password as an override to log in to the computer. This feature is useful for a network administrator.



IMPORTANT: Back up the BIOS settings or save them as custom defaults in case you need them later. You can back up in Computer Setup or with the BiosConfigUtility tool available from www.hp.com. See [Computer Setup \(F10\) Utility on page 73](#) for information about backing up the BIOS settings.

Changing a setup or power-on password

Use this procedure to change a password.

To change the power-on or setup password, complete the following steps:

1. Turn on or restart the computer.

To change the setup password, go to step 2.

To change the power-on password, go to step 3.

2. To change the setup password, as soon as the computer turns on:

- Press **esc** while the “Press the ESC key for Startup Menu” message is displayed.

- Press **f10** to enter Computer Setup.

3. When the key icon appears, type your current password, a slash (/) or alternate delimiter character, your new password, another slash (/) or alternate delimiter character, and your new password again as shown:

current password/new password/new password



NOTE: Type the new password carefully because the characters do not appear on the screen.

4. Press **enter**.

The new password will take effect the next time the computer is restarted.

Deleting a setup or power-on password

Use this procedure to delete a password.


To delete the power-on or setup password, complete the following steps:


1. Turn on or restart the computer.
To delete the Setup password, go to step 2.
To delete the Power-on password, go to step 3.
2. To delete the Setup password, as soon as the computer turns on:
 - Press **esc** while the “Press the ESC key for Startup Menu” message is displayed.
 - Press **f10** to enter Computer Setup.
3. When the key icon appears, type your current password, a slash (/) or alternate delimiter character, your new password, another slash (/) or alternate delimiter character, and your new password again as shown:

current password/
4. Press **enter**.

10 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.

 **IMPORTANT:** If you will be performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.


Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB drive or using online tools.

 **IMPORTANT:** Windows is the only option that allows you to back up your personal information. Schedule regular backups to avoid information loss.


 **NOTE:** If computer storage is 32 GB or less, Microsoft® System Restore is disabled by default.


Using the HP Cloud Recovery Download Tool to create recovery media (select products only)

You can use the HP Cloud Recovery Download Tool to create HP Recovery media on a bootable USB flash drive.

For details:

- Go to <http://www.hp.com>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have.

 **NOTE:** If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

 **IMPORTANT:** HP recommends that you follow the [Restoring and recovery methods on page 103](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your

machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the [Restoring and recovery methods on page 103](#).

Creating a system restore


System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.


1. Run a Microsoft System Restore.
2. Run Reset this PC.

 **NOTE:** The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.

3. Recover using HP Recovery media. For more information, see [Recovering using HP Recovery media on page 103](#).

For more information about the first two methods, see the Get Help app:


Select the **Start** button, select the **Get Help** app, and then enter the task you want to perform.

 **NOTE:** You must be connected to the internet to access the Get Help app.

Recovering using HP Recovery media

You can use HP Recovery media to recover the original operating system and software programs that were installed at the factory. On select products, it can be created on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 102](#).

 **NOTE:** If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

To recover your system:

- Insert the HP Recovery media, and then restart the computer.



NOTE: HP recommends that you follow the [Restoring and recovery methods on page 103](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Changing the computer boot order

If your computer does not restart using the HP Recovery media, you can change the computer boot order, the order of devices listed in BIOS for startup information. You can select an optical drive or a USB flash drive, depending on the location of your HP Recovery media.



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

1. Insert the HP Recovery media.
2. Access the system **Startup** menu.
 - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.
 - For tablets without keyboards, turn on or restart the tablet, quickly press and hold the volume up button, and then select **f9**.

– or –

Turn on or restart the tablet, quickly press and hold the volume down button, and then select **f9**.
3. Select the optical drive or USB flash drive from which you want to boot, and then follow the on-screen instructions.

11 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, first you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 106](#).

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

- You have several options after you receive a failure ID:
 - Select **Next** to open the Event Automation Service (EAS) page, where you can log the case.
– or –
 - Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.
– or –
 - Select the box next to the 24-digit failure ID to copy your failure code and send it to support.

Accessing HP PC Hardware Diagnostics Windows

After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Support Assistant or the Start menu.

Accessing HP PC Hardware Diagnostics Windows from HP Help and Support (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Help and Support.

1. Select the **Start** button, and then select **HP Help and Support**.
2. Select **HP PC Hardware Diagnostics Windows**.

3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from Support Assistant

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant.

1. Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.
– or –
Select the question mark icon in the taskbar.
2. Select **Troubleshooting and fixes**.
3. Select **Diagnostics**, and then select **HP PC Hardware Diagnostics Windows**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu.

1. Select the **Start** button, and then select **All apps** (select products only).
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics Windows**, and then select the specific Windows diagnostics version to download to your computer or a USB flash drive.

The tool downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store

You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store.

1. Select the Microsoft Store app on your desktop or enter `Microsoft Store` in the taskbar search box.
2. Enter `HP PC Hardware Diagnostics Windows` in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.



NOTE: For Windows 10 S computers, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 108](#).

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code


When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem:

- Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.

– or –

Contact support, and provide the failure ID code.

 **NOTE:** To start diagnostics on a convertible computer, your computer must be in notebook mode, and you must use the attached keyboard.

 **NOTE:** If you need to stop a diagnostic test, press **esc**.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press **esc**.
2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive

 **NOTE:** To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 108](#).

- b. Hard drive


- c. BIOS

3. When the diagnostic tool opens, select a language, select the type of diagnostic test you want to run, and then follow the on-screen instructions.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.
- The hard drive is damaged.

 **NOTE:** The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version


To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow this procedure.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.

2. Select **Download HP Diagnostics UEFI**, and then select **Run**.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.

 **NOTE:** For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then execute the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, and then select **Find out more**.

Downloading Remote HP PC Hardware Diagnostics UEFI

HP Remote PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.


Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download Remote Diagnostics**, and then select **Run**.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download HP Remote PC Hardware Diagnostics UEFI by product name or number.

 **NOTE:** For some products, you might have to download the software by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.

3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage (such as a hard drive or USB flash drive) to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Main**, and then **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.


12 Statement of memory volatility

For general information regarding nonvolatile memory in HP business computers, and to restore nonvolatile memory that can contain personal data after the system has been turned off and the hard drive has been removed, use these instructions.

HP business computer products that use Intel®-based or AMD®-based system boards contain volatile DDR memory. The amount of nonvolatile memory present in the system depends upon the system configuration. Intel-based and AMD-based system boards contain nonvolatile memory subcomponents as originally shipped from HP, with the following assumptions:



- No subsequent modifications were made to the system.
- No applications, features, or functionality were added to or installed on the system.


Following system shutdown and removal of all power sources from an HP business computer system, personal data can remain on volatile system memory (DIMMs) for a finite period of time and also remains in nonvolatile memory. Use the following steps to remove personal data from the computer, including the nonvolatile memory found in Intel-based and AMD-based system boards.

 **NOTE:** If your tablet has a keyboard base, connect to the keyboard base before beginning steps in this chapter.

Current BIOS steps

Use these instructions to restore nonvolatile memory.

1. Follow these steps to restore the nonvolatile memory that can contain personal data. Restoring or reprogramming nonvolatile memory that does not store personal data is neither necessary nor recommended.
 - a. Turn on or restart the computer, and then quickly press **esc**.
2.  **NOTE:** If the system has a BIOS administrator password, type the password at the prompt.
3.
 - b. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes** to load defaults. The computer restarts.
 - c. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.
4.  **NOTE:** If the system has a BIOS administrator password, type the password at the prompt.
5.
 - d. Select the **Security** menu, select **Restore Security Settings to Factory Defaults**, and then select **Yes** to restore security level defaults. The computer reboots.
 - e. During the reboot, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.

 **NOTE:** If the system has a BIOS administrator password, type the password at the prompt.

- f. If an asset or ownership tag is set, select the **Security** menu and scroll down to the **Utilities** menu. Select **System IDs**, and then select **Asset Tracking Number**. Clear the tag, and then make the selection to return to the prior menu.
- g. If a DriveLock password is set, select the **Security** menu, and scroll down to **Hard Drive Utilities** under the **Utilities** menu. Select **Hard Drive Utilities**, select **DriveLock**, and then clear the check box for **DriveLock password on restart**. Select **OK** to proceed.
- h. Select the **Main** menu, and then select **Reset BIOS Security to factory default**. Select **Yes** at the warning message. The computer reboots.
- i. During the reboot, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- j. Select the **Main** menu, select **Apply Factory Defaults and Exit**, select **Yes** to save changes and exit, and then select **Shutdown**.
 - k. Reboot the system. If the system has a Trusted Platform Module (TPM), fingerprint reader, or both, one or two prompts will appear—one to clear the TPM and the other to Reset Fingerprint Sensor. Press or tap **f1** to accept or **f2** to reject.
 - l. Remove all power and system batteries for at least 24 hours.
2. Complete one of the following:
- Remove and retain the storage drive.
– or –
 - Clear the drive contents by using a third-party utility designed to erase data from an SSD.
– or –
 - Clear the contents of the drive by using the following BIOS Setup Secure Erase command option steps:



NOTE: If you clear data using Secure Erase, you cannot recover it.


- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu and scroll down to the **esc** menu.
- c. Select **Hard Drive Utilities**.
- d. Under **Utilities**, select **Secure Erase**, select the hard drive storing the data you want to clear, and then follow the on-screen instructions to continue.

– or –

Clear the contents of the drive using the following Disk Sanitizer commands steps:

- i. Turn on or restart the computer, and then quickly press **esc**.
- ii. Select the **Security** menu and scroll down to the **Utilities** menu.
- iii. Select **Hard Drive Utilities**.

- iv. Under **Utilities**, select **Disk Sanitizer**, select the hard drive with the data that you want to clear, and then follow the on-screen instructions to continue.

 **NOTE:** The amount of time it takes for Disk Sanitizer to run can take several hours. Plug the computer into an AC outlet before starting.

Nonvolatile memory usage

Use this table to troubleshoot nonvolatile memory usage.

Table 12-1 Troubleshooting steps for nonvolatile memory usage

| Nonvolatile memory type | Amount (Size) | Does this memory store customer data? | Does this memory retain data when power is removed? | What is the purpose of this memory? | How is data entered into this memory? | How is this memory write-protected? |
|---|---------------------------------|---------------------------------------|---|--|---|--|
| HP Sure Start flash (select models only) | 8 MB | No | Yes | Provides protected backup of critical System BIOS code, EC firmware, and critical computer configuration data for select platforms that support HP Sure Start. For more information, see Using HP Sure Start (select products only) on page 117 . | Data cannot be written to this device via the host processor. The content is managed solely by the HP Sure Start Embedded Controller. | This memory is protected by the HP Sure Start Embedded Controller. |
| Real Time Clock (RTC) battery backed-up CMOS configuration memory | 256 bytes | No | Yes | Stores system date and time and noncritical data. | RTC battery backed-up CMOS is programmed using Computer Setup (BIOS), or by changing the Windows date & time. | This memory is not write-protected. |
| Controller (NIC) EEPROM | 64 KB (not customer accessible) | No | Yes | Stores NIC configuration and NIC firmware. | NIC EEPROM is programmed using a utility from the NIC vendor that can be run from DOS. | A utility must be used to write data to this memory and is available from the NIC vendor. Writing data to this ROM in an inappropriate manner will render the NIC nonfunctional. |

Table 12-1 Troubleshooting steps for nonvolatile memory usage (continued)

| Nonvolatile memory type | Amount (Size) | Does this memory store customer data? | Does this memory retain data when power is removed? | What is the purpose of this memory? | How is data entered into this memory? | How is this memory write-protected? |
|--|---|---------------------------------------|---|---|---|---|
| DIMM Serial Presence Detect (SPD) configuration data | 256 bytes per memory module, 128 bytes programmable (not customer accessible) | No | Yes | Stores memory module information. | DIMM SPD is programmed by the memory vendor. | Data cannot be written to this memory when the module is installed in a computer. The specific write-protection method varies by memory vendor. |
| System BIOS | 9 MB | Yes | Yes | Stores system BIOS code and computer configuration data. | System BIOS code is programmed at the factory. Code is updated when the system BIOS is updated. Configuration data and settings are entered using the Computer Setup (BIOS) or a custom utility. | NOTE: Writing data to this ROM in an inappropriate manner can render the computer nonfunctional. A utility must be used for writing data to this memory and is available on the HP website; go to http://www.hp.com/support . Select Find your product , and then follow the on-screen instructions. |
| Intel Management Engine Firmware (present only in select Elite or Z models. For more information, go to http://www.hp.com/support . Select Identify your product for manuals and specific product information , and then follow the on-screen instructions.) | 1.5 MB or 7 MB | Yes | Yes | Stores Management Engine Code, Settings, Provisioning Data and iAMT third-party data store. | Management Engine Code is programmed at the factory. Code is updated via Intel secure firmware update utility. Unique Provisioning Data can be entered at the factory or by an administrator using the Management Engine (MEBx) setup utility. The third-party data store contents can be populated by a remote management console or local applications that have been registered by an administrator to have access to the space. | The Intel chipset is configured to enforce hardware protection to block all direct read-write access to this area. An Intel utility must be used for updating the firmware. Only firmware updates digitally signed by Intel can be applied using this utility. |
| Bluetooth flash (select products only) | 2 megabits | No | Yes | Stores Bluetooth configuration and firmware. | Bluetooth flash is programmed at the factory. Tools for writing data to this memory are not publicly available but can be obtained from the silicon vendor. | A utility must be used for writing data to this memory and is made available through newer versions of the driver whenever the flash requires an upgrade. |


Table 12-1 Troubleshooting steps for nonvolatile memory usage (continued)

| Nonvolatile memory type | Amount (Size) | Does this memory store customer data? | Does this memory retain data when power is removed? | What is the purpose of this memory? | How is data entered into this memory? | How is this memory write-protected? |
|---|--------------------------|---------------------------------------|---|--|---|--|
| 802.11 WLAN EEPROM | 4 kilobits to 8 kilobits | No | Yes | Stores configuration and calibration data. | 802.11 WLAN EEPROM is programmed at the factory. Tools for writing data to this memory are not made public. | A utility must be used for writing data to this memory and is typically not made available to the public unless a firmware upgrade is necessary to address a unique issue. |
| Camera (select products only) | 64 kilobits | No | Yes | Stores camera configuration and firmware. | Camera memory is programmed using a utility from the device manufacturer that can be run from Windows. | A utility must be used for writing data to this memory and is typically not made available to the public unless a firmware upgrade is necessary to address a unique issue. |
| Fingerprint reader (select products only) | 512 KB flash | Yes | Yes | Stores fingerprint templates. | Fingerprint reader memory is programmed by user enrollment in HP ProtectTools Security Manager. | Only a digitally signed application can make the call to write to the flash. |

Questions and answers

Use this section to answer your questions about nonvolatile memory.

1. How can the BIOS settings be restored (returned to factory settings)?

 **IMPORTANT:** The restore defaults feature does not securely erase any information on your hard drive. See question and answer 6 for steps to securely erase information.

The restore defaults feature does not reset the Custom Secure Boot keys. See question and answer 7 for information about resetting the keys.

- Turn on or restart the computer, and then quickly press **esc**.
- Select **Main**, and then select **Apply Factory Defaults and Exit**.
- Follow the on-screen instructions.
- Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

2. What is a UEFI BIOS, and how is it different from a legacy BIOS?

The Unified Extensible Firmware Interface (UEFI) BIOS is an industry-standard software interface between the platform firmware and an operating system (OS). It replaces the older BIOS architecture but supports much of the legacy BIOS functionality.

Like the legacy BIOS, the UEFI BIOS provides an interface to display the system information and configuration settings and to change the configuration of your computer before an OS is loaded. BIOS provides a secure runtime environment that supports a Graphic User Interface (GUI). In this environment, you can use either a pointing device (touch screen, touchpad, pointing stick, or USB mouse) or the keyboard to navigate and make menu and configuration selections. The UEFI BIOS also contains basic system diagnostics.

The UEFI BIOS provides functionality beyond that of the legacy BIOS. In addition, the UEFI BIOS works to initialize the computer's hardware before loading and executing the OS; the runtime environment allows the loading and execution of software programs from storage devices to provide more functionality, such as advanced hardware diagnostics (with the ability to display more detailed system information) and advanced firmware management and recovery software.

HP has provided options in Computer Setup (BIOS) to allow you to run in legacy BIOS, if required by the operating system. Examples of this requirement would be if you upgrade or downgrade the OS.

3. Where is the UEFI BIOS located?

The UEFI BIOS is located on a flash memory chip. You must use a utility to write to the chip.


4. What kind of configuration data is stored on the DIMM Serial Presence Detect (SPD) memory module? How would this data be written?

The DIMM SPD memory contains information about the memory module, such as size, serial number, data width, speed and timing, voltage, and thermal information. This information is written by the module manufacturer and stored on an EEPROM. You cannot write to this EEPROM when the memory module is installed in a computer. Third-party tools do exist that can write to the EEPROM when the memory module is not installed in a computer. Various third-party tools are available to read SPD memory.

5. What is meant by “Restore the nonvolatile memory found in Intel-based system boards”?

This message relates to clearing the Real Time Clock (RTC) CMOS memory that contains computer configuration data.

6. How can the BIOS security be reset to factory defaults and erase the data?

 **IMPORTANT:** Resetting results in the loss of information.

These steps do not reset Custom Secure Boot Keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select **Main**, and then select **Reset Security to Factory Defaults**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

7. How can the Custom Secure Boot Keys be reset?

Secure Boot is a feature to ensure that only authenticated code can start on a platform. If you enabled Secure Boot and created Custom Secure Boot Keys, disabling Secure Boot does not clear the keys. You must also select to clear the Custom Secure Boot Keys. Use the same Secure Boot access procedure that you used to create the Custom Secure Boot Keys, but select to clear or delete all Secure Boot Keys.

- a. Turn on or restart the computer, and then quickly press **esc**.

- b. Select the **Security** menu, select **Secure Boot Configuration**, and then follow the on-screen instructions.
- c. At the **Secure Boot Configuration** window, select **Secure Boot**, select **Clear Secure Boot Keys**, and then follow the on-screen instructions to continue.

Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that continuously monitors your computer's BIOS for attacks or corruption.

If the BIOS becomes corrupted or is attacked, HP Sure Start restores the BIOS to its previously safe state, without user intervention. Those select computer models ship with HP Sure Start configured and enabled. HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. Advanced users can customize the default configuration.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>.

13 Power cord set requirements

The power supplies on some computers have external power switches.

The voltage select switch feature on the computer permits it to operate from any line voltage of 100 V ac–120 V ac or 220 V ac–240 V ac. Power supplies on those computers that do not have external power switches are equipped with internal switches that sense the incoming voltage and automatically switch to the proper voltage.

The power cord set received with the computer meets the requirements for use in the country where you purchased the equipment.

Power cord sets for use in other countries must meet the requirements of the country where you use the computer.

General requirements

These requirements are applicable to all countries.

1. The power cord must be approved by an acceptable accredited agency responsible for evaluation in the country where the power cord set will be installed.
2. The power cord set must have a minimum current capacity of 10A (7A Japan only) and a nominal voltage rating of 125 V ac or 250 V ac, as required by each country's power system.
3. The diameter of the wire must be a minimum of 0.75 mm² or 18AWG, and the length of the cord must be between 1.8 m (6 ft) and 3.6 m (12 ft).

The power cord should be routed so that it is not likely to be walked on or pinched by items placed upon it or against it. Particular attention should be paid to the plug, electrical outlet, and the point where the cord exits from the product.

⚠ WARNING! Do not operate this product with a damaged power cord set. If the power cord set is damaged in any manner, replace it immediately.

Japanese power cord requirements

For use in Japan, use only the power cord received with this product.

📄 IMPORTANT: Do not use the power cord received with this product on any other products.

Country-specific requirements

This information provides additional requirements specific to a country.

Table 13-1 Power cord country-specific requirements

| Country | Accrediting Agency | Country | Accrediting Agency |
|---------------|--------------------|--------------------|--------------------|
| Australia (1) | EANSW | Italy (1) | IMQ |
| Austria (1) | OVE | Japan (3) | METI |
| Belgium (1) | CEBC | Norway (1) | NEMKO |
| Canada (2) | CSA | Sweden (1) | SEMKO |
| Denmark (1) | DEMKO | Switzerland (1) | SEV |
| Finland (1) | SETI | United Kingdom (1) | BSI |
| France (1) | UTE | United States (2) | UL |
| Germany (1) | VDE | | |

1. The flexible cord must be Type H05VV-F, 3-conductor, 0.75mm² conductor size. Power cord set fittings (appliance coupler and plug) must bear the certification mark of the agency responsible for evaluation in the country where it will be used.
2. The flexible cord must be Type SVT or equivalent, No. 18 AWG, 3 conductor. The plug must be a 2-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. Appliance coupler, flexible cord, and plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. Flexible cord must be Type VCT or VCTF, 3-conductor, 0.75 mm² conductor size. Plug must be a 2-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.

14 Specifications

The specifications, input power ratings, and operating specifications in this chapter provide helpful information.

Specifications

This section provides specifications for your computer.

Table 14-1 Mini Conferencing PC specifications

| | Metric | U.S. |
|-----------------------------|--------|--------|
| Mini Conferencing PC | | |
| Dimensions | | |
| Height | 175 mm | 6.9 in |
| Width | 177 mm | 7.0 in |
| Depth | 34 mm | 1.3 in |
| Approximate weight | 1450 g | 3.2 lb |

Table 14-2 HP Presence Control/No Audio Control Console specifications

| | Metric | U.S. |
|---|----------|---------|
| HP Presence Control/No Audio Control Console | | |
| Dimensions | | |
| Height | 193.3 mm | 7.61 in |
| Width | 226.6 mm | 8.92 in |
| Length | 65.2 mm | 2.56 in |
| Approximate weight | 1650 g | 3.64 lb |

Table 14-3 HP Presence Control Plus Console specifications

| | Metric | U.S. |
|---|----------|---------|
| HP Presence Control Plus Control Console | | |
| Dimensions | | |
| Height | 193.3 mm | 7.61 in |
| Width | 226.6 mm | 8.92 in |
| Length | 65.2 mm | 2.56 in |

Table 14-3 HP Presence Control Plus Console specifications (continued)

| | Metric | U.S. |
|--------------------|--------|---------|
| Approximate weight | 4025 g | 8.87 lb |

Input power

The power information in this section might be helpful if you plan to travel internationally with the computer.

The computer operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100 V–240 V, 50 Hz–60 Hz. Although the computer can be powered from a standalone DC power source, it should be powered only with an AC adapter or a DC power source supplied and approved by HP for use with this computer.

The computer can operate on DC power within one or more of the following specifications. The voltage and current for your computer are located on the regulatory label.

Table 14-4 DC power specifications

| Input Power | Rating |
|-------------------------|---------------------------------------|
| Mini conferencing PC | 20 V dc @ 3.25 A / 19.5 V dc @ 4.62 A |
| Control module | 20 V dc @ 3.25 A |
| Control module no audio | 20 V dc @ 3.25 A |
| Premium control module | 19.5 V dc @ 4.62 A |
| Hub | 19.5 V dc @ 4.62 A |
| Camera | 5 V dc @ 1 A |
| Video bar | 20 V dc @ 3.25 A |
| Satellite microphones | 5 V dc @ 1 A |



NOTE: This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.

Operating environment

Use the operating specifications for helpful information when you travel with or store your computer.

Table 14-5 Operating environment specifications

| Factor | Metric | U.S. |
|--|---------------|---------------|
| Temperature | | |
| Operating* | 5°C to 35°C | 41°F to 95°F |
| Nonoperating | –20°C to 60°C | –4°F to 140°F |
| Relative humidity (noncondensing) | | |
| Operating | 10% to 90% | 10% to 90% |
| Nonoperating | 5% to 95% | 5% to 95% |

Table 14-5 Operating environment specifications (continued)

| Factor | Metric | U.S. |
|---|--------------------------|---------------------|
| Maximum altitude (unpressurized) | | |
| Operating | -15 m to 3,048 m | -50 ft to 10,000 ft |
| Nonoperating | -15 m to 12,192 m | -50 ft to 40,000 ft |
| *HP Presence detection 5°C to 25°C | | |

Index

A

- access panel
 - illustrated 23
 - locked 55
 - removal and replacement 36
- Advanced menu, Computer Setup 82
- ambient sensor
 - removal and replacement 46
- audible codes 97
- audio problems 61

B

- backup, creating 102
- backups 102
- battery
 - disposal 27, 32, 34
- battery replacement 44
- beep codes 97
- blinking lights 97
- boot order, changing 104
- booting options
 - Full Boot 91
 - Quick Boot 91

C

- cable management 8, 27, 34, 35
- cable pinouts, SATA data 34
- cable routing 8
- cabling
 - HP Presence mini conferencing PC and Control Plus Center 18
 - HP Presence mini conferencing PC, Control Center, and camera 17
 - HP Presence mini conferencing PC, Control Center, and notebook PC 17
 - HP Presence mini conferencing PC, Control Center, and video bar 18
 - HP Presence mini conferencing PC, Control Plus Center, and camera 18
 - HP Presence mini conferencing PC, Control Plus Center, and video bar 19

- HP Presence mini conferencing PC, Control Plus Center, Control Center, satellite microphones, and video bar 19
- HP Presence mini conferencing PC, hub, and Control Center 18
- camera components 7
- changing a Power-On password 100
- changing a Setup password 100
- cleaning
 - computer 27, 30, 31
 - mouse 27, 30, 32
 - safety precautions 27, 30
- CMOS
 - clearing and resetting 100
- computer cleaning 27, 30, 31
- Computer Setup
 - access problem 55
 - Advanced menu 82
 - Main menu 74
 - Security menu 78
- Computer Setup Utility 73
- Control Center bottom panel, removing 10
- Control Center components 4
- Control Plus Center bottom panel, removing 10
- Control Plus Center components 3
- country power cord set requirements 118, 119
- Customer Support 53

D

- deleting a Power-On password 100
- deleting a Setup password 100

E

- electrostatic discharge (ESD) 27
 - preventing damage 27, 28
- error
 - codes 91, 97
- error messages 91

F

- F10 Setup 73
 - access problem 55
- fan
 - illustrated 23
 - removal and replacement 40
- flash drive problems 70
- flex I/O connector board
 - removal and replacement 47
- front bezel
 - illustrated 23
 - removal and replacement 37

G

- general problems 55
- grounding methods 27, 28

H

- hard drive
 - proper handling 27, 32, 33
 - SATA characteristics 34
- hard drive problems 59
- hardware installation problems 64
- heat sink
 - illustrated 23
 - removal and replacement 47
- helpful hints 54
- HP PC Hardware Diagnostics UEFI
 - downloading 108
 - failure ID code 107
 - starting 108
 - using 107
- HP PC Hardware Diagnostics Windows
 - accessing 105, 106
 - downloading 106, 107
 - failure ID code 105
 - installing 107
 - using 105
- HP Recovery media
 - recovery 103
- HP Sure Start 111, 117
- hub components 5

I

- illustrated parts catalog 23
- input power 121

- installing
 - battery 44
 - memory 38
- internet access problems 71
- K**
- keyboard
 - cleaning 27, 30, 31
 - keyboard problems 63
- L**
- LED flashing indications 9
- lights
 - blinking PS/2 keyboard 97
- locks
 - cable lock 22
 - padlock 22
- M**
- Main menu, Computer Setup 74
- memory
 - nonvolatile 111
 - problems 68
 - removal and replacement 38
 - socket population 38
 - specifications 38
 - volatile 111
- memory module
 - illustrated 23
 - installation 38
- mini conferencing PC
 - front panel components 1
 - rear panel components 2
 - serial number location 3
- miscellaneous parts 26
- mounting fixtures, attaching 11, 14
- mouse
 - cleaning 27, 30, 32
 - problems 63
- Multiport adapter cable
 - illustrated 25
- N**
- network problems 66
- nonvolatile memory 111
- numeric error codes 91
- O**
- operating environment 121
- operating guidelines 27, 30
- overheating, prevention 27, 30

- P**
- password
 - Power-On 100
 - security 100
 - Setup 100
- POST error messages 91
- power cord set requirements
 - country specific 118, 119
- power problems 58
- power supply
 - operating voltage range 120
- Power-On password 100
- Presence 5 m (16.4 ft) USB-C cable
 - illustrated 25
- Presence Control Center
 - illustrated 25
- Presence Control Plus Center
 - illustrated 25
- Presence Mini Conferencing PC
 - illustrated 25
- printer problems 62
- problems
 - audio 61
 - Computer Setup 55
 - F10 Setup 55
 - flash drive 70
 - general 55
 - hard drive 59
 - hardware installation 64
 - internet access 71
 - keyboard 63
 - memory 68
 - mouse 63
 - network 66
 - power 58
 - printer 62
 - software 72
- processor
 - illustrated 23
 - removal and replacement 48
- product ID location 3
- R**
- recovery 102, 103
 - discs 103
 - media 103
 - USB flash drive 103
- recovery media 102
 - creating using HP Cloud Recovery Download Tool 102
 - creating using Windows tools 102

- Remote HP PC Hardware Diagnostics
 - UEFI settings
 - customizing 110
 - using 109
- removal and replacement
 - ambient sensor 46
 - fan 40
 - flex I/O connector board 47
 - front bezel 36, 37
 - heat sink 47
 - memory 38
 - processor 48
 - solid-state drive 41
 - speaker 45
 - system board 49
 - wireless antennas 51
 - WLAN module 42
- removing
 - battery 44
- removing personal data from
 - volatile system memory 111
- restoring 102
- restoring and recovery
 - methods 103
- S**
- safety precautions
 - cleaning 27, 30
- SATA
 - connectors on system board 34
 - data cable pinouts 34
 - hard drive characteristics 34
- satellite microphone component 6
- screws, correct size 27, 32, 33
- security
 - cable lock 22
 - padlock 22
- Security menu, Computer Setup 78
- serial number location 3
- service considerations 27, 32
- Setup password 100
- setup, order of 10
- software
 - problems 72
 - servicing computer 27, 32
- solid-state drive module
 - removal and replacement 41
- speaker
 - illustrated 23
 - removal and replacement 45
- specifications
 - computer 120
 - memory 38
- static electricity 27

- system board
 - illustrated 23
 - removal and replacement 49
 - SATA connectors 34
- system board callouts 51
- system memory, removing personal data from volatile 111
- system restore 103
- system restore point, creating 102

T

- temperature control 27, 30
- tools, servicing 27, 32
- Torx T15 screwdriver 27, 32
- troubleshooting without diagnostics 53

U

- using Computer Setup Utilities 73

V

- ventilation, proper 27, 30
- video bar components 8

W

- Windows
 - backup 102
 - recovery media 102
 - system restore point 102
- Windows tools, using 102
- wireless antennas
 - removal and replacement 51
- WLAN module
 - removal and replacement 42