

User Guide

SUMMARY

This guide provides information about components, network connection, power management, security, backing up, and more.

Legal information

© Copyright 2022 HP Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. USB Type-C and USB-C are registered trademarks of USB Implementers Forum. DisplayPort[™], the DisplayPort[™] logo, and VESA[®] are trademarks owned by the Video Electronics Standards Association (VESA) in the United States and other countries.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: February 2022

Document Part Number: M89543-001

Product Notice

This guide describes features that are common to most products. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees may apply and additional requirements may apply over time for updates. See http://www.windows.com. If your product ships with Windows in S Mode: Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows may not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance may vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at Windows.com/SmodeFAQ.

To access the latest user guides, go to <u>http://www.hp.com/support</u>, and follow the instructions to find your product. Then select **Manuals**.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

About this guide

This guide provides basic information for using and upgrading this product.

- MARNING! Indicates a hazardous situation that, if not avoided, could result in serious injury or death.
- **CAUTION:** Indicates a hazardous situation that, if not avoided, **could** result in minor or moderate injury.
- IMPORTANT: Indicates information considered important but not hazard-related (for example, messages related to property damage). Warns the user that failure to follow a procedure exactly as described could result in loss of data or in damage to hardware or software. Also contains essential information to explain a concept or to complete a task.
- **NOTE:** Contains additional information to emphasize or supplement important points of the main text.
- $\frac{1}{2}$ TIP: Provides helpful hints for completing a task.

Table of contents

1 Locating HP resources	1
Product information	1
Support	1
Product documentation	2
Product diagnostics	3
Product updates	3
2 Computer features	4
HP Presence configuration features	4
Mini conferencing PC front panel components	4
Mini conferencing PC rear panel components	5
Serial number location	6
Control Plus Center components	6
Control Center components	7
Hub components	8
Satellite microphone component	9
Camera components	10
Video bar components	11
Cable management	11
LED status indications	
3 Setup	13
Removing the Control Center bottom panel	13
Removing the Control Plus Center bottom panel	13
Mounting the HP Presence mini conferencing PC	14
Mounting the HP Presence mini conferencing PC to a large format display	14
Mounting the mini conferencing PC to a conference room table	17
Cable routing configurations	
Cable matrix for HP Presence mini conferencing PC, Control Center, and notebook PC	
Cable matrix for HP Presence mini conferencing PC, Control Center, and camera	
Cable matrix for HP Presence mini conferencing PC, Control Center, and video bar	
Cable matrix for HP Presence mini conferencing PC, hub, and Control Center	
Cable matrix for HP Presence mini conferencing PC and Control Plus Center Cable matrix for HP Presence mini conferencing PC, Control Plus Center, and camera	
Cable matrix for HP Presence mini conferencing PC, Control Plus Center, and Camera	
Cable matrix for HP Presence mini conferencing PC, Control Plus Center, and video bai	
microphones, and video bar	23

HP Presence Smart Set Up app	23
Using an optional security lock	25
Security cable lock	
Padlock	25
4 Backing up, restoring, and recovering	26
Backing up information and creating recovery media	26
Using Windows tools for backing up	
Using the HP Cloud Recovery Download Tool to create recovery media (select products only)	26
Restoring and recovering your system	27
Creating a system restore	27
Restoring and recovery methods	
Recovering using HP Recovery media	
Changing the computer boot order	28
5 Using HP PC Hardware Diagnostics	29
Using HP PC Hardware Diagnostics Windows (select products only)	29
Using an HP PC Hardware Diagnostics Windows hardware failure ID code	29
Accessing HP PC Hardware Diagnostics Windows	
Accessing HP PC Hardware Diagnostics Windows from HP Help and Support (select products only)	
Accessing HP PC Hardware Diagnostics Windows from Support Assistant	
Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)	
Downloading HP PC Hardware Diagnostics Windows Downloading the latest HP PC Hardware Diagnostics Windows version from HP	
Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store	
Downloading HP Hardware Diagnostics Windows by product name or number (select products only)	
Installing HP PC Hardware Diagnostics Windows	
Using HP PC Hardware Diagnostics UEFI	31
Using an HP PC Hardware Diagnostics UEFI hardware failure ID code	
Starting HP PC Hardware Diagnostics UEFI	32
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive	
Downloading the latest HP PC Hardware Diagnostics UEFI version	
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)	33
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)	
Downloading Remote HP PC Hardware Diagnostics UEFI	
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version	
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number Customizing Remote HP PC Hardware Diagnostics UEFI settings	
6 Specifications	
Input power	
Operating environment	35
7 Computer operating guidelines, routine care, and shipping preparation	37
Operating guidelines and routine care	37
Cleaning your computer	38
Removing dirt and debris from your computer	
Cleaning your computer with a disinfectant	38

Shipping preparation	
8 Electrostatic discharge	41
9 Accessibility	42
HP and accessibility	
Finding the technology tools you need	
The HP commitment	
International Association of Accessibility Professionals (IAAP)	
Finding the best assistive technology	
Assessing your needs	
Accessibility for HP products	
Standards and legislation	
Standards	
Mandate 376 – EN 301 549	
Web Content Accessibility Guidelines (WCAG)	
Legislation and regulations	45
Useful accessibility resources and links	45
Organizations	45
Educational institutions	45
Other disability resources	
HP links	
Contacting support	46
ndex	47

1 Locating HP resources

Read this chapter to learn about where to find additional HP resources.

Product information

To locate resources that provide product details, how-to information, and more, use this table.

Table 1-1	Where to	find	nroduct i	nformation
	WHELE LU	IIIIu	ρισάμει	mormation

Торіс	Location
Technical specifications	To find the QuickSpecs for your product, go to http://www.hp.com/go/quickspecs , and then select the link. Select Search all QuickSpecs, type your model name in the search box, and then select Go.
Regulatory, Safety, and Environmental Notices	See the <i>Regulatory, Safety, and Environmental Notices</i> for product regulatory information. You can also see the Agency/Environmental label.
	To access this guide:
	 Type HP Documentation in the taskbar search box, and then select HP Documentation.
System board	A diagram of the system board is located on the inside of the chassis. Additional information is located in the computer <i>Maintenance and Service Guide</i> on the web at http://www.hp.com/support . Follow the instructions to find your product, and then select Manuals .
Serial number, Agency/Environmental, and operating system labels	The serial number, Agency/Environmental, and operating system labels might be on the bottom of the computer, on the rear panel of the computer, or under the service door.

Support

To locate resources that provide support and warranty information, use this table.

Table 1-2	Where to find support information
-----------	-----------------------------------

Торіс	Location
Product support	For HP support, go to http://www.hp.com/support .
	Here you can access the following types of support:
	Online chat with an HP technician
	Support telephone numbers
	HP service center locations

Table 1-2 Where to find support information (continued)

Торіс	Location		
Warranty information	To access this document:		
	 Type HP Documentation in the taskbar search box, and then select HP Documentation. 		
	– or –		
	Go to http://www.hp.com/go/orderdocuments .		
	IMPORTANT: You must be connected to the internet to access the latest version of the warranty.		
	You can find your HP Limited Warranty located with the user guides on your product. The warranty might be on a CD or DVD provided in the box. In some countries or regions, HP might provide a printed warranty in the box. For countries or regions where the warrant is not provided in printed format, you can request a copy from http://www.hp.com/go/orderdocuments . For products purchased in Asia Pacific, you can write to HP at POD, PO Box 161, Kitchener Road Post Office, Singapore 912006. Include your name, phone number, address, and product name.		

Product documentation

To locate resources that provide product documentation, use this table.

Table 1-3	Where to	find product	documentation
-----------	----------	--------------	---------------

Торіс	Location		
HP user documentation, white papers, and third-party documentation	User documentation is located on your hard drive. Type HP Documentation in the taskbar search box, and then select HP Documentation . For the latest online documentation, go to http://www.hp.com/support and follow the instructions to find your product. Then select Manuals . The documentation includes this user guide and the <i>Maintenance and Service Guide</i> .		
Product notifications	Subscriber's Choice is an HP program that allows you to sign up to receive driver and software alerts, proactive change notifications (PCNs), the HP newsletter, customer advisories, and more. Sign up at https://h41369.www4.hp.com/ .		
Technical specifications	The Product Bulletin application contains QuickSpecs for HP computers. QuickSpecs include information about the operating system, power supply, memory, processor, and many other system components. To access the QuickSpecs, go to http://www.hp.com/go , and many other system components. To access the QuickSpecs, go to http://www.hp.com/go , and many other system components. To access the QuickSpecs, go to http://www.hp.com/go , and many other system components. To access the QuickSpecs, go to http://www.hp.com/go , and many other system components. To access the QuickSpecs, go to http://www.hp.com/go , and access the QuickSpecs, go to http://www.hp.com/go , and access the QuickSpecs, go to http://www.hp.com/go , and access the QuickSpecs, go to http://www.hp.com/go , and access the QuickSpecs, go to http://www.hp.com/go , and access the QuickSpecs, go to http://www.hp.com/go , and access the QuickSpecs/.		

Table 1-3	Where to find product documentation	(continued)
-----------	-------------------------------------	-------------

Торіс	Location	
Bulletins and Notices	To find	d advisories, bulletins, and notices:
	1. 0	Go to <u>http://www.hp.com/support</u> .
	2. F	Follow the instructions to find your product.
	3. S	Select Advisories or Bulletins and Notices.

Product diagnostics

To locate resources that provide product diagnostics tools, use this table.

Торіс	Location
Diagnostics tools	For additional information, see the computer <i>Maintenance and Service Guide</i> at http://www.hp.com/support . Follow the instructions to find your product, and then select Manuals .
Audible beep and light code definitions	See the computer <i>Maintenance and Service Guide</i> at http://www.hp.com/support . Follow the instructions to find your product, and then select Manuals .
POST error codes	See the computer <i>Maintenance and Service Guide</i> at http://www.hp.com/support . Follow the instructions to find your product, and then select Manuals .

Product updates

To locate resources that provide product updates, use this table.

Table 1-5	Where	to find	product	updates
-----------	-------	---------	---------	---------

Торіс	Location
Driver and BIOS updates	Go to http://www.hp.com/support and select Software and Drivers to verify that you have the latest drivers for the computer.
Operating systems	For information about Windows® operating systems, go to http://www.support.microsoft.com .

2 Computer features

This chapter provides you with an overview of your computer's features.

HP Presence configuration features

To identify a typical computer configuration, read this section. Features vary depending on the model. For support assistance and to learn more about the hardware and software installed on your computer model, run the HP Support Assistant utility.



Mini conferencing PC front panel components

To identify the front panel components, use this illustration and table.

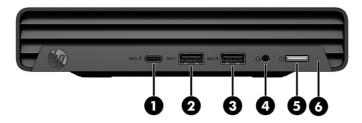


Table 2-1	Identifying the front panel components
-----------	--

Fro	Front panel components					
1	ss ⊂, ł	USB Type-C [®] SuperSpeed 10 Gbps port with HP Sleep and Charge	4	Q	3.5 mm jack (not used)	
2	SS€	USB SuperSpeed 10 Gbps port	5		Power button	
3	ss⇔∮	USB SuperSpeed 5 Gbps port with HP Sleep and Charge	6	99	Drive light	

Front panel components

NOTE: The combo jack supports headphones, line output devices, microphones, line input devices, or CTIA-style headsets.

Mini conferencing PC rear panel components

To identify the rear panel components, use this illustration and table.

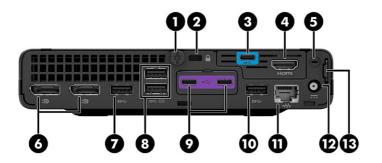


Table 2-2 Identifying the rear panel components

Rea	r panel com	ponents			
1		Thumbscrew	8	ss⇔	USB SuperSpeed ports (2)*
2		Security cable slot	9	•	Dual HP Presence control ports
3	ss⇔	Primary camera or video bar connector or USB Type-C Super Speed 5 Gbps port	10	ss⋲→	USB SuperSpeed 10 Gbps port
4	ноті	HDMI 2.0a connection for high-resolution sharing/guest mode through multi-port adapter	11	•***	RJ-45 (network) jack
5		External antenna	12	Ą	Power connector
6	₽₽	DisplayPort™ connectors (2)	13		Padlock loop
7	ss⇔	USB SuperSpeed 5 Gbps port			

Rear panel components

*Support wake from Hibernation state or when turned off with a keyboard or mouse connected


Serial number location

Each mini conferencing PC has a unique serial number and a product ID number that are located on the exterior of the computer. Keep these numbers available when contacting customer service for assistance.



Control Plus Center components

To identify the Control Plus Center components, use this illustration and table.

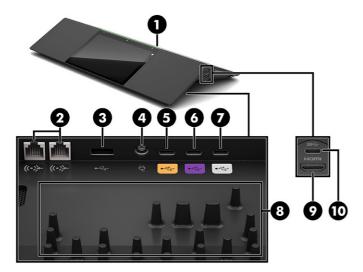

Con	Control Plus Center components					
1		LED room status light	6	• द •	HP Presence Control Center daisy chain port	
2	((•)≯-	RJ-11 jacks for connection to satellite microphones (2)	7	•	HP Presence multi-port adapter port for guest mode	
3	•	USB SuperSpeed 5 Gbps port	8		Cable management pins	

Table 2-3	Identifying the Control Plus Center components	(continued)
-----------	--	-------------

Con	Control Plus Center components					
4	Ą	Power connector	9	нәті	Side input HDMI port	
5	•	HP Presence control port	10	SS←	Side input USB Type-C port	

Control Center components

To identify the Control Center components, use this illustration and table.

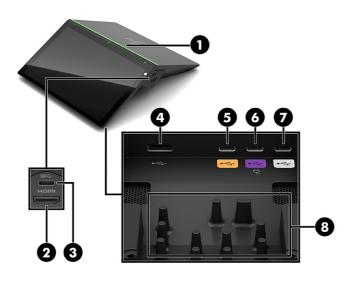


 Table 2-4
 Identifying the Control Center components

Con	Control Center components				
1		LED room status light	5	•	HP Presence control port
2	наш	Side input HDMI port	6	€€ţ	Device power port
3	ss⇔	Side input USB Type-C port	7	•	HP Presence multi-port adapter port for guest mode

Table 2-4 Identifying the Control Center components (continued)



Hub components

To identify the hub components, use this illustration and table.

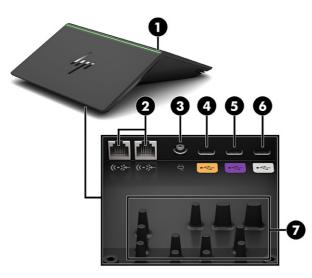


Table 2-5Identifying the hub components

Hub components							
1		LED room status light	5	•	HP Presence Control Center daisy chain port		
2	((•) }+	RJ-11 jacks for connection to satellite microphones (2)	6	•	HP Presence multi-port adapter port for guest mode		
3	Ą	Power connector	7		Cable management pins		

Table 2-5 Identifying the hub components (continued)



Satellite microphone component

To identify the satellite microphone components, use this illustration and table. You can use the microphone with the premium control module and the hub.

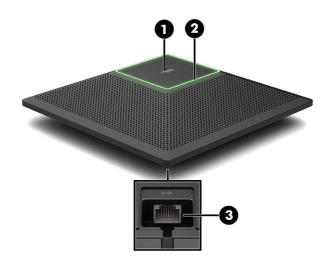


 Table 2-6
 Identifying the satellite microphone component

Satellite microphone component					
1	Touch control mute switch	3	RJ-11 jack		
2	LED status light*				

Table 2-6 Identifying the satellite microphone component (continued)

Satellite microphone component

*Blinks green when connected

Camera components

To identify the camera components, use this illustration and table.



Table 2-7 Identifying the camera components

Camera co	nponents		
1	Camera	3 USB Type-C connector	

Table 2-7	Identifying the camera components	(continued)
-----------	-----------------------------------	-------------

Camera co	mponents			
2	Status light			

Video bar components

To identify the video bar components, use this illustration and table.

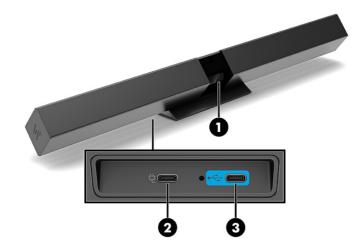


Table 2-8 Identifying the video bar components

Video	Video bar components						
1		Camera	3	•	USB Type-C port		
2	Ą	USB Type-C power connector port					

Cable management

The premium control module, control module, and hub include a cable management feature. When connecting cables to these components, be sure to route the cables with bends through the cable routing pins.

The following illustration provides an example of proper cable routing.



LED status indications

Use the following table to determine that status that LED lights identify on the control modules and hub.

Device state	LED ring	
Connected to host	Off	
Disconnected from host or not connected to valid power source*	Blinks red	
Ringing	Blinks green	
Active call	Solid green	
Call on mute	Solid red	
Call on hold	Blinks green slowly	
Call on hold and mute	Blinks red slowly	
Clean screen**	Fading blue	
Volume	White	
	Moves from center outward for volume up	
	 Moves toward center for volume down 	

*Check that the USB Type-C cable has a purple-to-orange connection. Check AC adapter connection.

**The device is in clean mode and the touch screen and haptic controls are disabled.


3 Setup

Use this information to help you set up the computer.

Removing the Control Center bottom panel

A bottom panel covers the Control Center ports. Use this procedure to remove the panel.

- 1. Position the Control Center upside down.
- 2. Use the included Torx T10 wrench to loosen the two captive Torx screws (1) from the bottom panel.
- 3. Remove the panel (2).

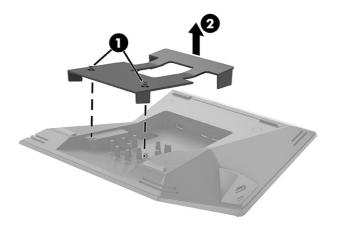


4. To install the panel, position the panel on the bottom of the Control Center and tighten the screws.

Removing the Control Plus Center bottom panel

A bottom panel covers the Control Plus Center ports. Use this procedure to remove the panel.

- 1. Position the Control Plus Center upside down.
- 2. Use the included Torx T10 wrench to loosen the two captive Torx screws (1) from the bottom panel.

3. Remove the panel **(2)**.

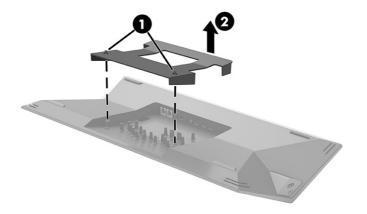

4. To install the panel, position the panel on the bottom of the Control Plus Center and tighten the screws.

Mounting the HP Presence mini conferencing PC


Use these procedures to mount the HP Presence mini conferencing PC in different configurations.

- **NOTE:** This apparatus is intended to be supported by a UL or CSA Listed wall-mount bracket.
- ▲ CAUTION: This computer supports the VESA® industry standard 100 mm mounting holes. To attach a thirdparty mounting solution to the computer, use the screws that are supplied with the solution. Be sure to verify that the manufacturer's mounting solution is compliant with the VESA standard and is rated to support the weight of the computer. For best performance, use the power cord and other cables provided with the computer.


Mounting the HP Presence mini conferencing PC to a large format display

You can mount the HP Presence mini conferencing PC and power supply to the back of a large format display.


1. Place the computer mounting sleeve on the back of a large format display (1), and then secure with four screws (2).

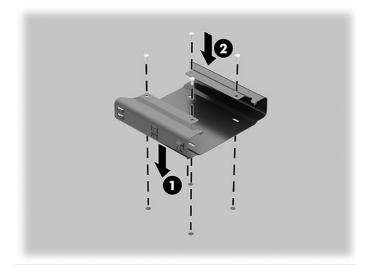


2. Insert the power supply bracket into the side of the display sleeve (1), and then slide the power supply bracket to lock it in place (2).

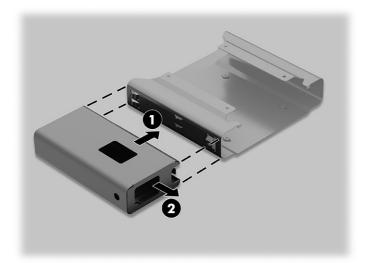


3. Install the screw into the power supply bracket.

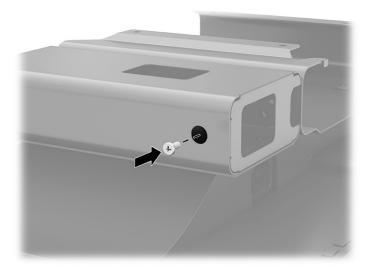


4. Insert the HP Presence mini conferencing PC into the display mounting sleeve (1), and then install the four screws (2).

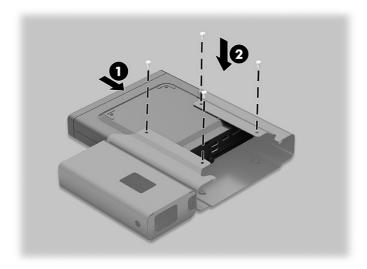

5. Remove the cover from the power supply bracket.

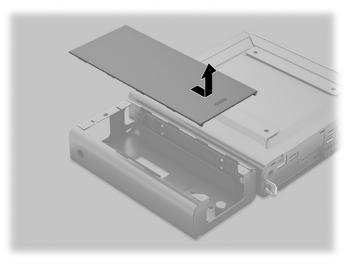


6. Insert the power supply into the power supply bracket.

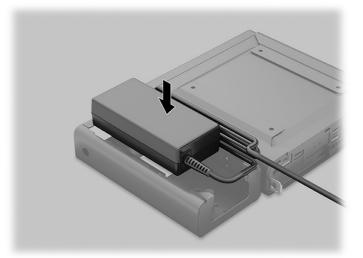


Mounting the mini conferencing PC to a conference room table

You can mount the mini conferencing PC under a conference room table.


- 1. Attach the sleeve to the underside of a conference room table.
- **NOTE:** You can also install the mounting sleeve on a wall with a quick release.

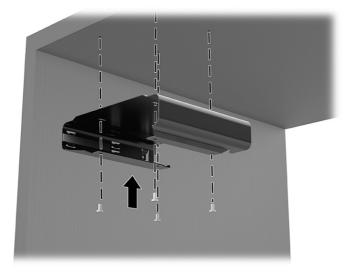

2. Insert the power supply bracket into the side of the display sleeve (1), and then slide the power supply bracket to lock it in place (2).

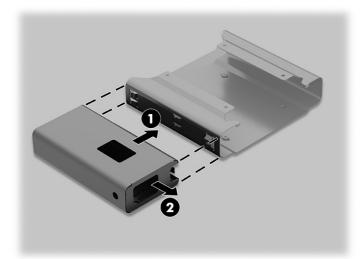


3. Install the screw into the power supply bracket.

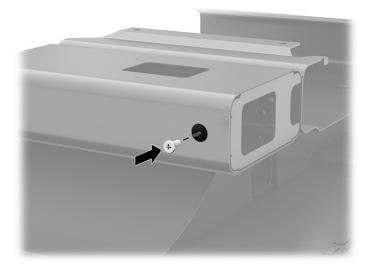

4. Install the port cover onto the back of the Mini Conferencing PC by inserting the cover into the slots in the back of the PC, and then sliding the cover into place.



5. Slide the computer all the way into the sleeve (1), until it is stopped by the tabs on the rear of the sleeve. Use screws to attach the computer to the sleeve (2).

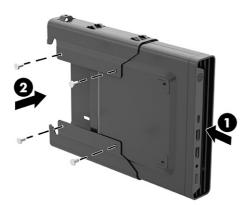


Cable routing configurations

Use these images to determine proper cable routing for your conferencing configuration.

Cable matrix for HP Presence mini conferencing PC, Control Center, and notebook PC


Use this illustration to determine proper cabling between the HP Presence mini conferencing PC, Control Center, and notebook PC.

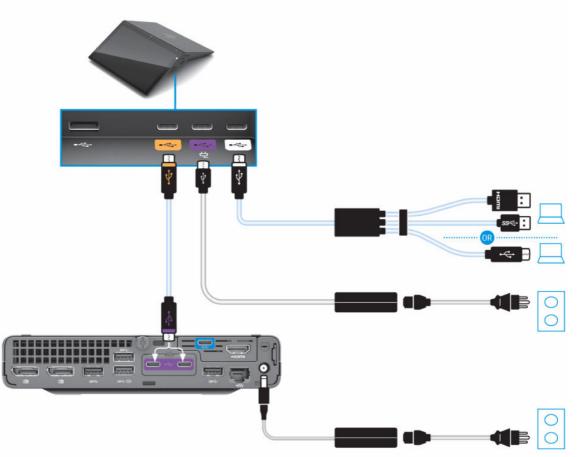

20 Chapter 3 Setup


Cable matrix for HP Presence mini conferencing PC, Control Center, and camera

Center, and camera.

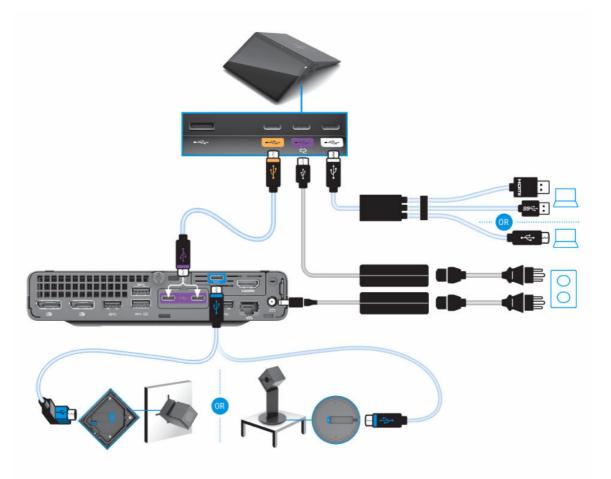


Cable matrix for HP Presence mini conferencing PC, Control Center, and video bar

Use this illustration to determine proper cabling between the HP Presence mini conferencing PC, Control Center, and video bar.

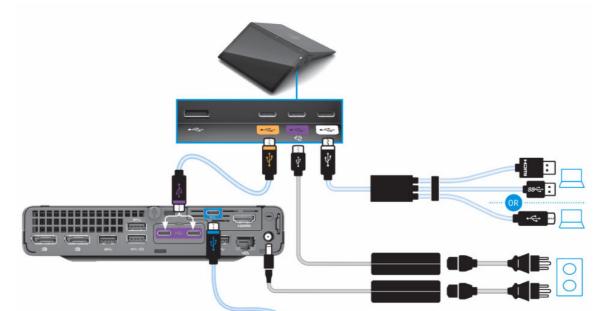


Cable matrix for HP Presence mini conferencing PC, Control Center, and video bar 21

module.

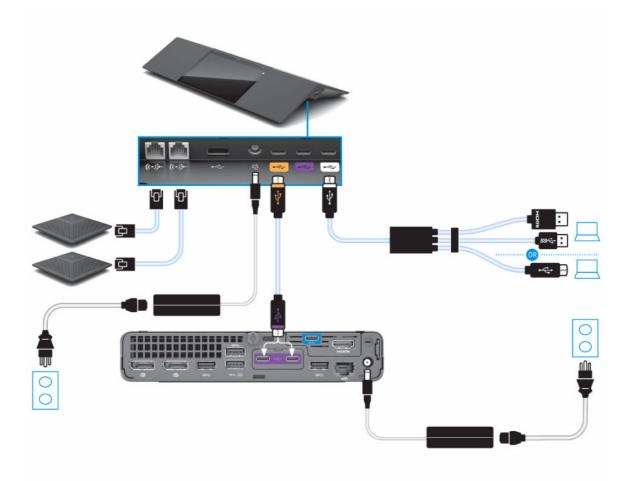


Cable matrix for HP Presence mini conferencing PC, Control Plus Center, and camera

Use this illustration to determine proper cabling between the mini conferencing PC, premium control module, and camera.

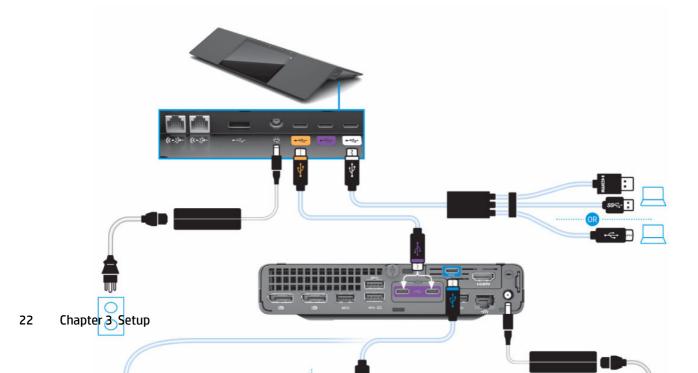


Center, and video bar.

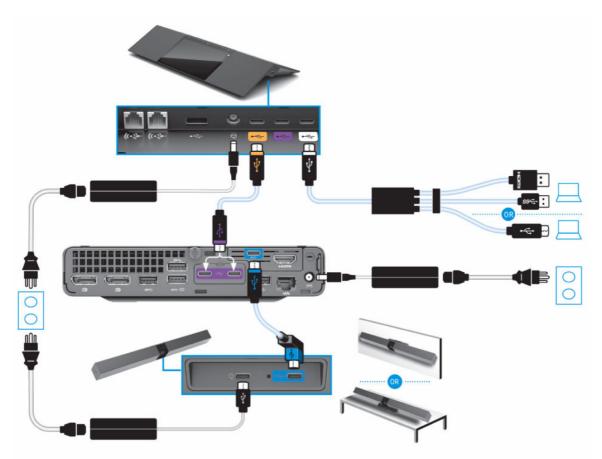

Cable matrix for HP Presence mini conferencing PC, Control Plus Center, Control Center, satellite microphones, and video bar

Use this illustration to determine proper cabling between the HP Conferencing mini conferencing PC, Control Plus Center, and video bar.

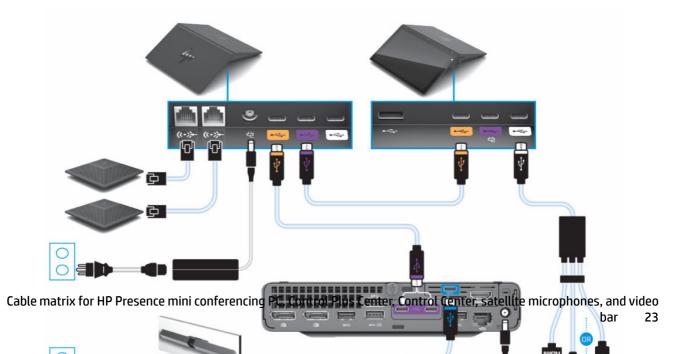

the startup screen.



The HP Presence Smart Set up app allows you to configure and use your system.

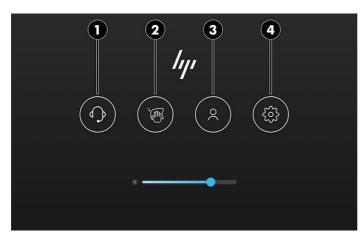


 Table 3-1
 Identifying the icons in the HP Presence Smart Set Up app

HP	Presence Smart Set Up ap	р р			
1	HP Room Assistant	Report room issues	3	Guest mode for PC	Host any meeting with your notebook

HP Presence Smart Set Up app						
2	Screen clean	Disable screen for 10 seconds	4	HP Presence settings	HP Presence device settings	

Using an optional security lock

You can use different types of locks (purchased separately) to secure the computer.


Security cable lock

You can secure the mini conferencing PC with a security cable lock.



Padlock

You can secure the mini conferencing PC with a padlock.

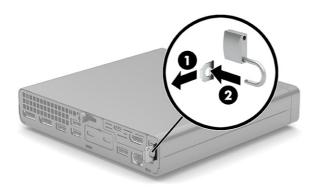

4 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.

- **IMPORTANT:** If you will be performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.
- IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB drive or using online tools.

- **IMPORTANT:** Windows is the only option that allows you to back up your personal information. Schedule regular backups to avoid information loss.
- **NOTE:** If computer storage is 32 GB or less, Microsoft[®] System Restore is disabled by default.

Using the HP Cloud Recovery Download Tool to create recovery media (select products only)

You can use the HP Cloud Recovery Download Tool to create HP Recovery media on a bootable USB flash drive.

For details:

- Go to <u>http://www.hp.com/support</u>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have.
- NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to http://www.hp.com/support, select your country or region, and then follow the on-screen instructions.
- IMPORTANT: HP recommends that you follow the <u>Restoring and recovery methods on page 27</u> to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your

machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the <u>Restoring and recovery methods on page</u> 27.

Creating a system restore

System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.

- 1. Run a Microsoft System Restore.
- 2. Run Reset this PC.
- NOTE: The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.
- 3. Recover using HP Recovery media. For more information, see <u>Recovering using HP Recovery media on</u> page 27.

For more information about the first two methods, see the Get Help app:

Select the Start button, select the Get Help app, and then enter the task you want to perform.

NOTE: You must be connected to the internet to access the Get Help app.

Recovering using HP Recovery media

You can use HP Recovery media to recover the original operating system and software programs that were installed at the factory. On select products, it can be created on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see <u>Using the HP Cloud Recovery Download Tool to create recovery media (select products only) on</u> page 26.

NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to http://www.hp.com/support, select your country or region, and then follow the on-screen instructions.

To recover your system:

Insert the HP Recovery media, and then restart the computer.

NOTE: HP recommends that you follow the <u>Restoring and recovery methods on page 27</u> to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Changing the computer boot order

If your computer does not restart using the HP Recovery media, you can change the computer boot order, the order of devices listed in BIOS for startup information. You can select an optical drive or a USB flash drive, depending on the location of your HP Recovery media.

IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

- 1. Insert the HP Recovery media.
- 2. Access the system **Startup** menu.
 - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press esc, and then press f9 for boot options.
 - For tablets without keyboards, turn on or restart the tablet, quickly press and hold the volume up button, and then select **f9**.

– or –

Turn on or restart the tablet, quickly press and hold the volume down button, and then select **f9**.

3. Select the optical drive or USB flash drive from which you want to boot, and then follow the on-screen instructions.

5 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, first you must download and install it. To download HP PC Hardware Diagnostics Windows, see <u>Downloading HP PC Hardware Diagnostics</u> <u>Windows on page 30</u>.

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

- You have several options after you receive a failure ID:
 - Select Next to open the Event Automation Service (EAS) page, where you can log the case.

– or –

• Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.

– or –

• Select the box next to the 24-digit failure ID to copy your failure code and send it to support.

Accessing HP PC Hardware Diagnostics Windows

After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Help and Support, HP Support Assistant, or the Start menu.

Accessing HP PC Hardware Diagnostics Windows from HP Help and Support (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Help and Support.

- 1. Select the Start button, and then select HP Help and Support.
- 2. Select HP PC Hardware Diagnostics Windows.

- **3.** When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.
- **NOTE:** To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from Support Assistant

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant.

1. Type support in the taskbar search box, and then select the HP Support Assistant app.

– or –

Select the question mark icon in the taskbar.

- 2. Select Troubleshooting and fixes.
- 3. Select **Diagnostics**, and then select **HP PC Hardware Diagnostics Windows**.
- 4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.
- **NOTE:** To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu.

- 1. Select the **Start** button, and then select **All apps** (select products only).
- 2. Select HP PC Hardware Diagnostics Windows.
- **3.** When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.
- **NOTE:** To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps.

- 1. Go to <u>http://www.hp.com/go/techcenter/pcdiags</u>. The HP PC Diagnostics home page is displayed.
- 2. Select **Download HP Diagnostics Windows**, and then select the specific Windows diagnostics version to download to your computer or a USB flash drive.

The tool downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store

You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store.

- 1. Select the Microsoft Store app on your desktop or enter Microsoft Store in the taskbar search box.
- 2. Enter HP PC Hardware Diagnostics Windows in the Microsoft Store search box.
- **3.** Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.

- NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.
 - 1. Go to <u>http://www.hp.com/support</u>.
 - 2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
 - 3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

NOTE: For Windows 10 S computers, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see <u>Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 32</u>.

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem:

Select Contact HP, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.

– or –

Contact support, and provide the failure ID code.

- NOTE: To start diagnostics on a convertible computer, your computer must be in notebook mode, and you must use the attached keyboard.
- **NOTE:** If you need to stop a diagnostic test, press esc.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

- 1. Turn on or restart the computer, and quickly press esc.
- 2. Press f2.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive
- NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see <u>Downloading the latest HP PC Hardware Diagnostics UEFI version on page 32</u>.
- b. Hard drive
- c. BIOS
- 3. When the diagnostic tool opens, select a language, select the type of diagnostic test you want to run, and then follow the on-screen instructions.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.
- The hard drive is damaged.
- NOTE: The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow this procedure.

1. Go to <u>http://www.hp.com/go/techcenter/pcdiags</u>. The HP PC Diagnostics home page is displayed.

2. Select **Download HP Diagnostics UEFI**, and then select **Run**.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.

- NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.
 - 1. Go to <u>http://www.hp.com/support</u>.
 - 2. Enter the product name or number, select your computer, and then select your operating system.
 - In the Diagnostics section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then execute the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to http://www.hp.com/go/techcenter/pcdiags, and then select **Find out more**.

Downloading Remote HP PC Hardware Diagnostics UEFI

HP Remote PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive.

- 1. Go to http://www.hp.com/go/techcenter/pcdiags. The HP PC Diagnostics home page is displayed.
- 2. Select **Download Remote Diagnostics**, and then select **Run**.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download HP Remote PC Hardware Diagnostics UEFI by product name or number.

- NOTE: For some products, you might have to download the software by using the product name or number.
 - 1. Go to http://www.hp.com/support.
 - 2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.

3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage (such as a hard drive or USB flash drive) to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

- 1. Turn on or restart the computer, and when the HP logo appears, press f10 to enter Computer Setup.
- 2. Select Advanced, and then select Settings.
- **3.** Make your customization selections.
- 4. Select **Main**, and then **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

6 Specifications

The input power ratings and operating specifications provide helpful information.

Input power

The power information in this section might be helpful if you plan to travel internationally with the computer.

The computer operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100 V–240 V, 50 Hz–60 Hz. Although the computer can be powered from a standalone DC power source, it should be powered only with an AC adapter or a DC power source supplied and approved by HP for use with this computer.

The computer can operate on DC power within one or more of the following specifications. The voltage and current for your computer is located on the regulatory label.

Table 6-1 DC power specifications

Input Power	Rating
Mini conferencing PC	20 V dc @ 3.25 A / 19.5 V dc @ 4.62 A
Control module	20 V dc @ 3.25 A
Control module no audio	20 V dc @ 3.25 A
Premium control module	19.5 V dc @ 4.62 A
Hub	19.5 V dc @ 4.62 A
Camera	5 V dc @ 1 A
Video bar	20 V dc @ 3.25 A
Satellite microphones	5 V dc @ 1 A

NOTE: This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.

Operating environment

Use the operating specifications for helpful information when you travel with or store your computer.

Factor	Metric	U.S.	
Temperature			
Operating*	5°C to 35°C	41°F to 95°F	
Nonoperating	–20°C to 60°C	-4°F to 140°F	
Relative humidity (nonconder	nsing)		

Table 6-2	Operating environment specifications	
-----------	--------------------------------------	--

Table 6-2 Operating environment specifications (continued)

Factor	Metric	U.S.
Operating	10% to 90%	10% to 90%
Nonoperating	5% to 95%	5% to 95%
Maximum altitude (unpressuriz	ed)	
Operating	–15 m to 3,048 m	–50 ft to 10,000 ft
Nonoperating	–15 m to 12,192 m	–50 ft to 40,000 ft
*HP Presence detection 5°C to 2	25°C	

7 Computer operating guidelines, routine care, and shipping preparation

Follow these guidelines to ensure the best performance and useful life of your computer.

Operating guidelines and routine care

HP has developed guidelines to help you properly set up and care for the computer and monitor.

- Keep the computer away from excessive moisture, direct sunlight, and extreme heat and cold.
- Operate the computer on a sturdy, level surface. Leave a 10.2 cm (4 inch) clearance on all vented sides of the computer and above the monitor to permit the required airflow.
- Never restrict the airflow into the computer by blocking any vents or air intakes. Do not place the keyboard, with the keyboard feet down, directly against the front of the desktop unit because this also restricts airflow.
- Never operate the computer with the access panel or any of the expansion card slot covers removed.
- Do not stack computers on top of each other or place computers so near each other that they are subject to each other's recirculated or preheated air.
- To operate a computer within a separate enclosure, intake and exhaust ventilation must be provided on the enclosure, and the previous operating guidelines still apply.
- Keep liquids away from the computer and keyboard.
- Never cover the ventilation slots on the monitor with any type of material.
- Install or enable power management functions of the operating system or other software, including sleep states.
- Turn off the computer before you do either of the following tasks:
 - Wipe the exterior of the computer with a soft, damp cloth as needed. Cleaning products might
 discolor or damage the finish. See <u>Removing dirt and debris from your computer on page 38</u> for the
 recommended steps to clean the high-touch, external surfaces on your computer. After you remove
 the dirt and debris, you can also clean the surfaces with a disinfectant. See <u>Cleaning your computer</u>
 with a disinfectant on page 38 for guidelines to help prevent the spread of harmful bacteria and
 viruses.

Occasionally clean the air vents on all vented sides of the computer. Lint, dust, and other foreign
matter can block the vents and limit the airflow.

Cleaning your computer

Cleaning your computer regularly removes dirt and debris so that your device continues to operate at its best. Use the following information to safely clean the external surfaces of your computer.

Removing dirt and debris from your computer

Here are the recommended steps to clean dirt and debris from your computer.

- 1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
- 2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.
- ▲ CAUTION: To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.
- 3. Moisten a microfiber cloth with water. The cloth should be moist, but not dripping wet.
- **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.
- 4. Wipe the exterior of the product gently with the moistened cloth.
- IMPORTANT: Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.
- 5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
- 6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
- 7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

See <u>Cleaning your computer with a disinfectant on page 38</u> for recommended steps to clean the high-touch, external surfaces on your computer to help prevent the spread of harmful bacteria and viruses.

Cleaning your computer with a disinfectant

The World Health Organization (WHO) recommends cleaning surfaces, followed by disinfection, as a best practice for preventing the spread of viral respiratory illnesses and harmful bacteria.

After cleaning the external surfaces of your computer using the steps in <u>Removing dirt and debris from your</u> <u>computer on page 38</u>, you might also choose to clean the surfaces with a disinfectant. A disinfectant that is within HP's cleaning guidelines is an alcohol solution consisting of 70% isopropyl alcohol and 30% water. This solution is also known as rubbing alcohol and is sold in most stores.

Follow these steps when disinfecting high-touch, external surfaces on your computer:

- 1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
- 2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.
- ▲ CAUTION: To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.
- 3. Moisten a microfiber cloth with a mixture of 70% isopropyl alcohol and 30% water. The cloth should be moist, but not dripping wet.
- ▲ CAUTION: Do not use any of the following chemicals or any solutions that contain them, including spray-based surface cleaners: bleach, peroxides (including hydrogen peroxide), acetone, ammonia, ethyl alcohol, methylene chloride, or any petroleum-based materials, such as gasoline, paint thinner, benzene, or toluene.
- **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.
- 4. Wipe the exterior of the product gently with the moistened cloth.
- IMPORTANT: Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.
- 5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
- 6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
- 7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

Shipping preparation

If you have to ship your computer, follow these tips to keep your equipment safe.

- 1. Back up the hard drive files to an external storage device. Be sure that the backup media is not exposed to electrical or magnetic impulses while stored or in transit.
- **NOTE:** The hard drive locks automatically when the system power is turned off.
- 2. Remove and store all removable media.
- 3. Turn off the computer and external devices.
- 4. Disconnect the power cord from the AC outlet, and then from the computer.
- 5. Disconnect the system components and external devices from their power sources and then from the computer.
- NOTE: Be sure that all boards are seated properly and secured in the board slots before shipping the computer.

6. Pack the system components and external devices in their original packing boxes or similar packaging with sufficient packing material to protect them.

8 Electrostatic discharge

Electrostatic discharge is the release of static electricity when two objects come into contact—for example, the shock you receive when you walk across the carpet and touch a metal door knob.

A discharge of static electricity from fingers or other electrostatic conductors may damage electronic components.

IMPORTANT: To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

- If removal or installation instructions direct you to unplug the computer, first be sure that it is properly grounded.
- Keep components in their electrostatic-safe containers until you are ready to install them.
- Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
- Use nonmagnetic tools.
- Before handling components, discharge static electricity by touching an unpainted metal surface.
- If you remove a component, place it in an electrostatic-safe container.

9 Accessibility

HP's goal is to design, produce, and market products, services, and information that everyone everywhere can use, either on a stand-alone basis or with appropriate third-party assistive technology (AT) devices or applications.

HP and accessibility

Because HP works to weave diversity, inclusion, and work/life into the fabric of the company, it is reflected in everything HP does. HP strives to create an inclusive environment focused on connecting people to the power of technology throughout the world.

Finding the technology tools you need

Technology can unleash your human potential. Assistive technology removes barriers and helps you create independence at home, at work, and in the community. Assistive technology helps increase, maintain, and improve the functional capabilities of electronic and information technology.

For more information, see Finding the best assistive technology on page 43.

The HP commitment

HP is committed to providing products and services that are accessible for people with disabilities. This commitment supports the company's diversity objectives and helps ensure that the benefits of technology are available to all.

The HP accessibility goal is to design, produce, and market products and services that can be effectively used by everyone, including people with disabilities, either on a stand-alone basis or with appropriate assistive devices.

To achieve that goal, this Accessibility Policy establishes seven key objectives to guide HP actions. All HP managers and employees are expected to support these objectives and their implementation in accordance with their roles and responsibilities:

- Raise the level of awareness of accessibility issues within HP, and provide employees with the training they need to design, produce, market, and deliver accessible products and services.
- Develop accessibility guidelines for products and services, and hold product development groups accountable for implementing these guidelines where competitively, technically, and economically feasible.
- Involve people with disabilities in the development of accessibility guidelines and in the design and testing of products and services.
- Document accessibility features, and make information about HP products and services publicly available in an accessible form.
- Establish relationships with leading assistive technology and solution providers.
- Support internal and external research and development that improves assistive technology relevant to HP products and services.

• Support and contribute to industry standards and guidelines for accessibility.

International Association of Accessibility Professionals (IAAP)

IAAP is a not-for-profit association focused on advancing the accessibility profession through networking, education, and certification. The objective is to help accessibility professionals develop and advance their careers and to better enable organizations to integrate accessibility into their products and infrastructure.

As a founding member, HP joined to participate with other organizations to advance the field of accessibility. This commitment supports HP's accessibility goal of designing, producing, and marketing products and services that people with disabilities can effectively use.

IAAP will make the profession strong by globally connecting individuals, students, and organizations to learn from one another. If you are interested in learning more, go to http://www.accessibilityassociation.org to join the online community, sign up for newsletters, and learn about membership options.

Finding the best assistive technology

Everyone, including people with disabilities or age-related limitations, should be able to communicate, express themselves, and connect with the world using technology. HP is committed to increasing accessibility awareness within HP and with our customers and partners.

Whether it's large fonts that are easy on the eyes, voice recognition that lets you give your hands a rest, or any other assistive technology to help with your specific situation—a variety of assistive technologies make HP products easier to use. How do you choose?

Assessing your needs

Technology can unleash your potential. Assistive technology removes barriers and helps you create independence at home, at work, and in the community. Assistive technology (AT) helps increase, maintain, and improve the functional capabilities of electronic and information technology.

You can choose from many AT products. Your AT assessment should allow you to evaluate several products, answer your questions, and facilitate your selection of the best solution for your situation. You will find that professionals qualified to do AT assessments come from many fields, including those licensed or certified in physical therapy, occupational therapy, speech/language pathology, and other areas of expertise. Others, while not certified or licensed, can also provide evaluation information. You will want to ask about the individual's experience, expertise, and fees to determine if they are appropriate for your needs.

Accessibility for HP products

These links provide information about accessibility features and assistive technology, if applicable and available in your country or region, that are included in various HP products. These resources will help you select the specific assistive technology features and products most appropriate for your situation.

- HP Aging & Accessibility: Go to http://www.hp.com, type http://www.hp.com"/>http://www.hp.com, type ht
- HP computers: For Windows products, go to http://www.hp.com/support, type Windows Accessibility Options in the Search our knowledge search box. Select the appropriate operating system in the results.
- HP Shopping, peripherals for HP products: Go to <u>http://store.hp.com</u>, select **Shop**, and then select **Monitors** or **Accessories**.

If you need additional support with the accessibility features on your HP product, see <u>Contacting support on</u> page <u>46</u>.

Additional links to external partners and suppliers that may provide additional assistance:

- <u>Microsoft Accessibility information (Windows and Microsoft Office)</u>
- Google Products accessibility information (Android, Chrome, Google Apps)

Standards and legislation

Countries worldwide are enacting regulations to improve access to products and services for persons with disabilities. These regulations are historically applicable to telecommunications products and services, PCs and printers with certain communications and video playback features, their associated user documentation, and their customer support.

Standards

The US Access Board created Section 508 of the Federal Acquisition Regulation (FAR) standards to address access to information and communication technology (ICT) for people with physical, sensory, or cognitive disabilities.

The standards contain technical criteria specific to various types of technologies, as well as performancebased requirements which focus on functional capabilities of covered products. Specific criteria cover software applications and operating systems, web-based information and applications, computers, telecommunications products, video and multimedia, and self-contained closed products.

Mandate 376 - EN 301 549

The European Union created the EN 301 549 standard within Mandate 376 as an online toolkit for public procurement of ICT products. The standard specifies the accessibility requirements applicable to ICT products and services, with a description of the test procedures and evaluation methodology for each requirement.

Web Content Accessibility Guidelines (WCAG)

Web Content Accessibility Guidelines (WCAG) from the W3C's Web Accessibility Initiative (WAI) helps web designers and developers create sites that better meet the needs of people with disabilities or age-related limitations.

WCAG advances accessibility across the full range of web content (text, images, audio, and video) and web applications. WCAG can be precisely tested, is easy to understand and use, and allows web developers flexibility for innovation. WCAG 2.0 has also been approved as <u>ISO/IEC 40500:2012</u>.

WCAG specifically addresses barriers to accessing the web experienced by people with visual, auditory, physical, cognitive, and neurological disabilities, and by older web users with accessibility needs. WCAG 2.0 provides characteristics of accessible content:

- Perceivable (for instance, by addressing text alternatives for images, captions for audio, adaptability of
 presentation, and color contrast)
- **Operable** (by addressing keyboard access, color contrast, timing of input, seizure avoidance, and navigability)
- Understandable (by addressing readability, predictability, and input assistance)

• Robust (for instance, by addressing compatibility with assistive technologies)

Legislation and regulations

Accessibility of IT and information has become an area of increasing legislative importance. These links provide information about key legislation, regulations, and standards.

- <u>United States</u>
- <u>Canada</u>
- Europe
- <u>Australia</u>

Useful accessibility resources and links

These organizations, institutions, and resources might be good sources of information about disabilities and age-related limitations.

NOTE: This is not an exhaustive list. These organizations are provided for informational purposes only. HP assumes no responsibility for information or contacts you encounter on the internet. Listing on this page does not imply endorsement by HP.

Organizations

These organizations are a few of the many that provide information about disabilities and age-related limitations.

- American Association of People with Disabilities (AAPD)
- The Association of Assistive Technology Act Programs (ATAP)
- Hearing Loss Association of America (HLAA)
- Information Technology Technical Assistance and Training Center (ITTATC)
- Lighthouse International
- National Association of the Deaf
- National Federation of the Blind
- Rehabilitation Engineering & Assistive Technology Society of North America (RESNA)
- Telecommunications for the Deaf and Hard of Hearing, Inc. (TDI)
- W3C Web Accessibility Initiative (WAI)

Educational institutions

Many educational institutions, including these examples, provide information about disabilities and agerelated limitations.

- California State University, Northridge, Center on Disabilities (CSUN)
- University of Wisconsin Madison, Trace Center

University of Minnesota computer accommodations program

Other disability resources

Many resources, including these examples, provide information about disabilities and age-related limitations.

- ADA (Americans with Disabilities Act) Technical Assistance Program
- ILO Global Business and Disability network
- EnableMart
- European Disability Forum
- Job Accommodation Network
- Microsoft Enable

HP links

These HP-specific links provide information that relates to disabilities and age-related limitations.

HP comfort and safety guide

HP public sector sales

Contacting support

HP offers technical support and assistance with accessibility options for customers with disabilities.

NOTE: Support is in English only.

- Customers who are deaf or hard of hearing who have questions about technical support or accessibility of HP products:
 - Use TRS/VRS/WebCapTel to call (877) 656-7058 Monday through Friday, 6 a.m. to 9 p.m. Mountain Time.
- Customers with other disabilities or age-related limitations who have questions about technical support or accessibility of HP products, choose one of the following options:
 - Call (888) 259-5707 Monday through Friday, 6 a.m. to 9 p.m. Mountain Time.

Index

A

accessibility 42, 43, 45, 46 accessibility needs assessment 43 assistive technology (AT) finding 43 purpose 42 AT (assistive technology) finding 43 purpose 42

B

backup, creating 26 backups 26 boot order, changing 28

С

cable management 11 cable routing 11 cabling HP Presence mini conferencing PC and Control Plus Center 21 HP Presence mini conferencing PC. Control Center. and camera 20 HP Presence mini conferencing PC, Control Center, and notebook PC 20 HP Presence mini conferencing PC, Control Center, and video bar 21 HP Presence mini conferencing PC, Control Plus Center, and camera 22 HP Presence mini conferencing PC, Control Plus Center, and video bar 22 HP Presence mini conferencing PC, Control Plus Center, Control Center, satellite microphones, and video bar 23 HP Presence mini conferencing PC, hub, and Control Center 21 camera components 10 caring for your computer 38 cleaning your computer 38

disinfecting 38 removing dirt and debris 38 computer operating guidelines 37 Control Center bottom panel, removing 13 Control Center components 7 Control Plus Center bottom panel, removing 13 Control Plus Center components 6 customer support, accessibility 46

D

diagnostics 3 documentation 2

Ε

electrostatic discharge 41

Н

HP Assistive Policy 42 **HP PC Hardware Diagnostics UEFI** downloading 32 failure ID code 31 starting 32 using 31 **HP PC Hardware Diagnostics** Windows accessing 29, 30 downloading 30, 31 failure ID code 29 installing 31 using 29 **HP** Recovery media recovery 27 HP resources 1 hub components 8

I

input power 35 International Association of Accessibility Professionals 43

L

LED flashing indications 12 locks cable lock 25 padlock 25

Μ

mini conferencing PC front panel components 4 rear panel components 5 serial number location 6 mounting fixtures, attaching 14, 17

0

operating environment 35

Ρ

product ID location 6 product information 1

R

recovery 26, 27 discs 27 media 27 USB flash drive 27 recovery media 26 creating using HP Cloud Recovery Download Tool 26 creating using Windows tools 26 **Remote HP PC Hardware Diagnostics UEFI** settings customizing 34 using 33 resources, accessibility 45 restoring 26 restoring and recovery methods 27

S

satellite microphone component 9 Section 508 accessibility standards 44 security cable lock 25 padlock 25 serial number location 6 setup, order of 13 shipping preparation 39 standards and legislation, accessibility 44 support general resources 1 HP resources 1 system restore 27 system restore point, creating 26

U

updates 3

V

ventilation guidelines 37 video bar components 11

W

Windows backup 26 recovery media 26 system restore point 26 Windows tools, using 26