ATDEC Infinite Mounting Possibilities

**Installation Guide**
AWM-W35

# Wall Channel



## COMPONENT CHECKLIST



**A**
Wall channel
(x1)



**B**
Top Cap
(x1)

**C**
Top Cap
Screws
(x2)



**D**
M6 x 50mm
Countersunk
Screw (x3)



**E**
Nylon
Anchor (x3)

## REQUIRED TOOLS

- Power Drill
- 5.5mm (1/4") Drill Bit
- 8mm (5/16") Drill Bit
- Phillips Head Screwdriver

## IMPORTANT INFORMATION

**! Please ensure this product is installed as per these installation instructions.**
! This product is compatible with Atdec modular (AWM) products.
! The manufacturer accepts no responsibility for incorrect installation.

## **1.** Install Wall Channel - Ensure all fasterners are installed

**1.1** Masonry

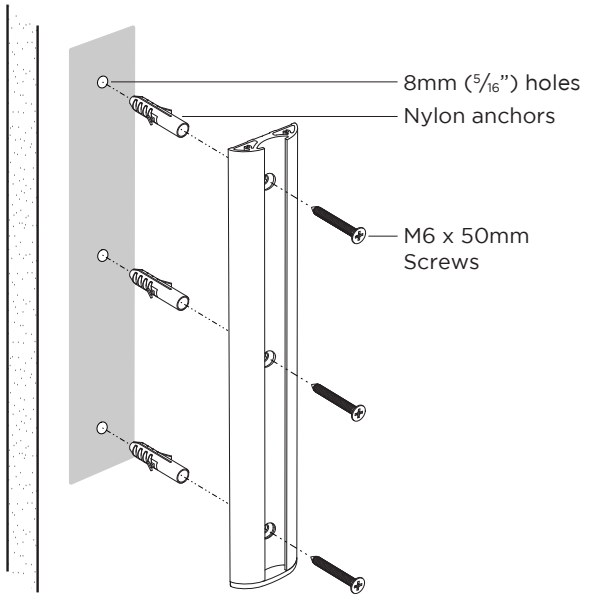


**1.2** Timber stud

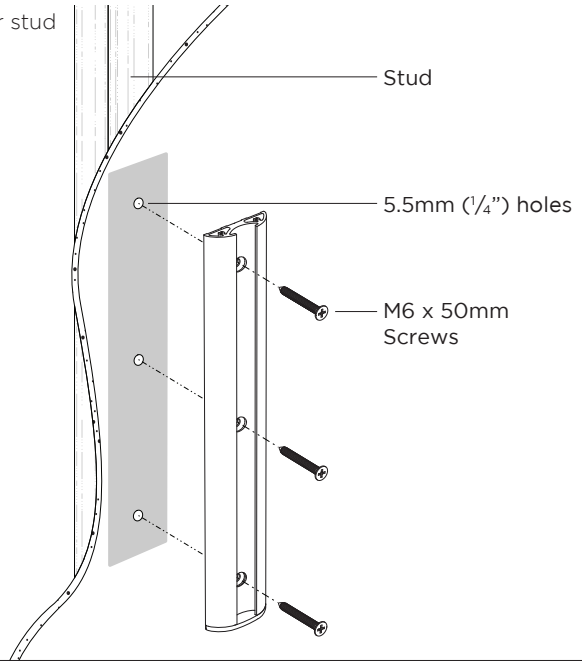


## **2.** Mount Arm Assembly

**2.1** Insert Arm Assembly into Channel

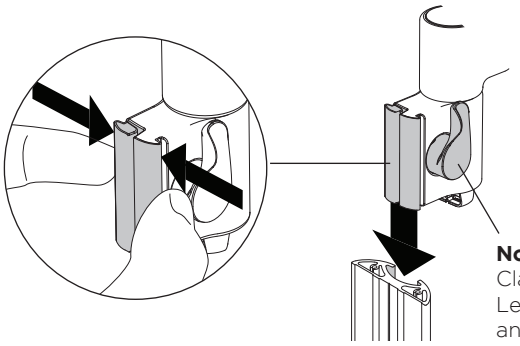


**Note:** Squeeze and hold Clamp Head before inserting into the channel on Post Assembly or Wall Channel.

Wall Channel

**2.2** Move Clamp to desired height and ensure arm is supported

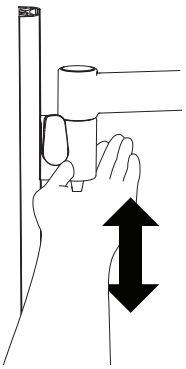

**2.3** Lock at preferred height by activating lever.

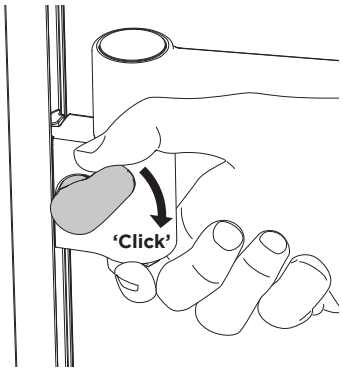


## **3.** Install top cap

**3.1** Attach Top Cap

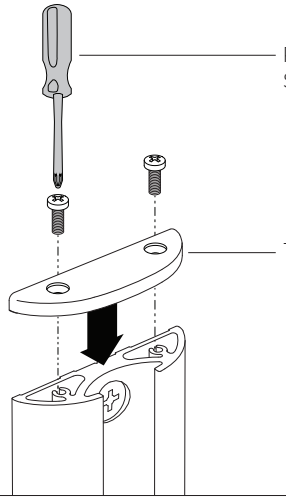


## **4.** Cable clips

**4.1** Push the cable down into the Cable Clip.

**Note:** Cable clips sold separately in packs of four.

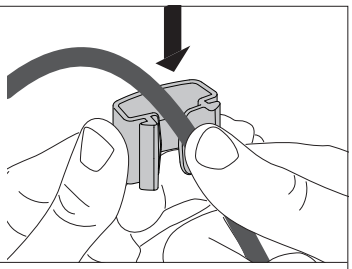

**4.2** Insert one side of the Cable Clip into the Channel on the Post assembly or Wall Channel, before pushing the other side in.

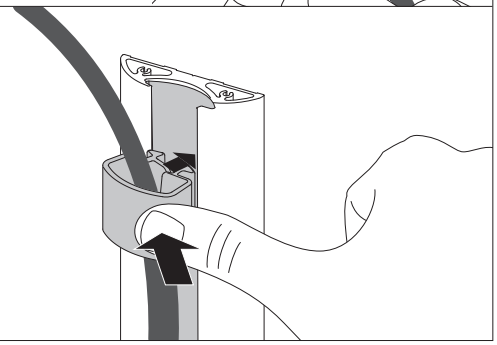

ATDEC

No portion of this document or any artwork contained herein should be reproduced in any way without the express written consent of Atdec Pty Ltd. Due to continuing product development, the manufacturer reserves the right to alter specifications without notice. ©20170221C

Please Recycle