


**1**

PUSH SLIDER FORWARD  
UNTIL BLACK "WINGS"  
ARE CENTERED IN  
CHANNEL OPENING.

**2**

LIFT SLIDER ASSEMBLY

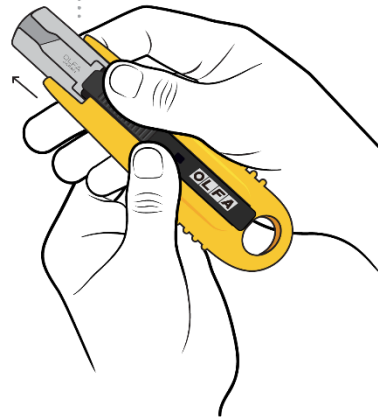


**3**

CAREFULLY REMOVE USED BLADE.  
FLIP END-TO-END FOR NEW EDGE  
OR ROTATE 180° FOR LEFT-  
HANDED USE.

DISPOSE OF FULLY USED BLADE  
PROPERLY IN SHARPS CONTAINER


**4**

INSERT BLADE INTO  
CHANNEL

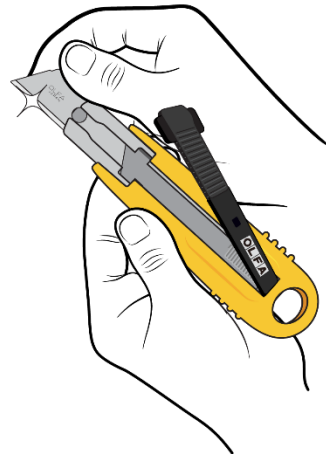

**5**

CENTER HOLE IN BLADE  
BETWEEN CHANNEL TABS.  
SLIGHTLY PULL SLIDER  
FORWARD AND DOWN TO ALIGN  
CIRCLE ON SLIDER WITH THE  
HOLE IN THE BLADE.

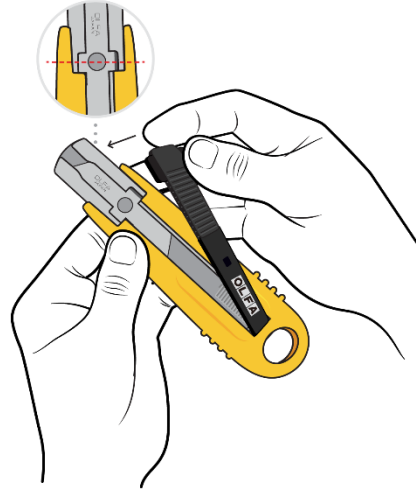**6**

NEW BLADE IS NOW READY  
FOR USE.

